2

INFOBAR

Basic Manual

au design project

Preface

Thank you for choosing INFOBAR 2.

Before using your INFOBAR 2, be sure to read the INFOBAR 2 "Basic Manual (this PDF manual)" to ensure proper use of your INFOBAR 2. After you have finished reading, keep this PDF manual and the printed manuals (Japanese) in a safe place for your reference whenever you need.

Contact the au shop or the au Customer Service Center for replacements if you lose either of these manuals.

Printed Manuals for INFOBAR 2 (Japanese)


The INFOBAR 2 comes with Basic Manual and a Manual.

INFOBAR 2 Basic Manual



Equivalent to this English PDF manual.

INFOBAR 2 Manual

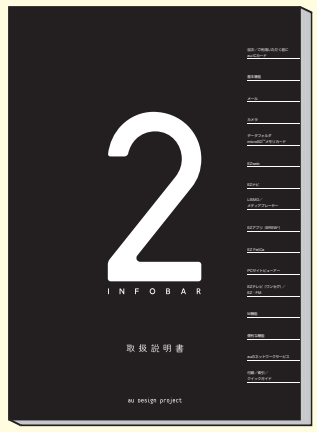

English version is not available.

The following manuals are available in the au website:

- Download site for "Basic Manual" (Japanese and English) and "Manual" (Japanese only)
  (http://www.au.kddi.com/torisetsu/index.html)
- The au online manual (Japanese) for searching by keyword
  (http://www.au.kddi.com/manual/index.html)

  The au online manual (Japanese) is also available from EZweb:

  <How to access> "au one Top" → "auお客さまサポート (au Customer Support) "→ "調べる (Information) " → "オンラインマニュアル (Online Manual) ".

Check the website of au or customer support below, for the trouble on your INFOBAR 2.

- From INFOBAR 2 : "au one Top" → "auお客さまサポート (au Customer Support) "→ "調べる (Information) " → "オンラインマニュアル (Online Manual) " → "故障診断Q&A (Malfunction Diagnosis Q&A) ".
- From PC : http://www.au.kddi.com/au_design_project/index.html

Note that the shape and typeface used in the screens of this manual may differ from those used in the actual screens, and some screens are partly omitted.

Manners for Using Cellphones

A cellphone always generates weak electric waves while its power is ON.
Be considerate of others around you to use your cellphone enjoyably and safely.


In some places, the use of cellphones is prohibited.



- Using cellphones while driving is dangerous and also forbidden by the law.
- Be sure to turn your cellphone OFF before you board airplanes. The use of cellphones onboard airplanes is forbidden by the law.

Consider where to use your cellphone and be careful of the volume of your voice.

- Do not make calls in cinemas, theaters, museums, libraries and other similar places. Turn your cellphone OFF or set it to the manner mode to prevent others around you from being inconvenienced by ring tones for incoming calls or mails.
- When on a crowded street, use your cellphone in places where you do not prevent others from passing.
- When on a train or in a hotel lobby, move to an area where you will not bother others around you.
- Take care not to talk too loudly during conversations.
- When you shoot photos or movies of others with your cellphone, get permission from them.

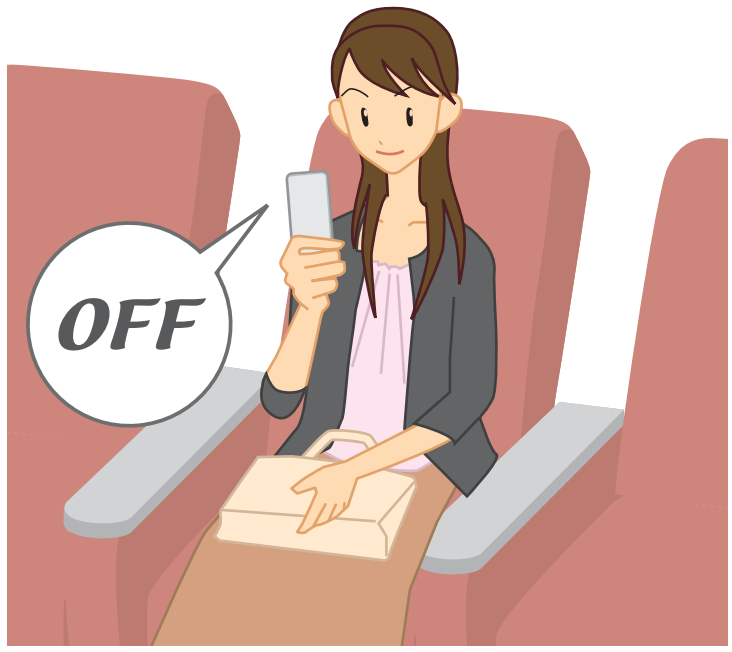

Electric waves from cellphones may adversely influence medicaldevices and equipment.

- There may be someone with a pacemaker around you in crowded places such as trains. Turn your cellphone OFF in such places.
- Follow the instructions of hospitals and other medical institutions where it is forbidden to use or carry cellphones.



What You Can Do with INFOBAR 2

Pair Function



You can easily call and send mail to your registered Popular Contact.

Page 38


Mail



You can send mails to other cellphones or personal computers.

Page 40


Camera

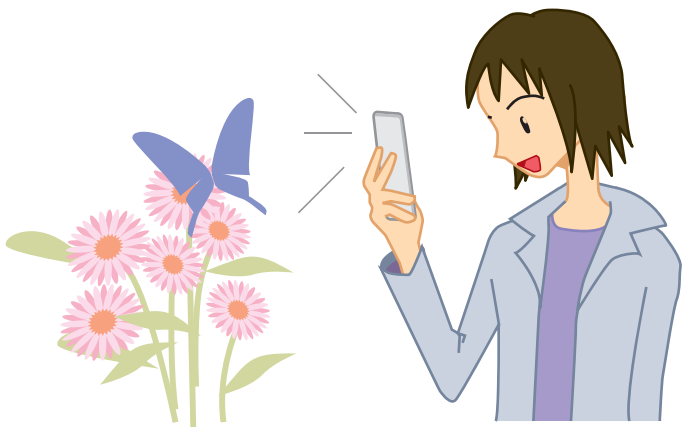

You can shoot photos or movies and easily send them by E-mail.

Page 52


EZ Navi

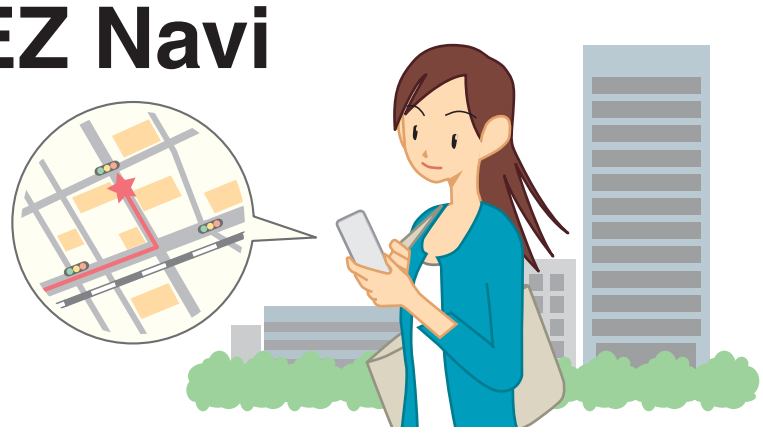

You can search various location information with the functions of "EZ Navi Walk", "Passenger Seat Navi", "Evacuate Navi" or "Security Navi".

Page 64

EZweb

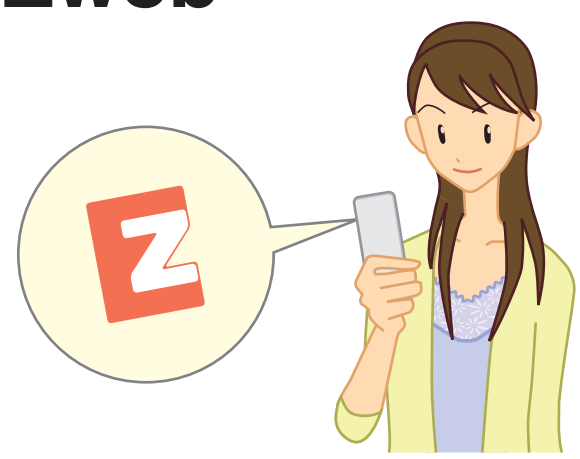

You can download Chaku-Uta®, Chaku-Uta-Full®, and wallpapers, etc.

Page 57

EZ Television (1Seg)



You can watch the Digital Terrestrial Broadcasting for Mobile Television Service (1Seg).

Page 66

For other features, refer to page 72.

Manner Mode and Answer Phone

Manner Mode

With Manner Mode, you can set the ringer not to sound so as not to bother the people around you.

Press [✱] for more than one second while the standby screen is displayed.



Page 27

Answer Phone

The caller can leave a message when you cannot answer the phone.

Press [clear] for more than one second while the standby screen is displayed.



Page 23

Check the Power, Reception and Battery!

Keep the "power" ON for normal use.

Keep the power ON to make or answer calls.
Press [power] for more than one second.



Page 12

You cannot talk on the phone if the "radio wave" is too weak.



It is sometimes difficult to receive the radio wave in some places even within a service area.
" [signal icon] " indicates the reception condition.

Page 12

Be careful of the remaining "battery" power.



If the remaining battery power is too low, you may not be able to use the cellphone properly.
" [battery icon] " indicates the remaining battery power.

Page 12

Do Not Use the Cellphone While Driving

Using cellphone while driving is subject to penalties.

Holding a cellphone in your hand to make phone calls or watching the screen to view E-mails etc., while driving shall be subject to penalties. (The implementation of the revised Road Traffic Law on November 1, 2004)



Calling with a cellphone in your hand




Viewing E-mails and watching the screen

Turn the Power OFF or Set Drive Mode While Driving.

Drive Mode

By setting Drive Mode, you will enable the caller to hear a response message such as "Now driving. I cannot answer the phone right now...(Japanese)", and to store a message in Answer Phone.

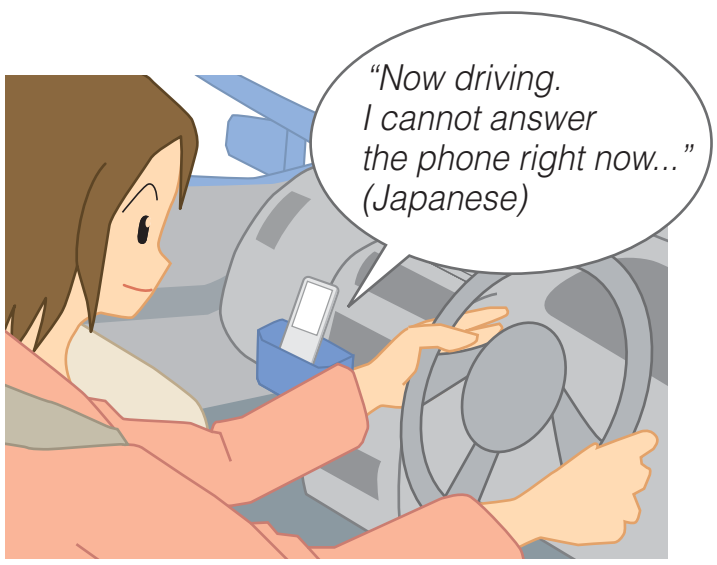

①Press while the standby screen is displayed.

②Use to select "Useful Tools" and press [Select].

③Use to select "Manner Mode" and press [Select].

④Use to select "Drive" and press [Set].

⑤Use to select "Continuous Mode" and press [Set].

Beware of Junk Mails and One-ring Calls!

If you receive junk mails...

●Mail Filter

Using the mail filter function, you can select to reject E-mails sent from specified addresses and to reject Spoof E-mails.
The following mail functions are available for preventing arrival of junk mails.

- Reject E-mails with "未承諾広告※(Unsolicited advertisement)" in the subject.
- Reject E-mails from specified addresses.
- Reject Spoof E-mails .

Page 47



●Change E-mail Address

You can prevent arrival of junk mail by changing E-mail address.


Page 18

If you receive calls from unknown numbers...

It may be "One-ring Calls" intended to trick you into calling back and accessing unwanted pay programs.Be careful to a call from unknown number.

●Icon for One-Ring Calls

In case of a missed incoming call with a length of 3 seconds orless, [Missed] will appear on the incoming call history list, so that you can classify it as a "One-ring Call".

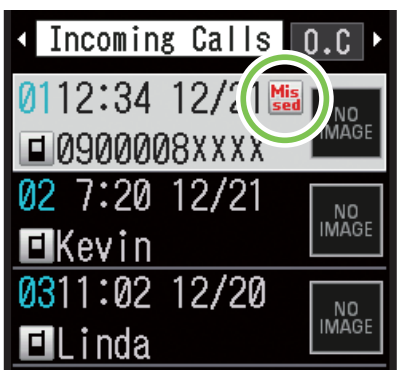



Disaster Message Board Service

When a big scale disaster occurs, you can register your safety information through EZweb. The registered safety information can be referred from anywhere in Japan through EZweb or Internet.


Registering Safety Information

- When a big scale disaster occurs, you can register your safety information such as your condition or comments,from au cellphone, to " 災害用伝言板 (Disaster Message Board)" created on EZweb.
- After the registration of your safety information, you can notify by E-mail your family or acquaintances you have previously designated that you registered your safety information on "災害用伝言板 (Disaster Message Board)".

Referring to Safety Information

- You can check the safety information of the person you desire to know about, by entering his/her phone number from EZweb or Internet*[1].

  *[1]The safety information can be accessed at http://dengon.ezweb.ne.jp/ from cellphones of other carriers, PHS or personal computer.

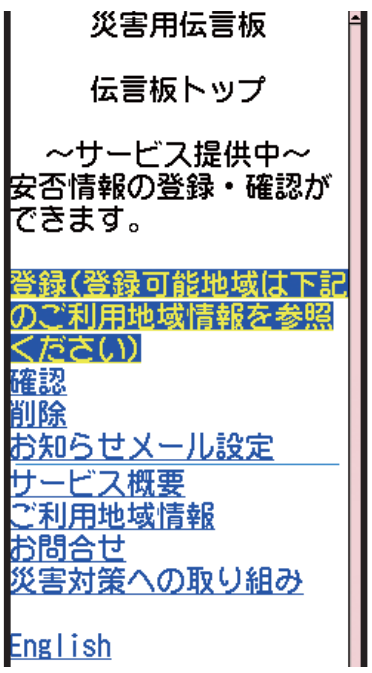

How to Access	"au one Top" → "災害用伝言板(Disaster Message Board)"
	http://dengon.ezweb.ne.jp/

* The maximum preservation period of the registered information is 72 hours.

* The maximum number available for each registration is 10. When the number of registration exceeds 10, the information will be overwritten from the oldest one.

* The demonstration of this service can be referred to anytime by "au one Top" → "auお客さまサポート(au Customer Support)" → "災害用伝言板(デモ版) (The demonstration of Disaster Message Board)".

* Select "English" to use the English mode.




Contents


Before Use

Confirming the Package Contents


- INFOBAR 2 Main Unit

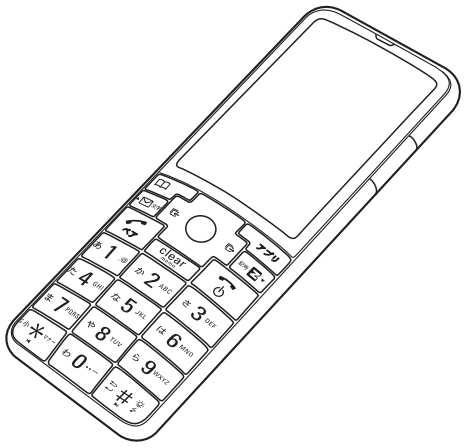


- Battery Pack

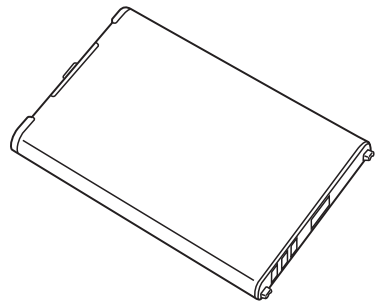


- Desktop Holder

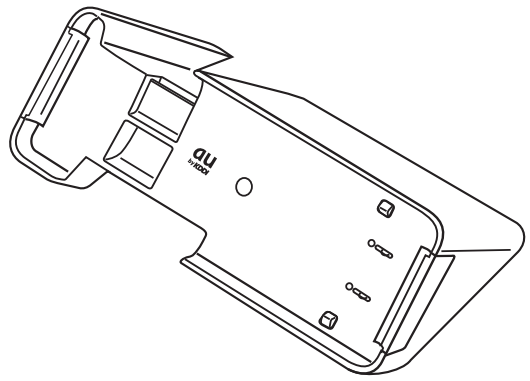


- SANYO Round-type Earphone Jack Conversion Adapter 03

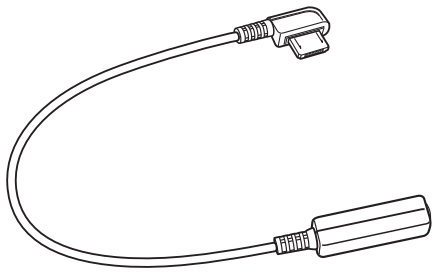

- Stereo Earphones (Sample)

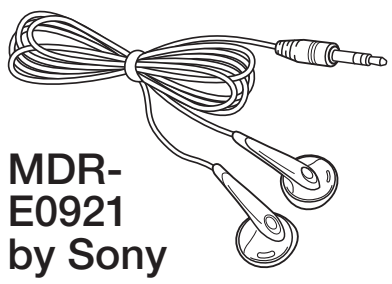


- USB Cable (Sample)



- Basic Manual (Japanese)



- Manual (Japanese)

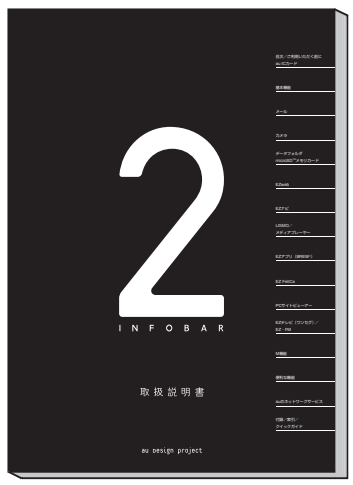

- CD-ROM (Japanese)





- Warranty (Japanese)
- Precautions in Use (Japanese)
- Global Expert Owner’s Guide (Japanese)
- LISMO Installaction Guide (Japanese)
- Osaifu-Keitai® Basic Manual (Japanese)
- Promotional Fliers (Japanese)


Information

- AC Adapter and microSD™ Memory Card are not included in the package. Please purchase the Common AC Adapter 01. microSD™ Memory Cards are also available separately.

Name of Parts

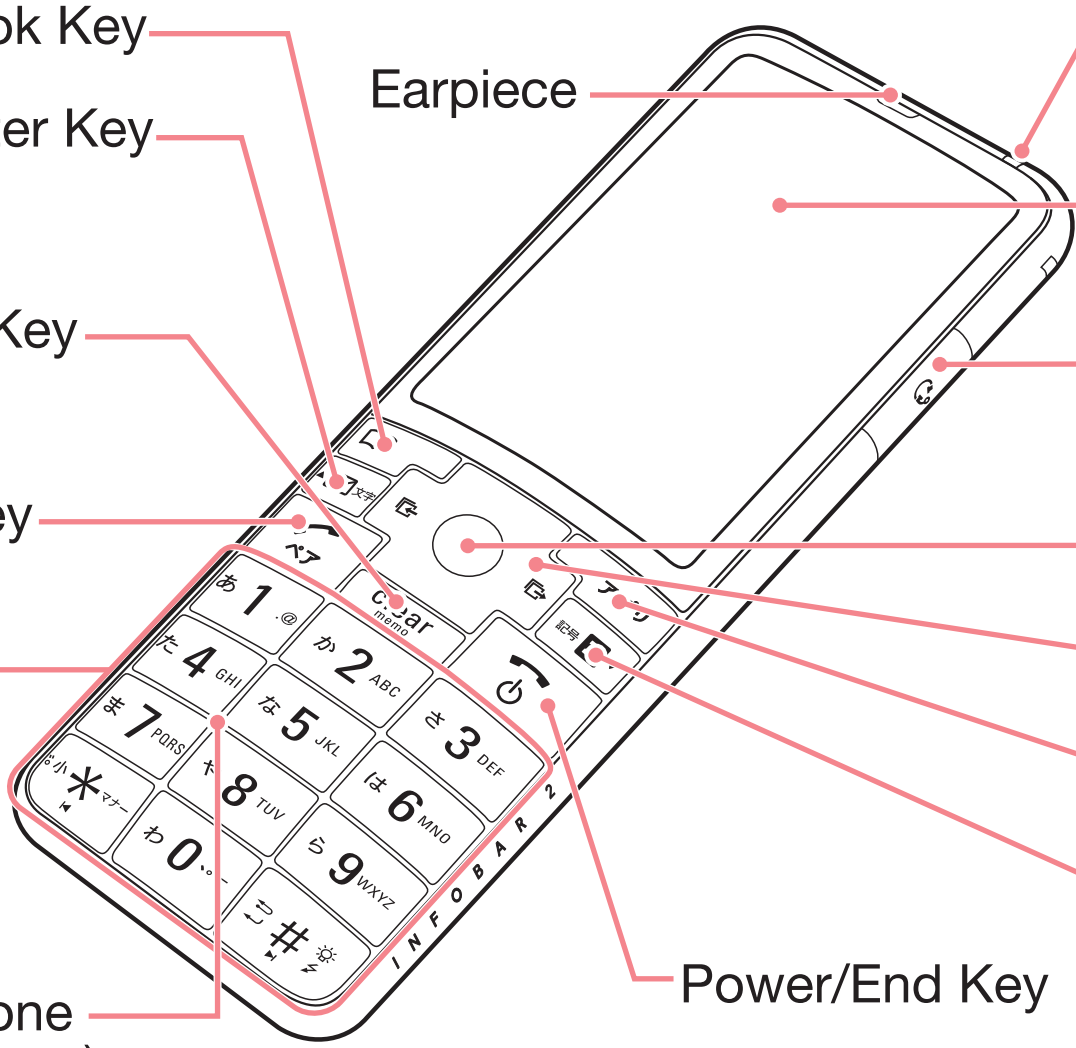

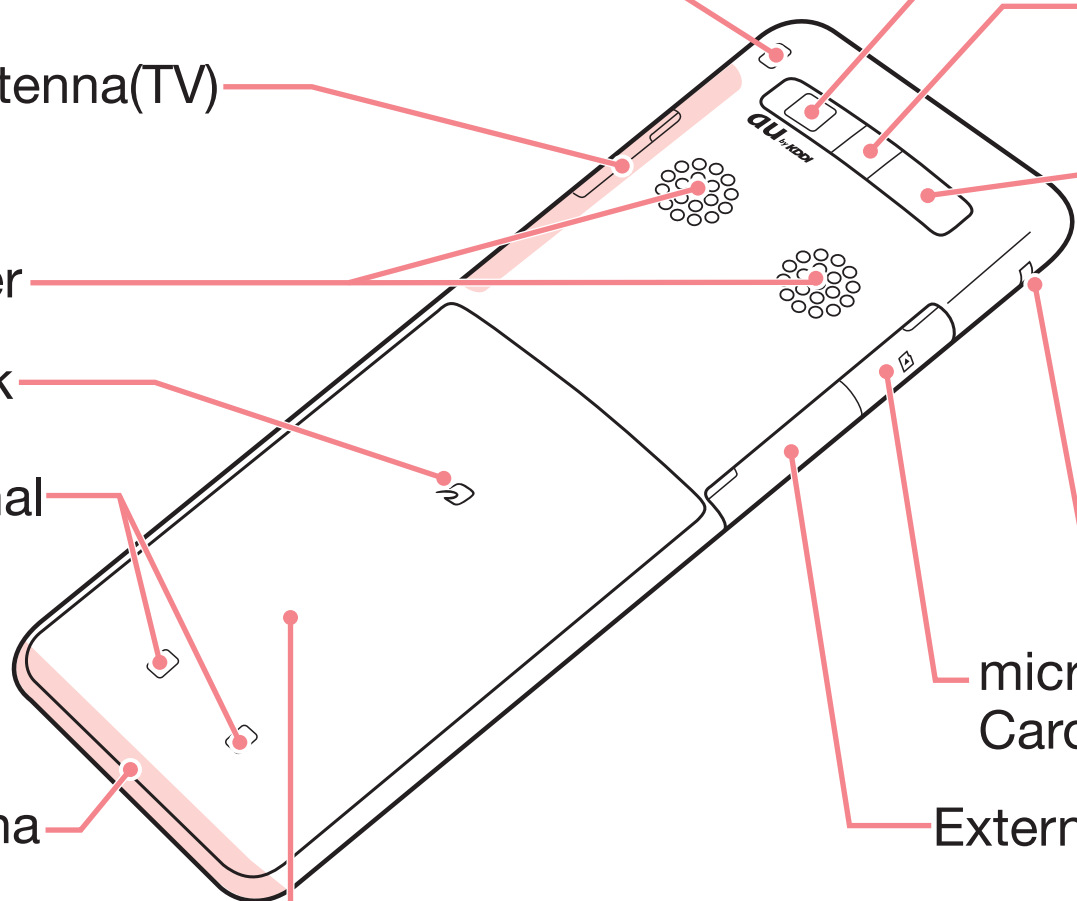

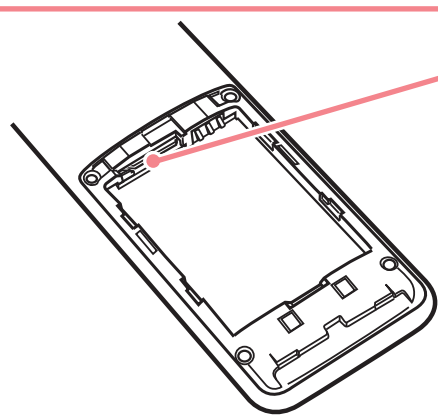


Do not take out the card when not necessary as your phone number is recorded on it.

How to Charge the Battery Pack


The battery pack is not fully charged at the time of purchase. Charge the battery pack before using your INFOBAR 2 for the first time.

Connect the Common AC Adapter 01 (not included in the package), plug the power plug into a power outlet, and insert the INFOBAR 2 to the desktop holder. If you charge the battery pack while the INFOBAR 2 is turned on, it beeps when charging starts or ends.

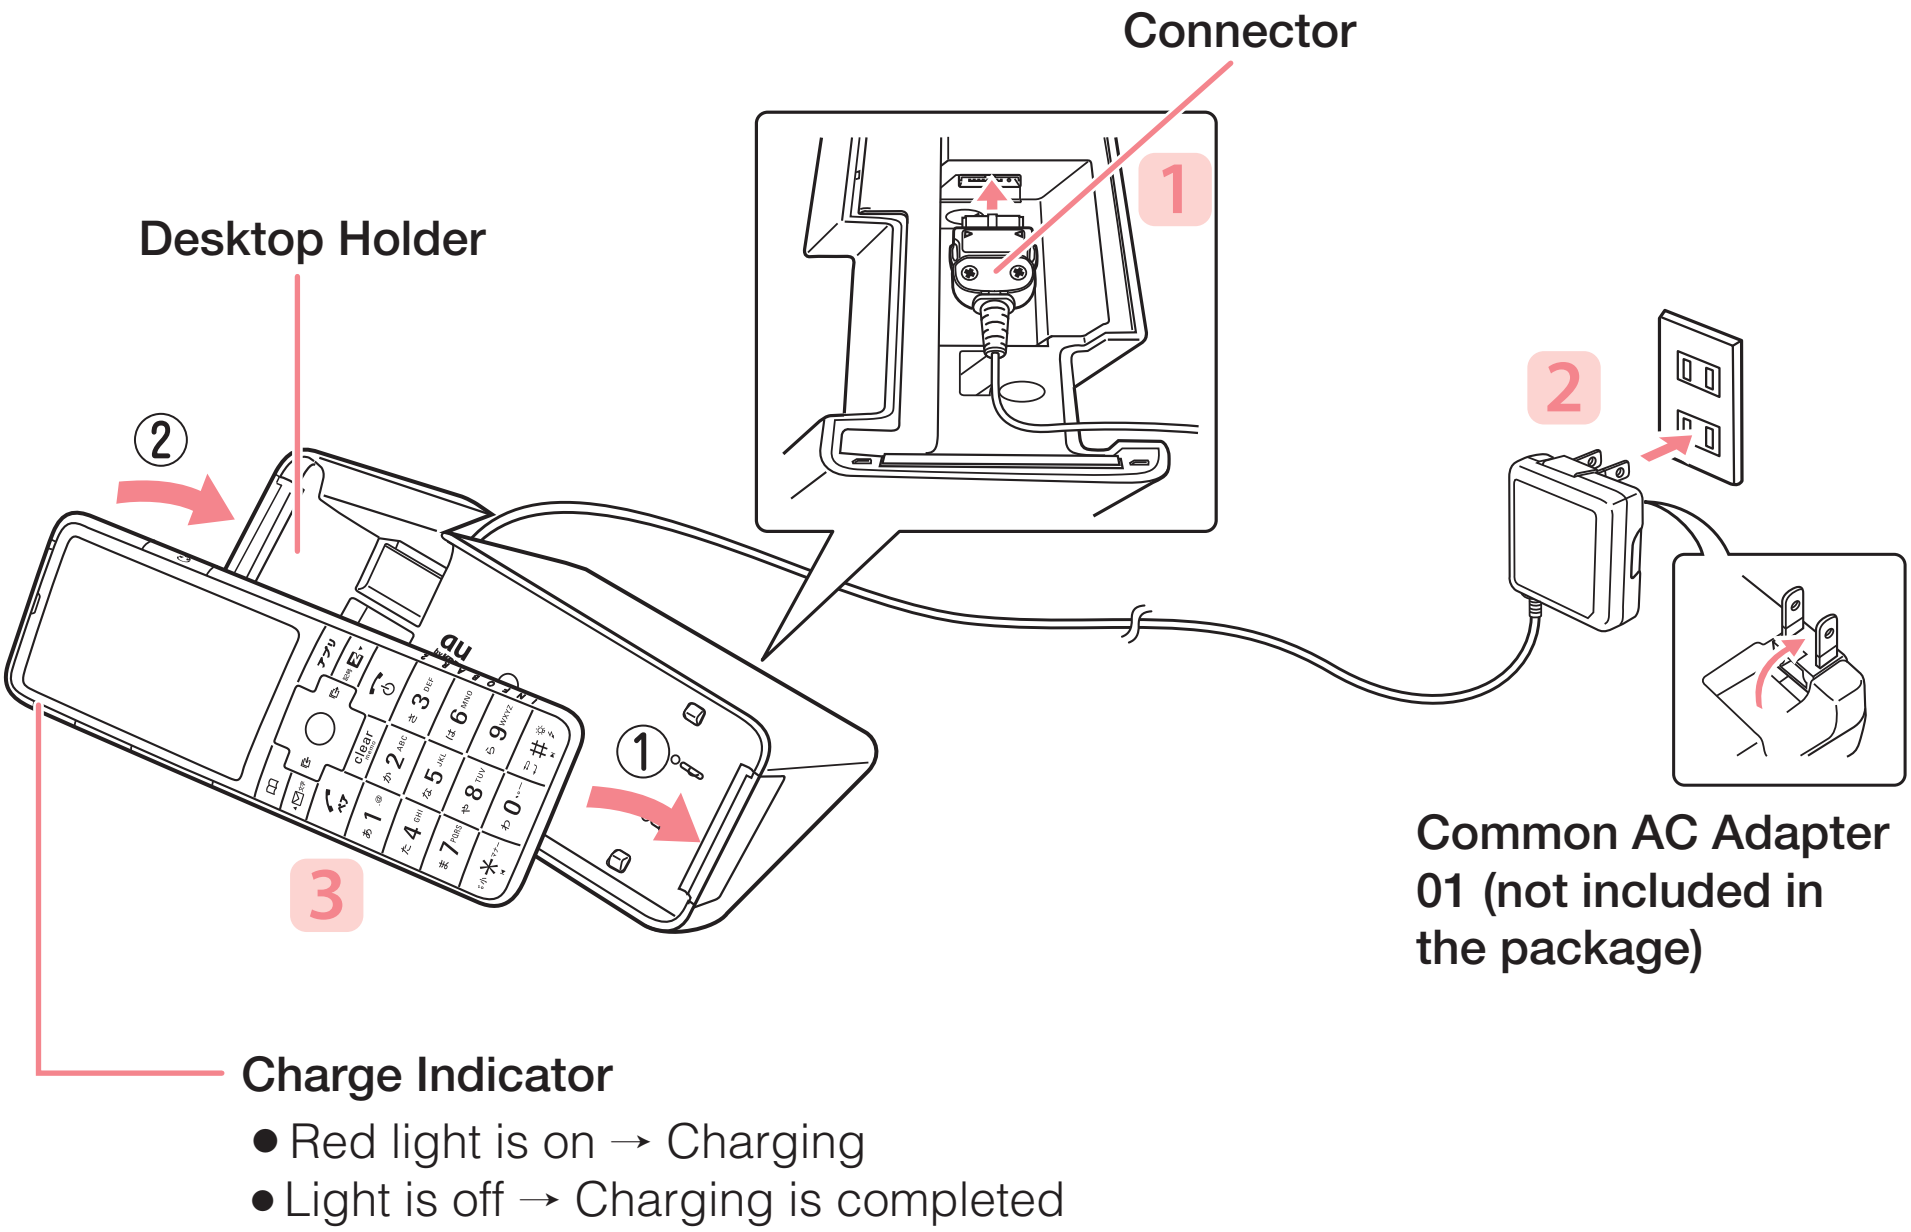

Information


- The battery pack can also be charged by directly inserting the Common AC Adapter 01 connector (not included in the package) into the external connector on the INFOBAR 2.

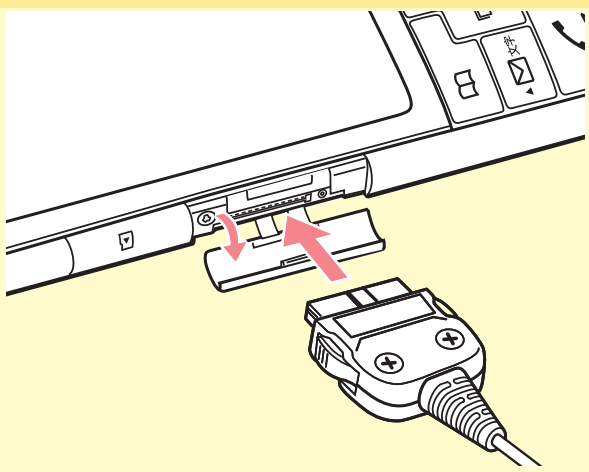


Turning the Power ON

Press for more than one second.

The standby screen appears.

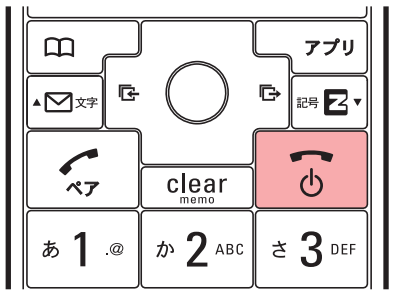

Standby Screen

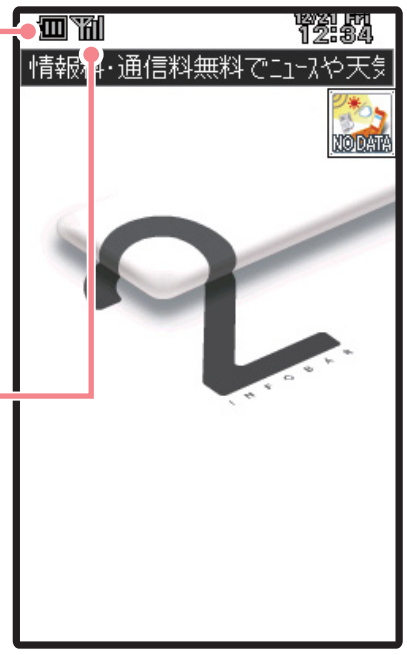

Check the battery level.

High	Medium	Low	Zero

* is displayed while charging.

Check the radio wave reception.

Strong	Medium	Weak	Very weak	Out of service area

* When appears, you cannot make or receive calls.
* When appears, you may not be able to make or receive calls.

Turning the Power OFF


Press for more than one second.

Switching Screen Display to English

Menus, messages and other screen display language can be switched between Japanese and English.

1 **Press さ 3 DEF た 4 GHI while the standby screen is displayed.**


The Set Language screen appears.

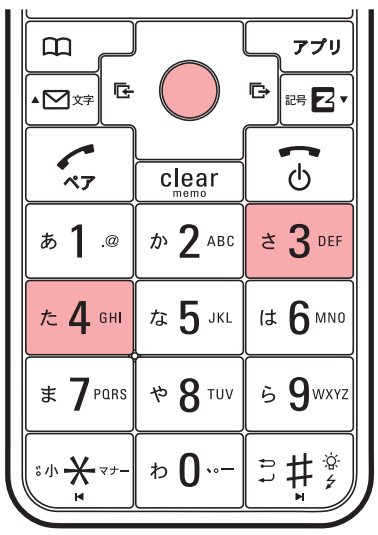



2 **Use to select "English" and press [Set].**

The screen display is set to English.



Basic Operation

Key Functions

- Moving the cursor up
- Increasing the volume

- Moving the cursor down
- Decreasing the volume

- Moving the cursor left
- Viewing Incoming Calls

- Moving the cursor right
- Viewing Outgoing Calls

Cursor keys are indicated in this manual as follows:

Up	Down	Left	Right

- Viewing Address Book


- Accessing E-mail/C-mail Menu
- Switching character type

- Making/answering a call
- Accessing Popular Menu

～

- Entering phone numbers or characters

- Setting/releasing Manner Mode

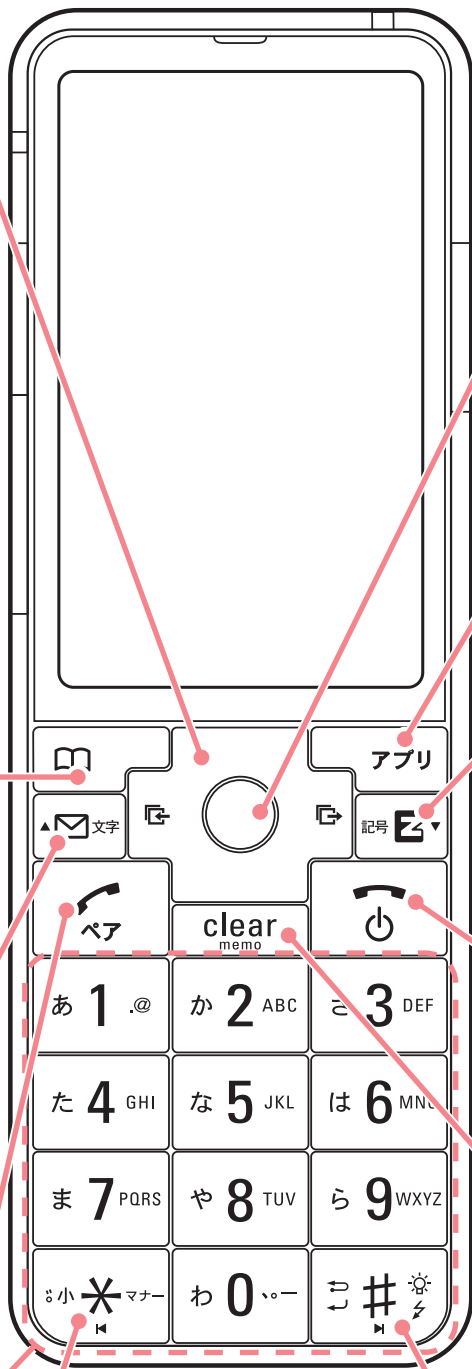

- Viewing Main Menu
- Selecting an item where the cursor is placed

- Accessing EZ apps (BREW®) Menu

- Accessing EZ Service Menu
- Entering symbols and others

- Turning the power ON/OFF
- Ending calls or operations


- Setting/releasing Answer Phone
- Erasing characters
- Returning to the previous screen

- Turning ON the pocket light

Items in the Underpart of the Display and the Operation

Use the assigned key to operate the item indicated in the underpart of the display. The displayed items may differ depending on the screen.

Pressing the key executes the function displayed at the lower left

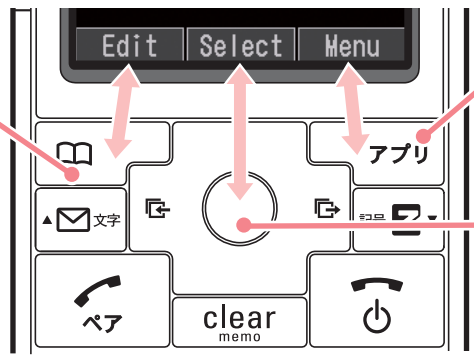

Pressing the key executes the function displayed at the lower right


Pressing the key executes the function displayed at the lower center

Selecting items/Returning

To select an item, use to move the cursor and press . In some cases, numbered items can also be selected by pressing the corresponding dial key. Press clear to return to the previous screen if you get confused or make a wrong operation. Press to return to the standby screen.


<Example>

Standby Screen

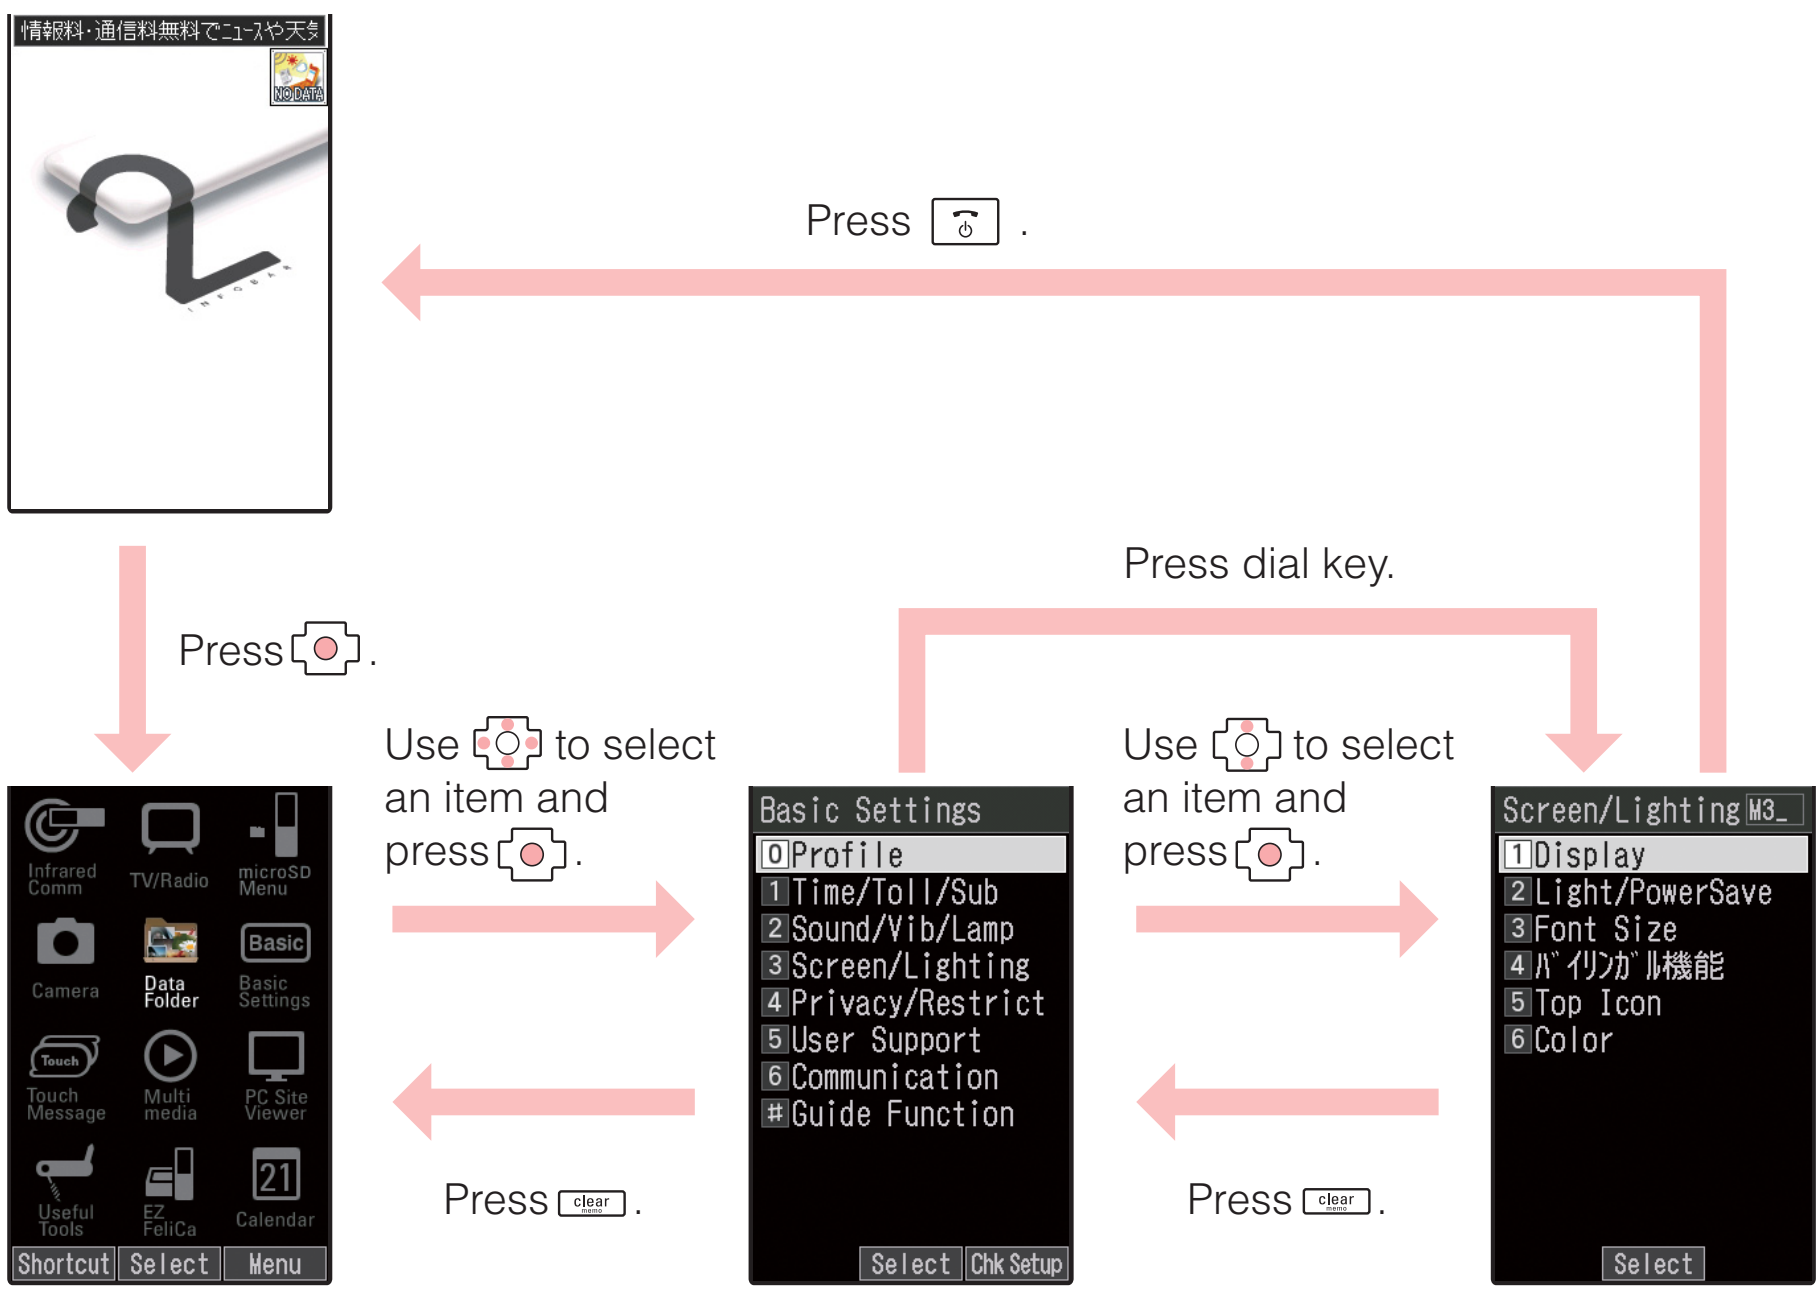

Viewing the Screen

The main icons are listed below.

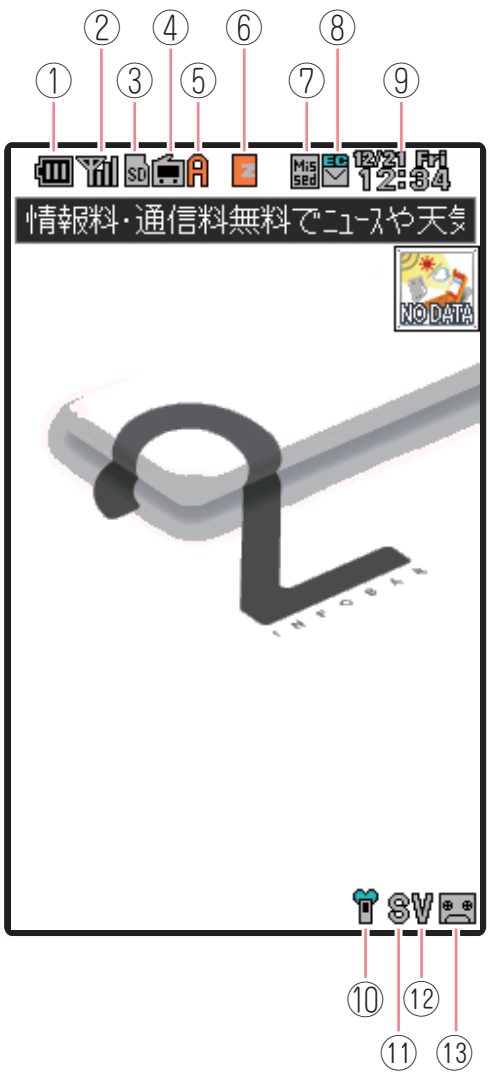

No.	Icon	Description
①		Battery level
②		Reception condition
③		microSD™ Memory Card inserted
④		During a call
		Running EZ Television (1Seg)
⑤		Running EZ apps (BREW®)
⑥		Using EZweb
⑦		Unchecked missed call
⑧		Unread E-mail
		Unread C-mail
⑨	12/21 Fri 12:34	Currrent date and time
⑩		Manner Mode ON
⑪		Ringer volume OFF
⑫		Vibrator ON
⑬		Answer Phone ON

Displaying the Menu

About Main Menu


Each one of the INFOBAR 2 functions can be accessed.

Standby Screen




Press .

Main Menu

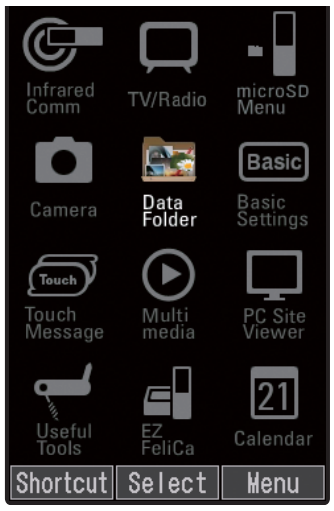

Use to select an item and press .

Ex.) Camera Function Screen

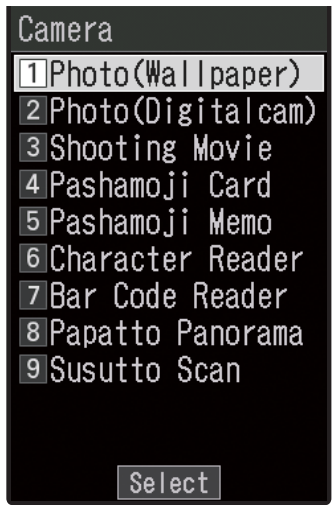

About EZ Service Menu

You can enjoy all kinds of services, such as connecting to the EZweb information site, EZ Navi, EZ Channel-Plus and so on.

Standby Screen




Press .

EZ Service Menu



Use to select service.

Ex.) EZnavi Screen

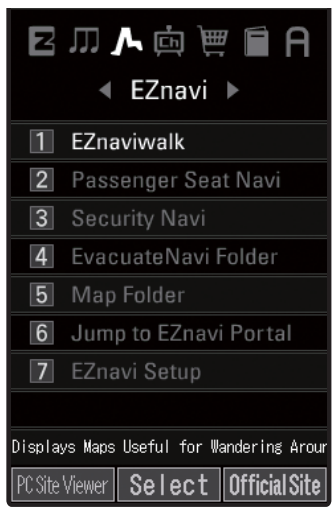

Initializing E-mail and EZweb Settings


Application to the EZweb service is required in advance to use the E-mail and EZweb services. Contact au shops or the au Customer Service Center if you did not apply to the service at the time of purchase.
Perform the EZweb initialization before using this service.


1

Press [✉文字] while the standby screen is displayed, and press [●] [OK].

Initialization automatically provides your E-mail address.


●For choosing an e-mail address of your own choice, refer to pages 18 to 19.

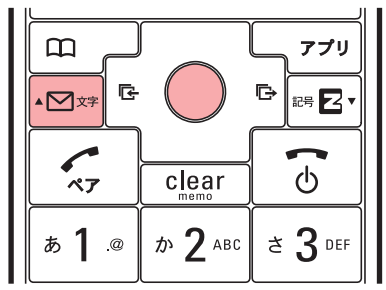

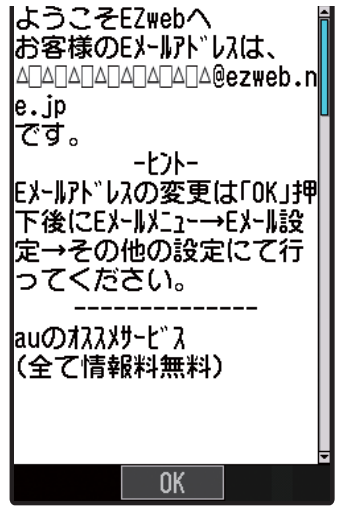

2

Press [●] [OK].

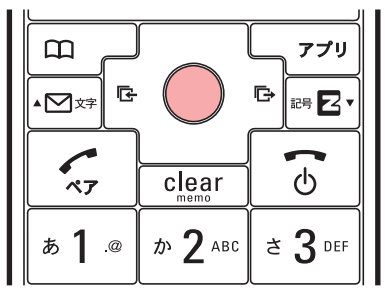

Information


●Initialization can also be performed by pressing [EZ] or [アプリ] while the standby screen is displayed.

Displaying Your Phone Number and E-mail Address

1

Press [●] while the standby screen is displayed, and press [わ 0] .

Your phone number and E-mail address are displayed.

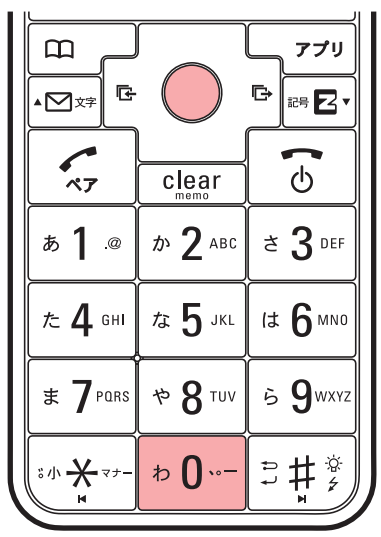





Before Use

Changing Your E-mail Address




1 Press while the standby screen is displayed.

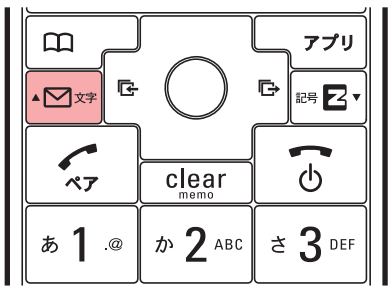

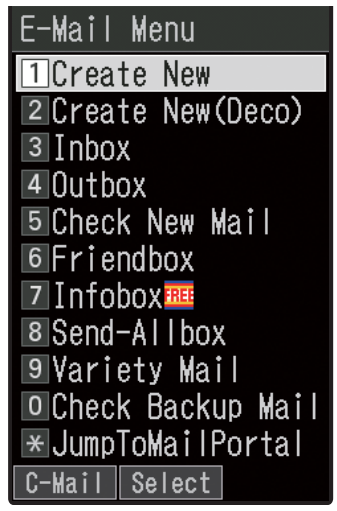



2 Use to select "E-Mail Setup" and press [Select].

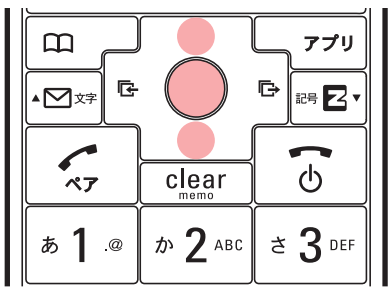





3 Use to select "Other" and press [Select].

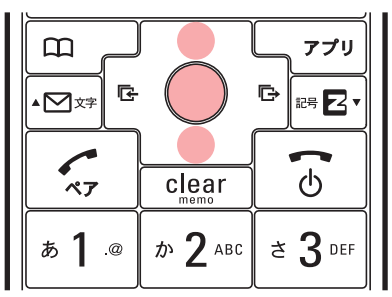

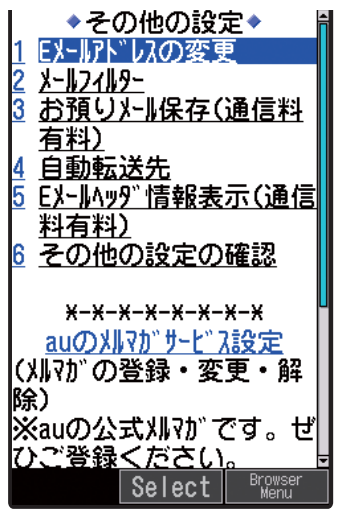


4 Use to select "Eメールアドレスの変更 (Change E-mail Address)" and press [Select].

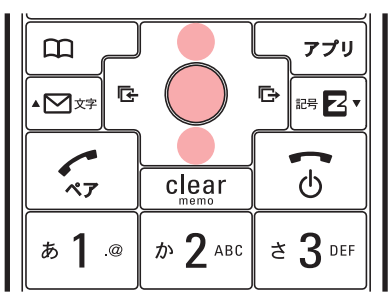


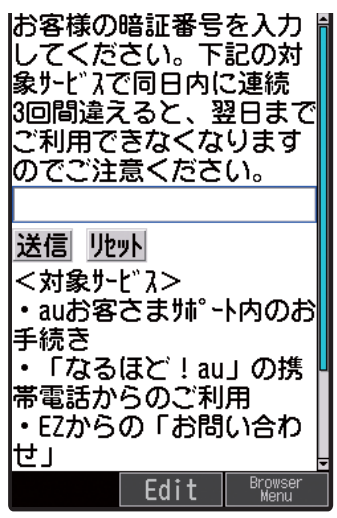

5

Enter your Security Code and press [OK].
Use to select "送信 (Send)" and press [Select].

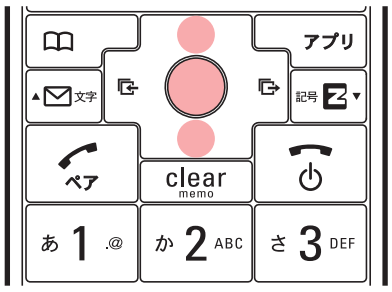


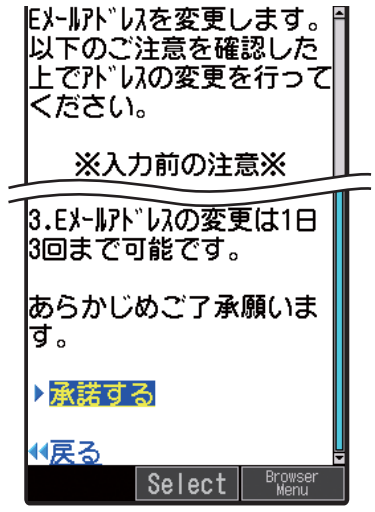


- Security Code is a 4-digit number you have filled in the application form at the time of purchase.
- If you enter a wrong Security Code 3 times in a row within the same day, you will not be allowed to perform setup operations until the following day.

6


Use to select "承諾する(Agree)" and press [Select].

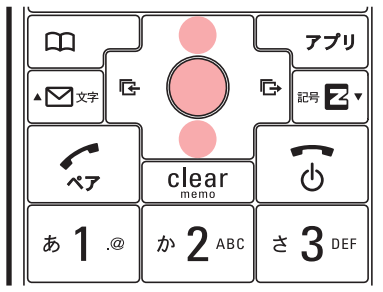


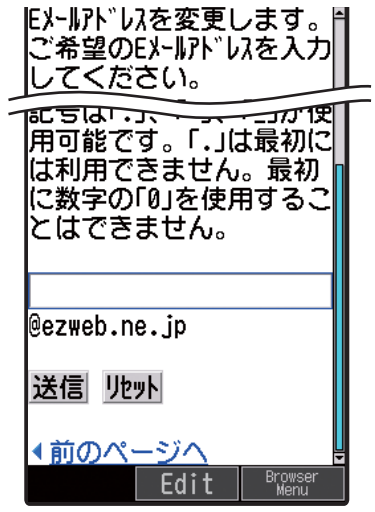

7

Use to select the entry area and press [Edit]. Enter an E-mail address and press [OK].

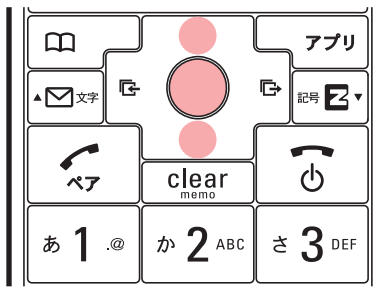


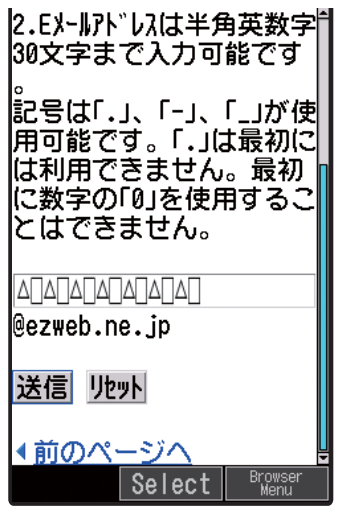


- For details about entry of E-mail addresses, refer to page 30.

8

Use to select "送信 (Send)" and press [Select].

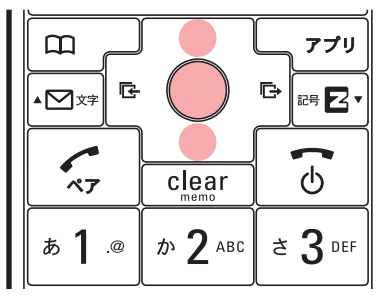


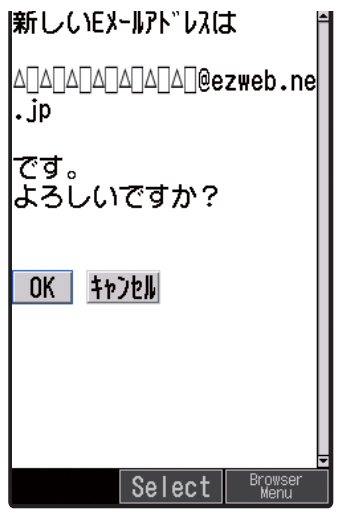

- When the E-mail address you enter is already being used, enter a different one.

9

Use to select "OK (Send)" and press [Select].

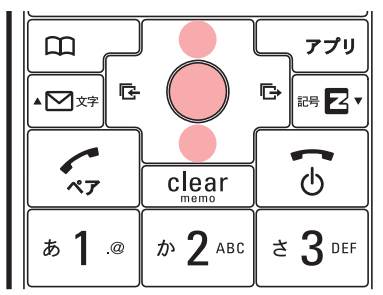


Phone Call

Making a Call

1 **Enter a phone number while the standby screen is displayed and press .**

Press to hang up.

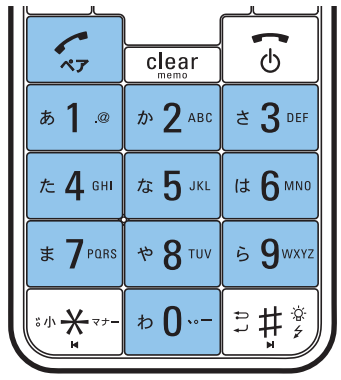



●To make a call to a regular telephone, enter the phone number starting with the area code.

How to make a call:

Adding "184" before the phone number	Your phone number is not displayed on the receiver's display.
Adding "186" before the phone number	Your phone number is displayed on the receiver's display.
Adding nothing	The call is made in accordance with the Caller ID Notice setting.

* Enter a phone number and press [Select]. Use to select "Add Extra No." and press [OK] to add "184" or "186".

Making an International Call

●au International Call Service

Available without any additional application.

Example: To call 212-123-XXXX in the USA

005345	—	1	—	212	—	123-XXXX
↑ International access code		↑ Country code (USA)		↑ Area code*		↑ Phone number

* When an area code begins with "0", dial excluding "0".

- Calling charges for this service are added to monthly au calling charges and billed together.
- Check the Country code at au Customer Service Center.
- For charges, refer to au MOBILE PHONE SERVICE GUIDE or contact au Customer Service Center.

001 KOKUSAI MOBILE TALK

Application required.
For inquiries, contact KDDI Customer Service Center at 0077-7160 (Toll-free; open 9:00 to 20:00 every day including weekends and national holidays).

001	010	1	212	123-XXXX
KDDI International access code		Country code (USA)	Area code*	Phone number


* When an area code begins with "0", dial excluding "0".

- Calling charges for 001 KOKUSAI MOBILE TALK are charged separately from monthly au calling charges.
- Check the Country code at au Customer Service Center.
- For charges, refer to au MOBILE PHONE SERVICE GUIDE or contact au Customer Service Center.

Answering a Call

1 **Press to answer an incoming call.**

Press to hang up.

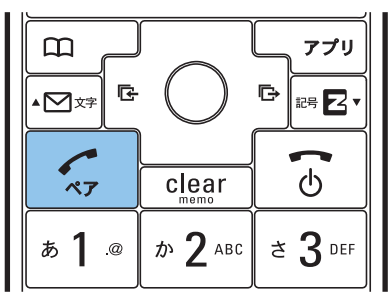

Screen displays for incoming phone calls:

Caller's phone number Example: "0900001XXXX"	The caller has set it so as to display his/her phone number. The caller's name is also displayed if the caller's information is registered in your address book.
"ID Unsent"	The caller has set it so as not to display his/her phone number.
"Payphone"	The call is made from a payphone.
"Not Support"	The call is made from the phone that does not support ID notification.

Screen displays for incoming phone calls:


The message shows that there were incoming calls unanswered (Missed Calls).
Select " Missed Calls" and press [Check] to confirm Incoming Calls (caller phone number, etc.).



Calling Back (Outgoing Calls/Incoming Calls)


1 **Press [key] while the standby screen is displayed.**

[key]: displays the Outgoing Calls screen.
[key]: displays the Incoming Calls screen.

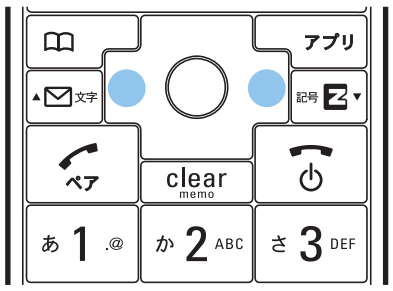



2 **Use [key] to select the person to call and press [key] .**

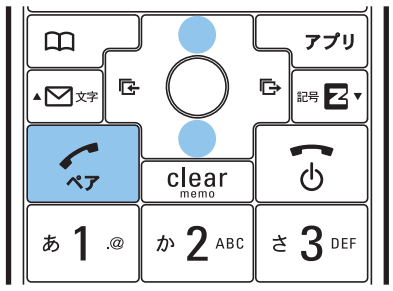

Information


- The latest 20 phone numbers you dialed (Outgoing Calls) and received (Incoming Calls) are saved in each history.

Adjusting the Other Party's Voice Volume

1 **Press [key] during a call.**

[key]: turns the volume up.
[key]: turns the volume down.

The voice volume can be adjusted in 5 levels.

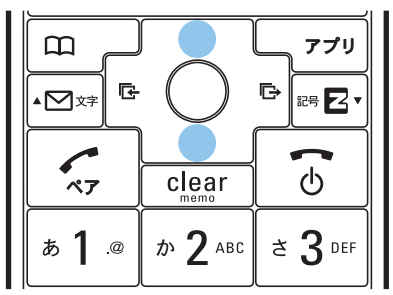





Using Answer Phone

Setting Answer Phone

1 **Press clear for more than one second while the standby screen is displayed.**

Answer Phone is turned ON and " " appears on the standby screen.

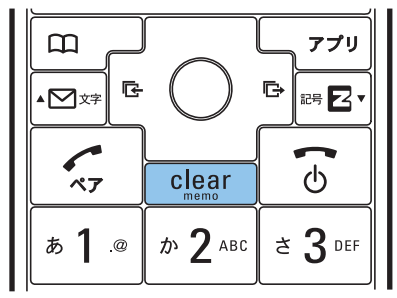

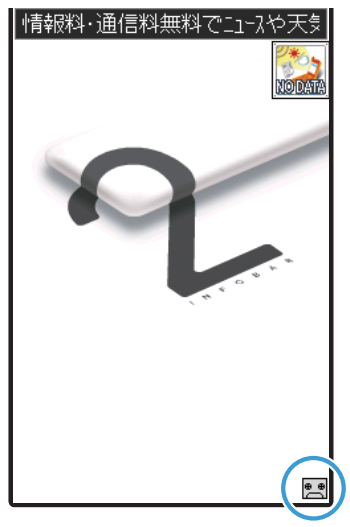

To Turn Answer Phone OFF

Press clear for more than one second while the standby screen is displayed.

Information

- You can record each message for approximately 20 seconds maximum in Answer Phone, and up to 10 messages can be recorded including Phone Memo.
- Use "Answering Service (Voice Mail)" when you have turned the power off or where the radio wave is blocked.


Playing Back Messages on Answer Phone

When a message is recorded on Answer Phone:

" Answer Phone" and the number of messages appear on the standby screen.



1 **Use [navigation key] to select " Answer Phone" and press [center key] [Check].**

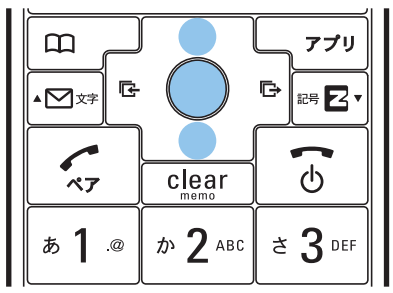





● Icons

[icon] : Unchecked Answer Phone message

[icon] : Checked Answer Phone message

2 **Use [navigation key] to select the recorded message to play back and press [center key] [Play].**

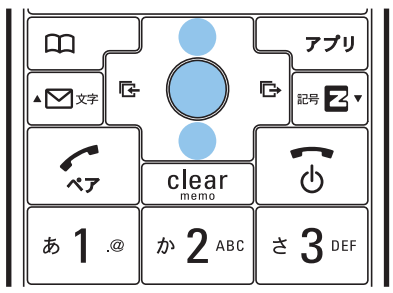

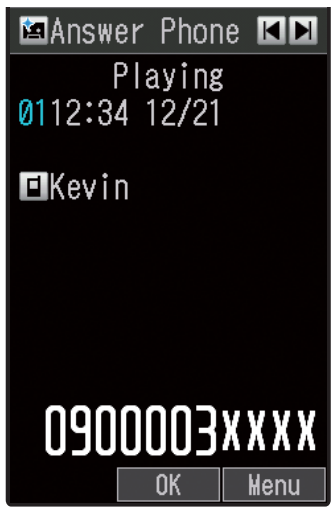


Information


- You can play back messages on Answer Phone by using the following procedure.
  Press [clear] while the standby screen is displayed, select "Ans Ph/Ph Memo"→"Play A. Ph/Ph Memo", and then press [center key] [Play].
- During or after message playback, upon pressing [アプリ] [Menu] you can select "Erase" in order to delete the recorded message.

Changing Ringer Volume and Type

1


Press while the standby screen is displayed.

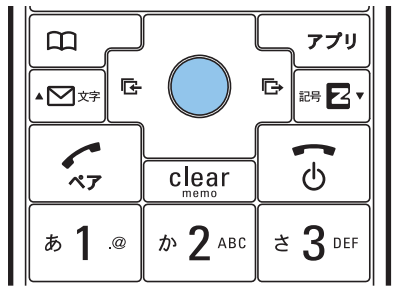


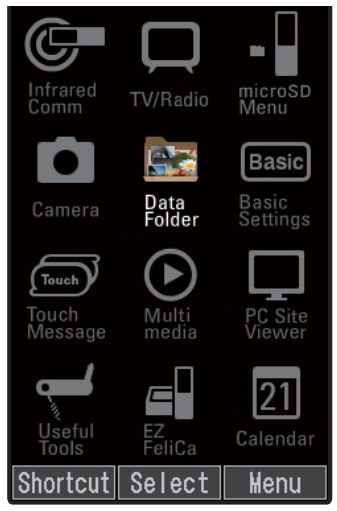

2


Use to select "Basic Settings" and press [Select].
Use to select "Sound/Vib/Lamp" and press [Select].

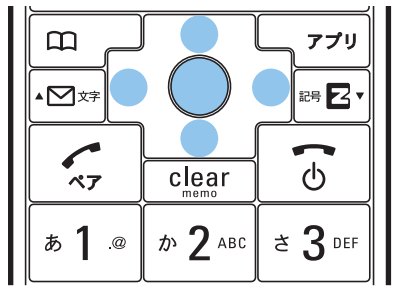

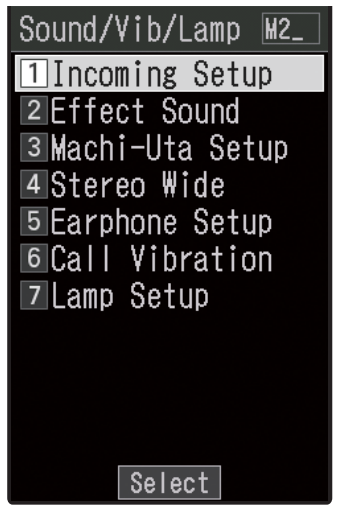

3


Use to select "Incoming Setup" and press [Select].
Use to select "Call Notice" and press [Select].

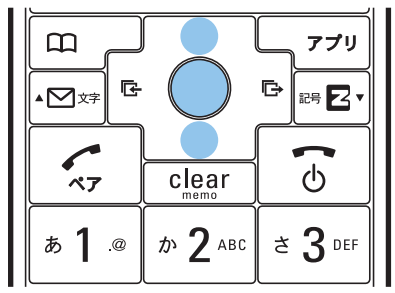




4

Use to select " ♪ " and press [Select].
Use to select "Original" and press [Select].

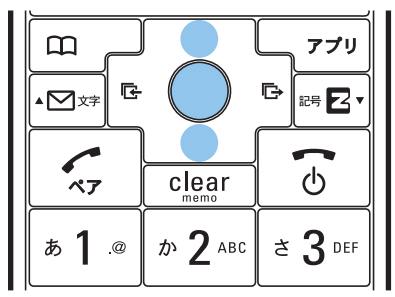

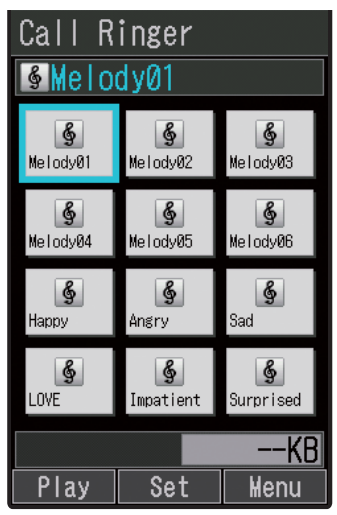



● Pressing [Play] plays back the selected ringer.

Continued on the next page

5


Use to select a melody and press [Set].

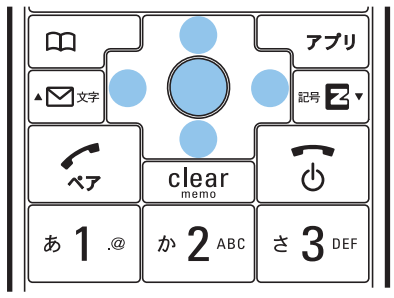

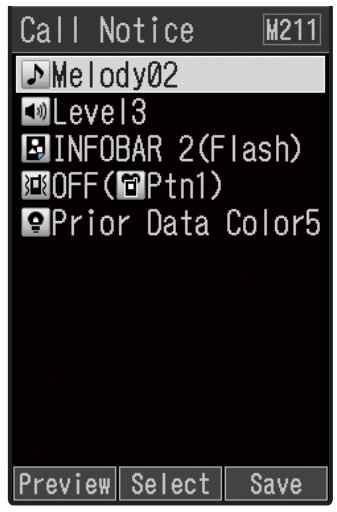

6


Use to select " " and press [Select].

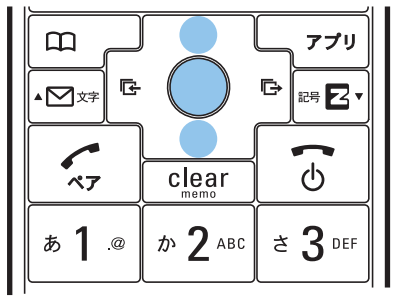




7

Use to adjust the volume and press [Set].

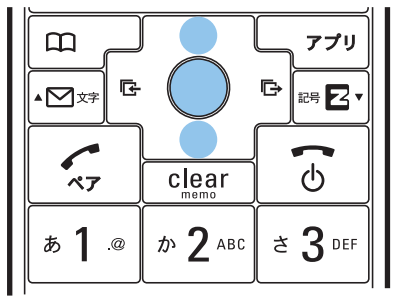

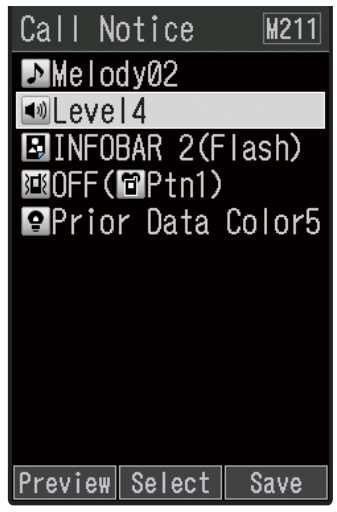

: turns the volume up.


: turns the volume down.

The ringer volume can be adjusted in 5 levels.

- Set the volume to "OFF" to mute the ringer.
- Press [STEP ↑] to gradually increase the volume from Level1.
  Press [STEP ↓] to gradually decrease the volume from Level5.

8

Press [Save].

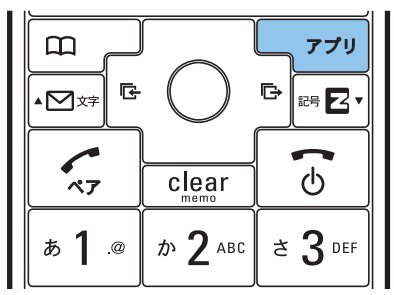

Information


- The default ringer is "Melody01".
- The latest Chaku-Uta® (ringer) can be downloaded and set as the ringer. Refer to page 61.


Setting Manner Mode

The vibrator of the INFOBAR 2 notifies you of the incoming call.

1 **Press [key] for more than one second while the standby screen is displayed.**

Manner Mode is set, and "[icon]" and "[icon]" appear on the standby screen.
Answer Phone is turned ON at the same time and "[icon]" appears on the standby screen.

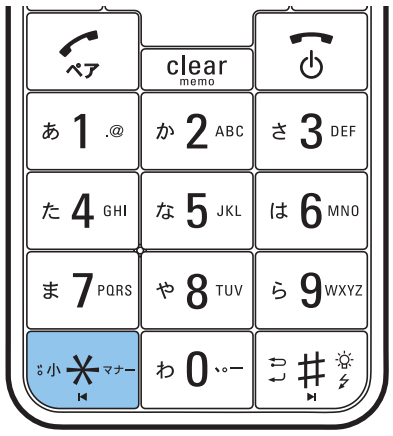

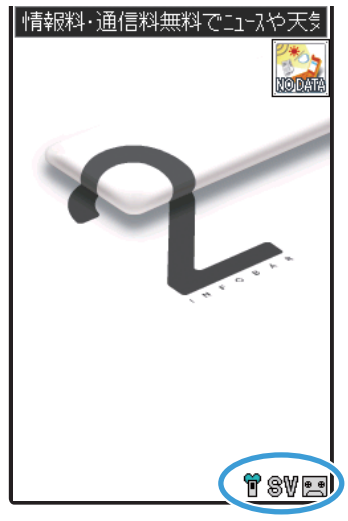


●To Turn Manner Mode OFF

Press [key] for more than one second while the standby screen is displayed.

Inputting Text

How to Input Characters

Switching Character Type



Enter characters while switching between character sets. For switching between character sets, press [✉/文字] on the character input screen, choose the desired character set from the character set switching screen by pressing [◎], and then press [●] [OK].

Entering Single-byte Alphanumeric Characters

You can use the key [あ 1] to [わ 0] to enter characters. The characters appear as shown in the following table each time the indicated key is pressed.

Example: Each time you press the [か 2 ABC] key, the characters appear in the order of "a", "b", "c", "2", "a", "b"...

Press the key of the character to enter next, after the desired character is displayed.

Key	Lowercase character input mode								Uppercase character input mode							
	Number of presses								Number of presses							
	1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
あ 1	.	@	-	_	/	:	~	1	.	@	-	_	/	:	~	1
か 2 ABC	a	b	c	2					A	B	C	2				
さ 3 DEF	d	e	f	3					D	E	F	3				
た 4 GHI	g	h	i	4					G	H	I	4				
な 5 JKL	j	k	l	5					J	K	L	5				
は 6 MNO	m	n	o	6					M	N	O	6				
ま 7 PQRS	p	q	r	s	7				P	Q	R	S	7			
や 8 TUV	t	u	v	8					T	U	V	8				
ら 9 WXYZ	w	x	y	z	9				W	X	Y	Z	9			
わ 0	0								0							
*	Switches between uppercase and lowercase characters.															
#	Shifts to the previous character assigned to the same key, when the entered character has not yet settled (Back Space function). Inputs a line break if possible after the entered character has been settled.															

Information

- Up to 30 lowercase characters including " - " (hyphen), " . " (dot) or "_" (underbar) can be used for your E-mail address.
  " . " (dot) or "0" (numeric) cannot be used at the beginning of an address.
  The characters and symbols in the gray cells ( ) cannot be used before the "@" as in "@ezweb.ne.jp".

Consecutively Entering Characters Assigned to the Same Key

After entering the first character, press [→] to move the cursor and enter the next character.

Example: Entering "ab"



Press [2] once. Press [→] once. Press [2] twice.

Erasing Characters



Move the cursor to the character you want to delete and press [clear].
Press [clear] for more than one second to erase all characters after the cursor (▮). All characters are erased when the cursor (▮) is at the end of the text.

Entering E-mail Address



Example: To enter "taro@keitai.ne.jp" using Phrase

1 Enter "taro@keitai".


t : Press [8] once.
a : Press [2] once.
r : Press [7] 3 times.
o : Press [6] 3 times.
@ : Press [1] twice.
k : Press [5] twice.
e : Press [3] twice.
i : Press [4] 3 times.
t : Press [8] once.
a : Press [2] once.
i : Press [4] 3 times.

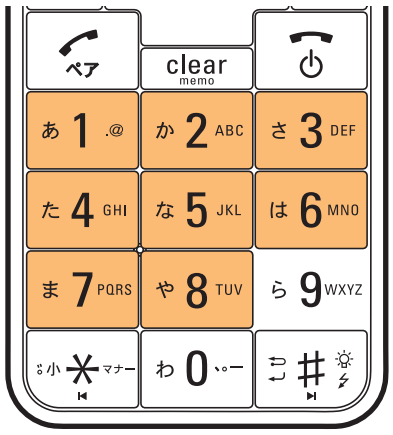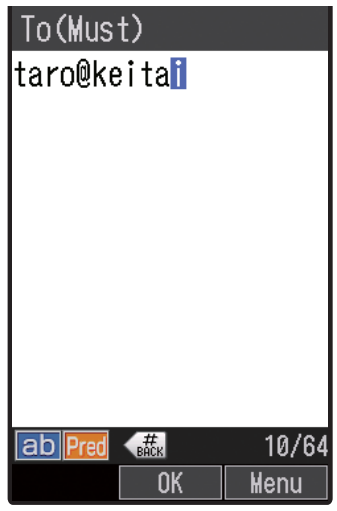2 Press [Menu].

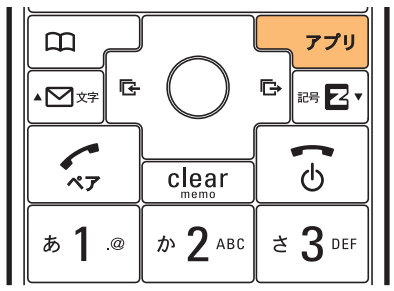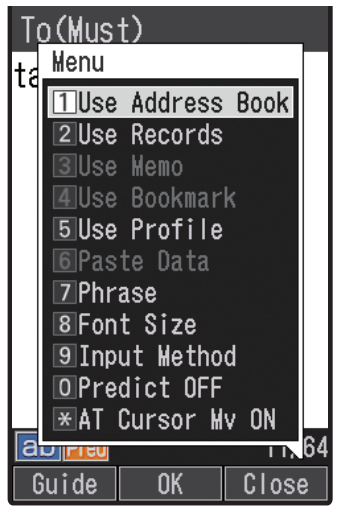



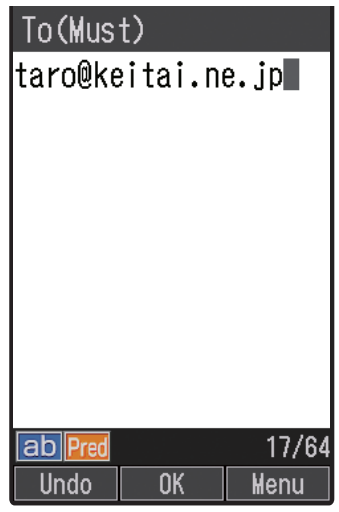
3 Use to select "Phrase" and press [OK]. Use [Category] to select "Internet".

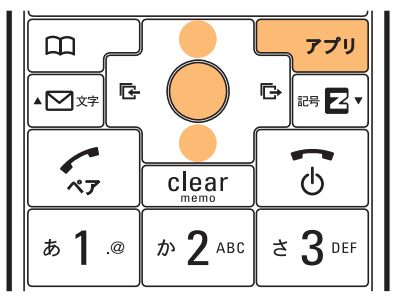


- Press / / to switch between the phrase lists by category.

4 Use [navigation key] to select ".ne.jp" and press [center key] [Select].

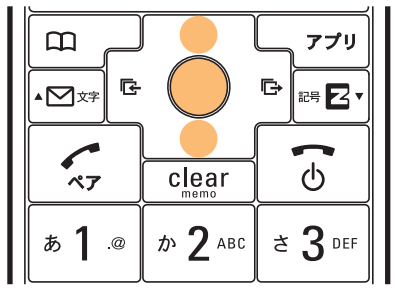







Entering Pictograph

1


Press [✉文字] on the character input screen.

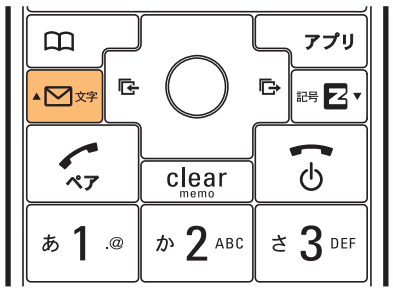


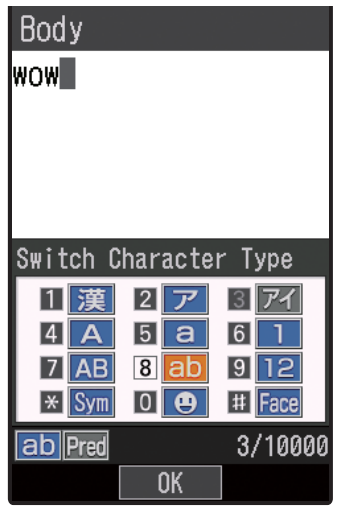

2

Use [navigation key] to select " [pictograph icon] " and press [center key] [OK].

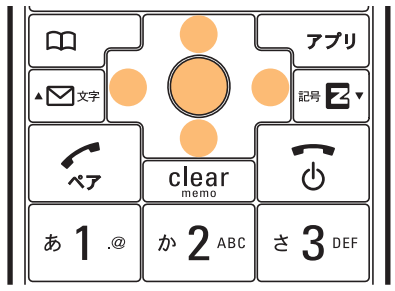


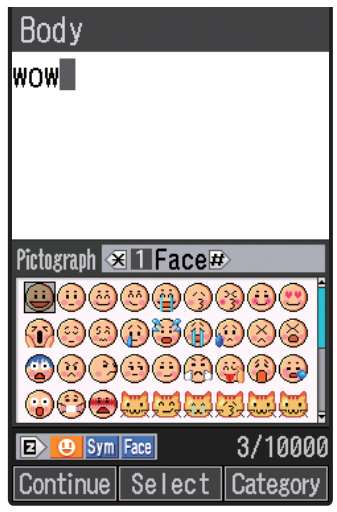


- Press [アプリ] [Category] / [✻] / [#] to switch between the pictograph lists by category.

3

Use [navigation key] to select a pictograph and press [center key] [Select].

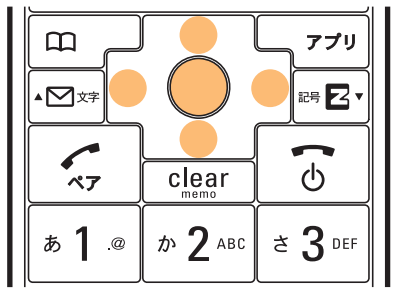

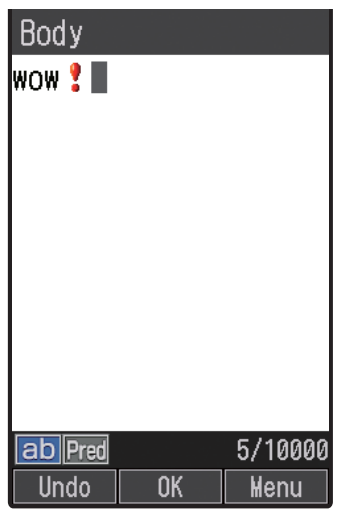

- Select a pictograph and press [📖] [Continue] to enter consecutive pictographs.


Information


- You can also enter a pictograph by pressing [記号] on the character input screen.

Address Book


Registering Data in Address Book


1 Press [ ] for more than one second while the standby screen is displayed.

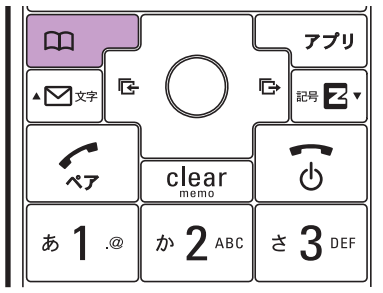

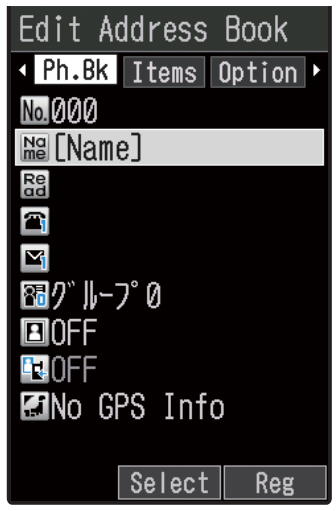


2 Use [ ] to select " (Name)" and press [ ] [Select].

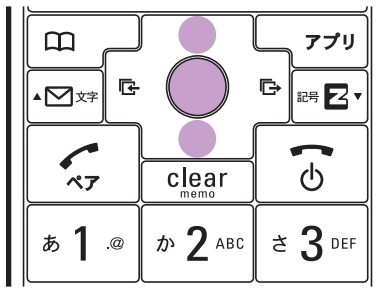

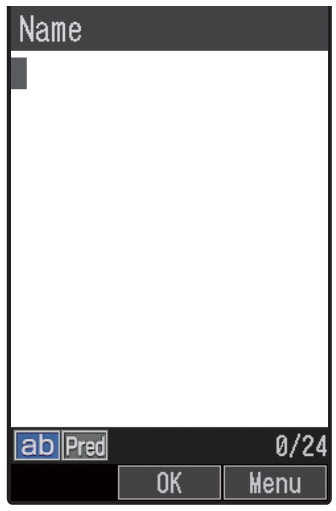


3 Enter a name and press [ ] [OK].


● The reading is automatically entered when you enter a name. You can edit the reading.

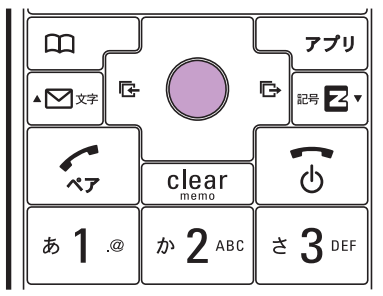



4 Use [ ] to select " (Phone No.1)" and press [ ] [Select].

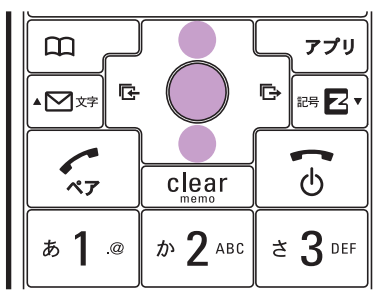


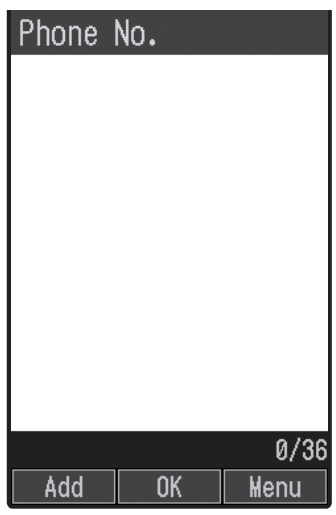

Continued on the next page

5



Enter a phone number and press [OK].
Use to select a type of phone number and press [Select].

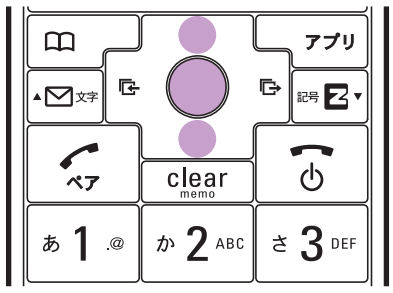


- Enter the area code when registering a regular telephone number.
- When you want to register a second phone number, select " (Phone No.2)", and enter the phone number.
- When you do not enter an E-mail address, go to step 8.


6

Use to select " (E-Mail Address 1)" and press [Select].

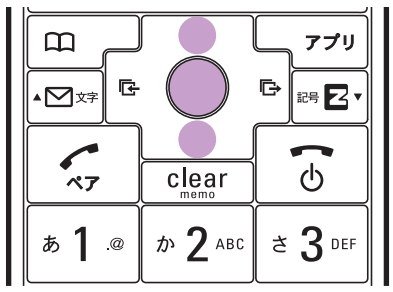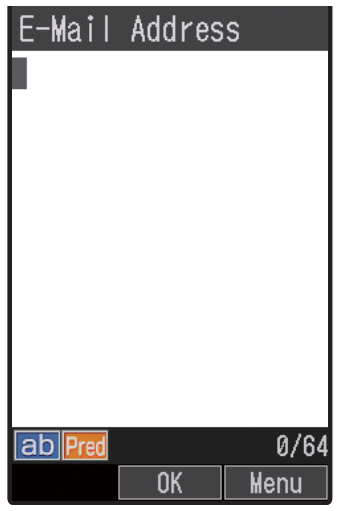7


Enter an E-mail address and press [OK].
Use to select a type of E-mail address and press [Select].

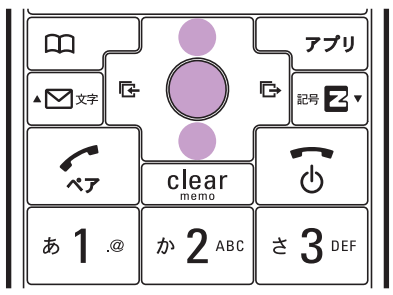


- When you want to register a second E-mail address, select " (E-mail address2)", and enter the E-mail address.

8

Press [Reg].

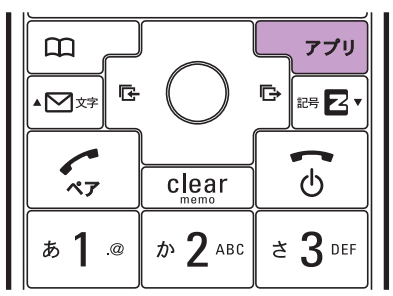


Information


- Entries are automatically registered in the lowest available memory number between 000 and 999.
- You can register data up to 1000 in the address book. In addition, groups, images or other items can be registered.

Making a Call from Address Book

1


Press [Address Book key] while the standby screen is displayed.

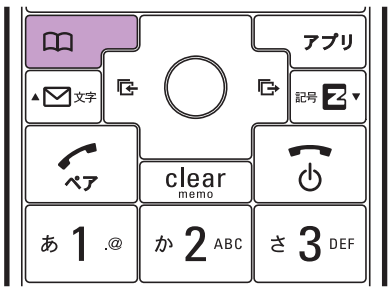

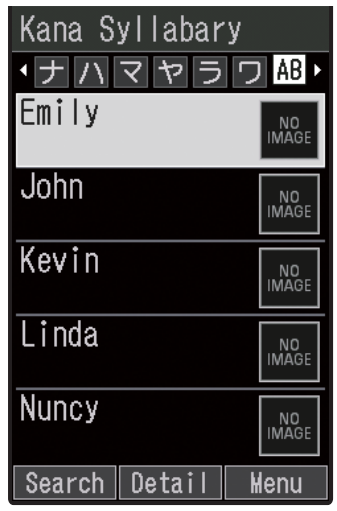

2


Use [multi-function key] to select the person to call and press [center key] [Detail].

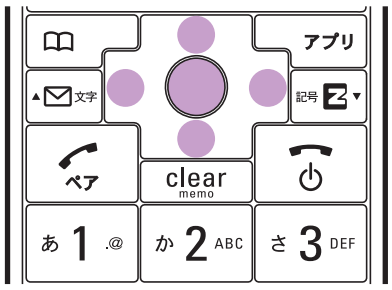




3

Use [multi-function key] to select a phone number and press [call key].

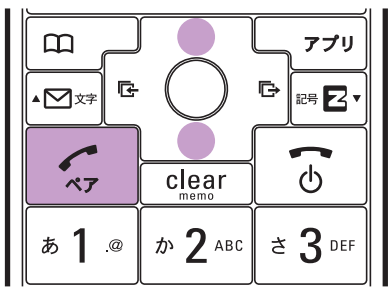


Editing Address Book Data


1 Press while the standby screen is displayed.
Use to select the data to edit and press [Detail].

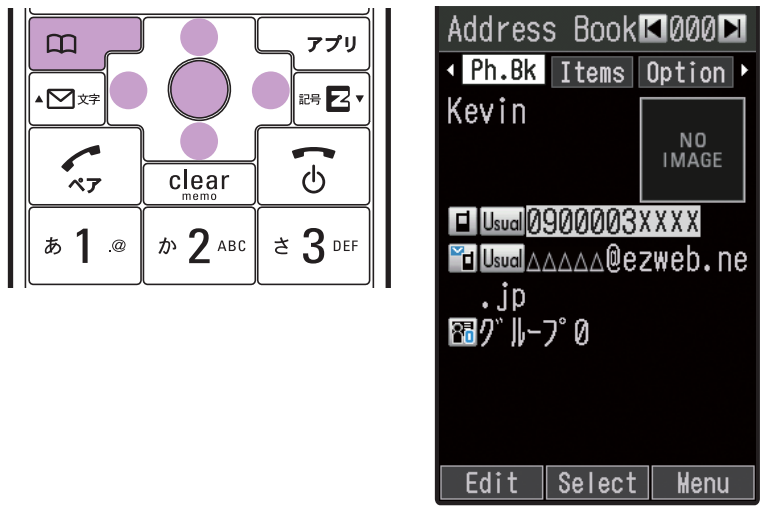


2 Press [Edit].

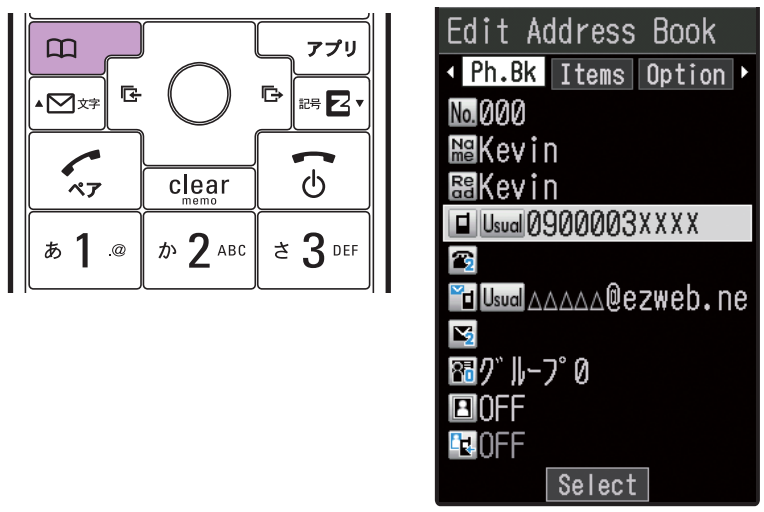

3 Edit data and press [Reg].

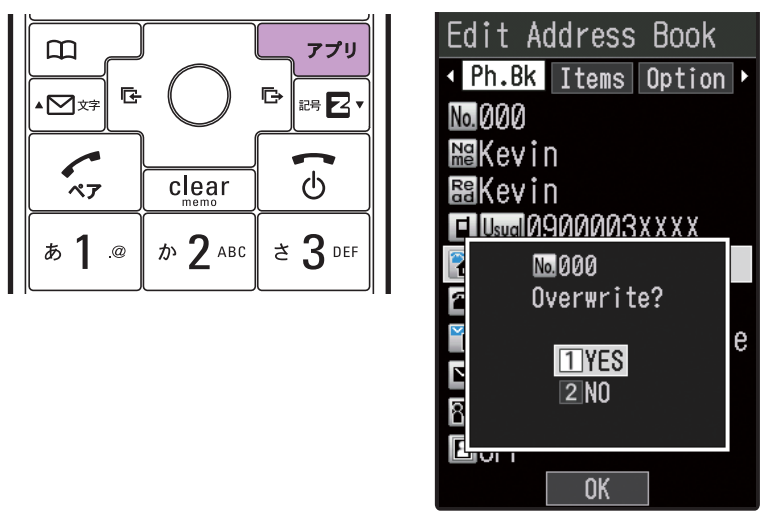

4 Use to select "YES" and press [OK].

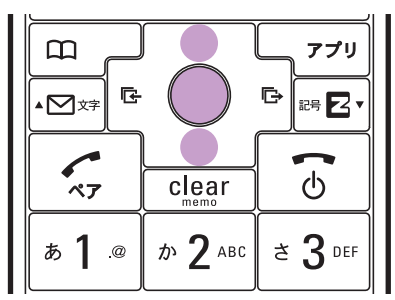

Information


- In case you want to delete the address book, after completing step 1, press [Menu], and select "Erase" → "YES".

Address Book

Registering Data from Outgoing/Incoming Calls


1 **Press [key] while the standby screen is displayed.**


[key]: displays the Outgoing Calls screen.
[key]: displays the Incoming Calls screen.

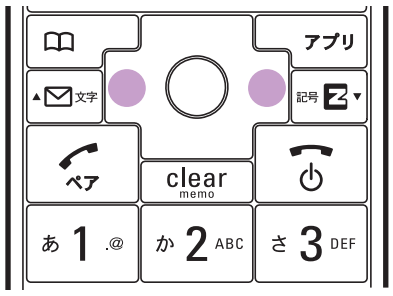





2 **Use [key] to select the phone number to register and press [アプリ] [Menu].**

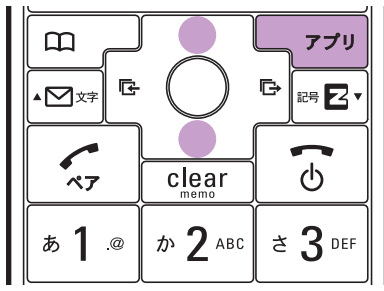

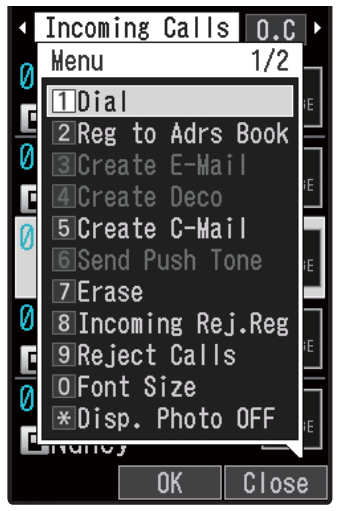


3 **Use [key] to select "Reg to Adrs Book" and press [key] [OK].**

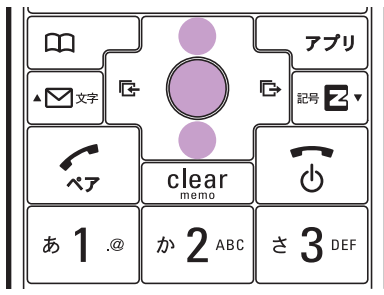

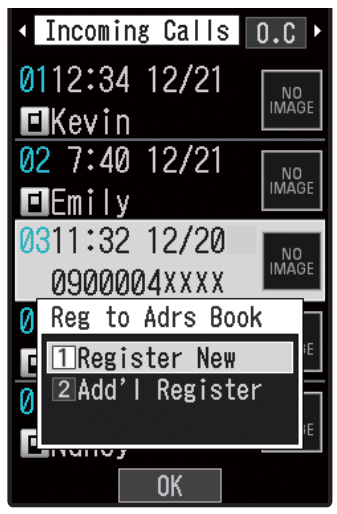

4 **Use [key] to select "Register New" and press [key] [OK].**
Use [key] to select a type of phone number and press [key] [Select].

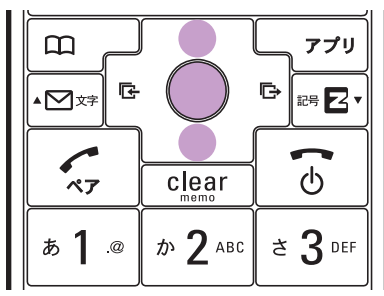




●For details about register data, refer to pages 33 to 34.

Pair Function

You can register the frequent contacts (up to 5 entries) as Popular Contacts to make calls, send mails or use E-Mail My Map easily.


Registering Data as Popular Contact


1 Press [ペア] while the standby screen is displayed.
Use [navigation key] to select a tab of the number to register.

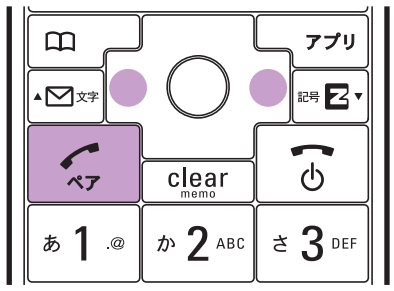





2 Use [navigation key] to select "Reg./Rel" and press [center key] [Select].

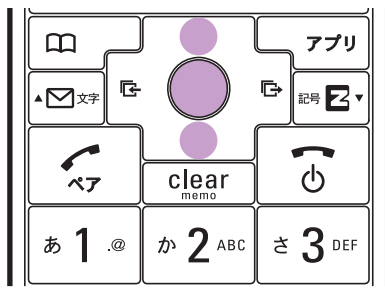

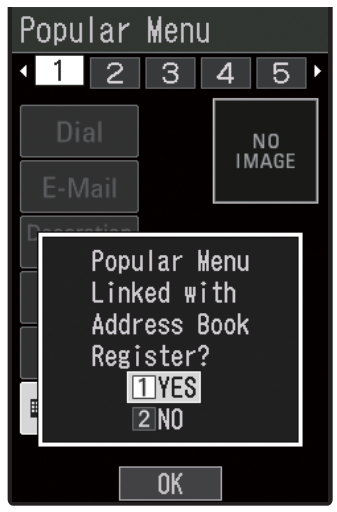


3 Use [navigation key] to select "YES" and press [center key] [OK].

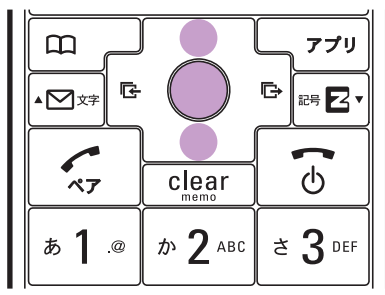

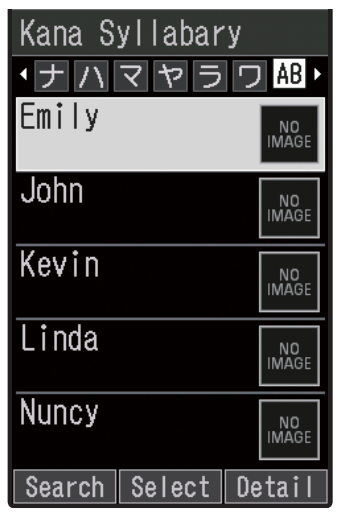

4 Use [navigation key] to select the person to register and press [center key] [Select].




Information

- Select an entry from the address book to register as Popular Contact. Before registration, refer to pages 33 to 34, and register the data of the Popular Contact in the address book.
- In case you selected an address book containing multiple phone numbers or e-mail addresses, the phone number and e-mail address as registered under [Usual] in the address book will be recorded.


Making a Call to the Popular Contact

1 Press [key] while the standby screen is displayed.
Use [key] to select the person to call.

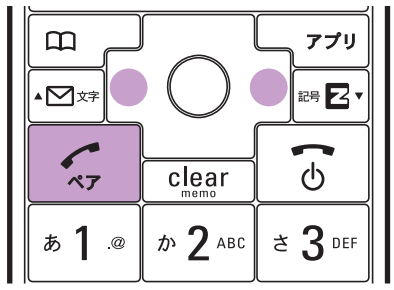



2 Use [key] to select "Dial" and press [key] [Select].

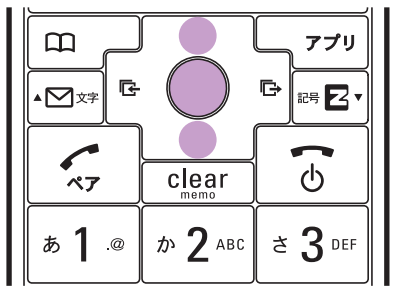


● To send a mail to the popular contact, select "E-Mail" or "C-Mail". Refer to pages 41 to 43 to create/send an E-mail, or pages 49 to 50 to create/send a C-mail.

About E-mail (EZweb subscription required)

Application to the EZweb service is required to use E-mail. Contact au shops or the au Customer Service Center if you did not apply to the service at the time of purchase.
Perform the EZweb initialization before using this service. If you have not performed initialization yet, see page 17.

E-mail is a service for sending/receiving mails to/from E-mail compatible cellphones and personal computers via Internet E-mail addresses. Up to 5000 two-byte (10000 one-byte) characters can be sent in an E-mail message. Still images (photos) and moving images (movies) can also be sent via E-mail.

* For sending and receiving E-mails, a packet communication fee is charged depending upon the amount of data transmitted.

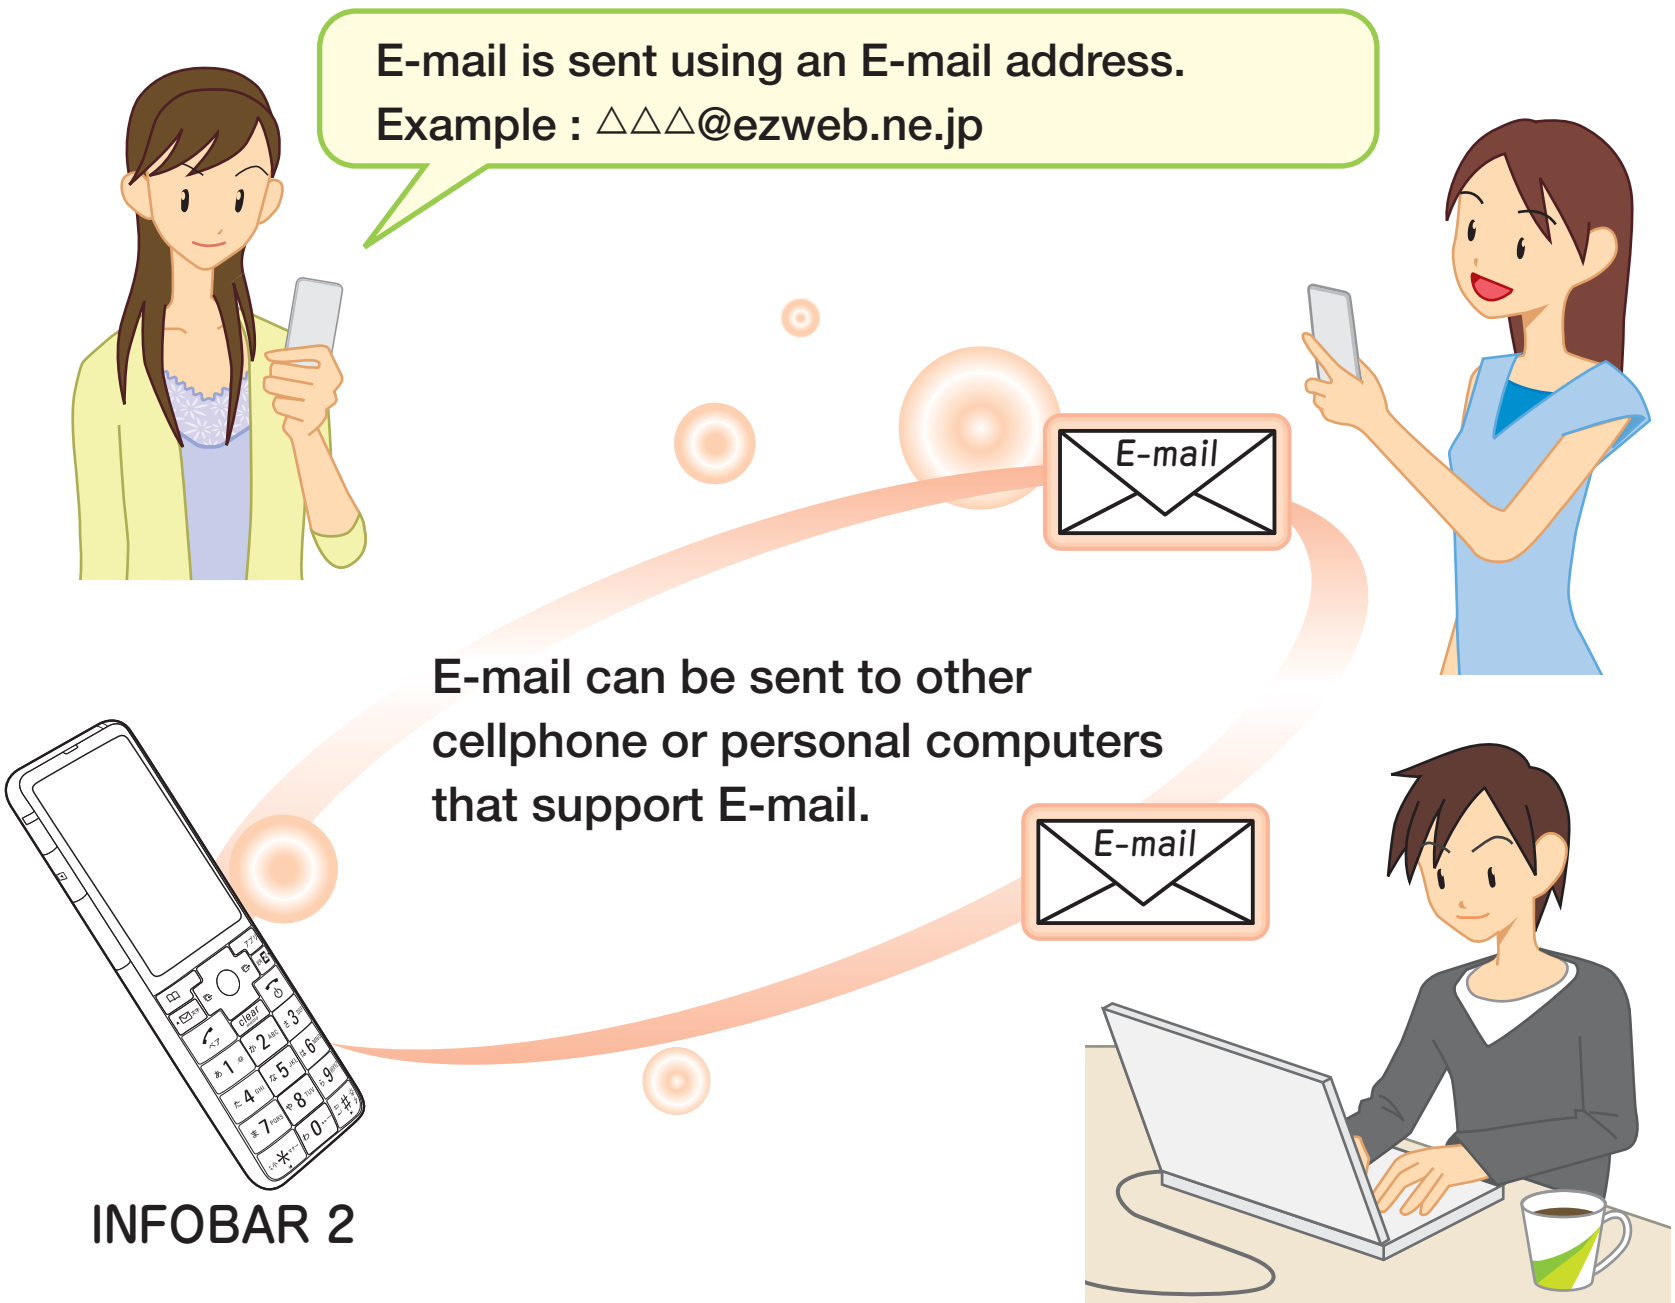


Information


- You can send an E-mail (including Cc and Bcc) to up to 5 E-mail addresses at a time.
- Up to 1000 E-mails (including the number of addresses) can be sent a day.
- Transfer of E-mail with attached data may take time.

Creating and Sending E-mail

1


Press [✉文字] while the standby screen is displayed.

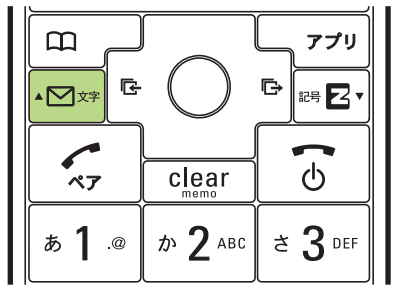


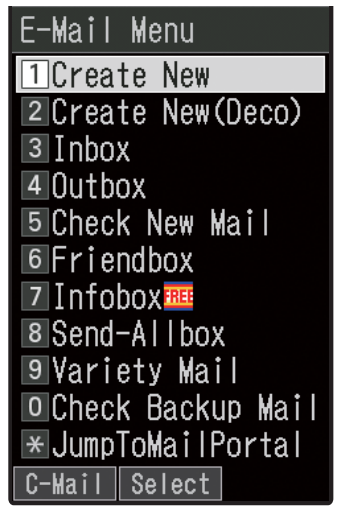

2


Use [ ] to select "Create New" and press [ ] [Select].

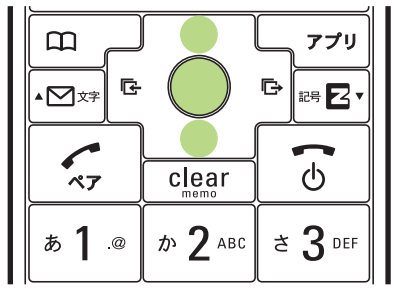


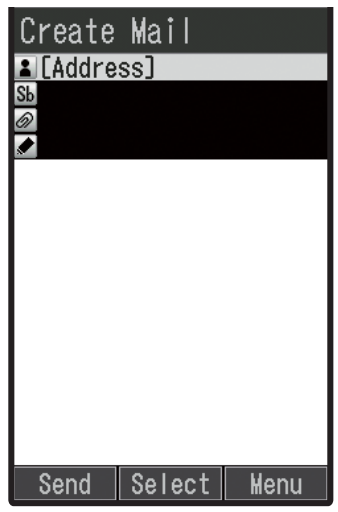

3


Use [ ] to select " (Address)" and press [ ] [Select].

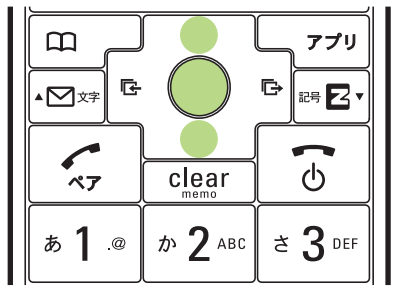

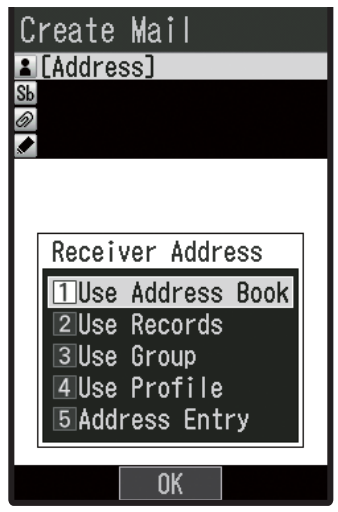

4

Use [ ] to select "Use Address Book" and press [ ] [OK].

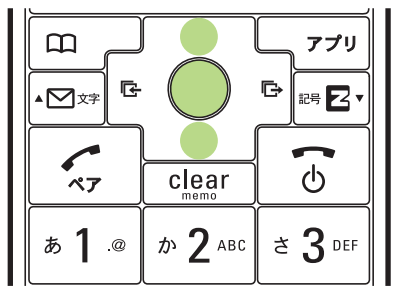



● You can also select the address from "Use Records", or enter the address directly from "Address Entry".


Mail

Continued on the next page

Mail

5


Use to select a recipient and press [Detail].

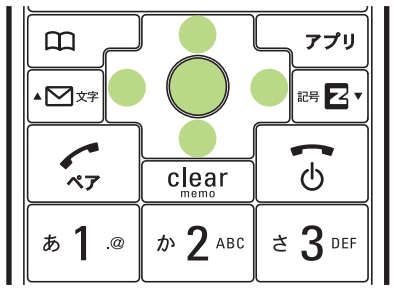




6


Use to select an E-mail address and press [select].

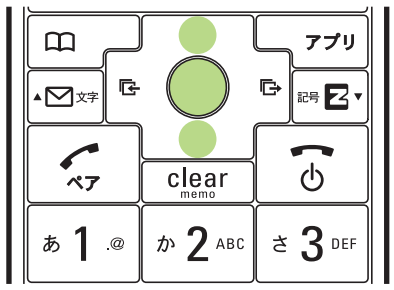


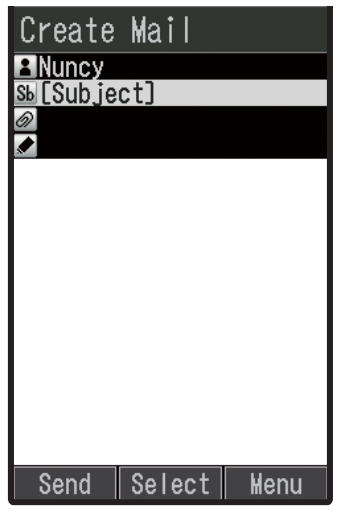

7


Use to select " Sb (Subject)" and press [Select].

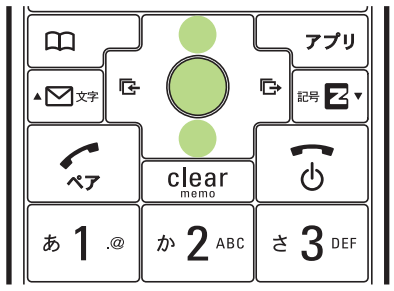

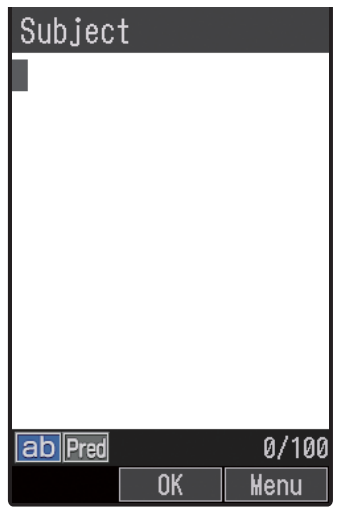


8


Enter the subject and press [OK].

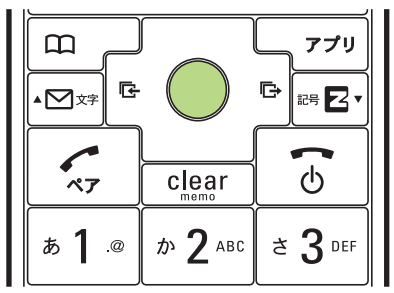




9 Use [nav key] to select " [icon] (Body)" and press [center key] [Select].

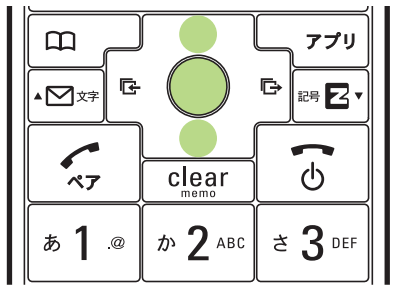

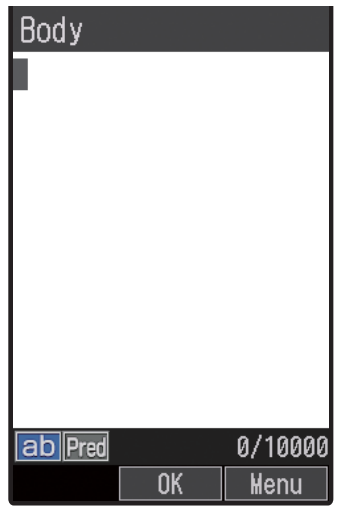


10 Enter the body and press [center key] [OK].

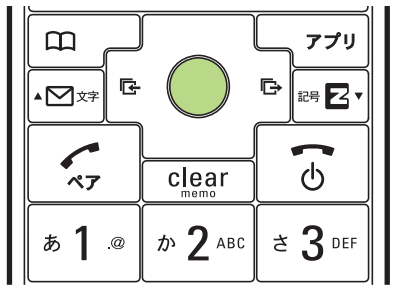



11 Press [key] [Send].

After your E-mail has been sent, the message "Sent" appears on the display.

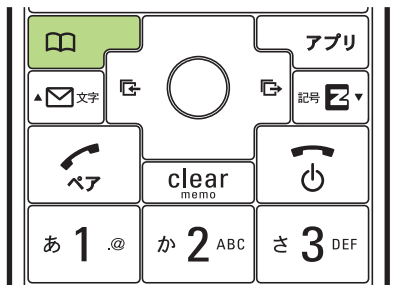

Mail

Reading Received E-mail


When you receive an E-mail:


" New E-Mail" and the number of messages appear on the standby screen.



1


Use to select " New E-Mail" and press [Check].

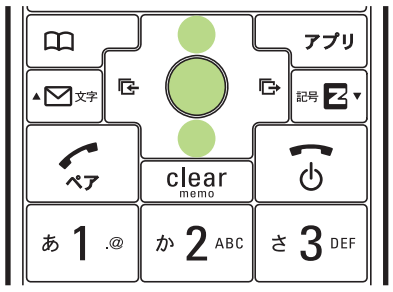

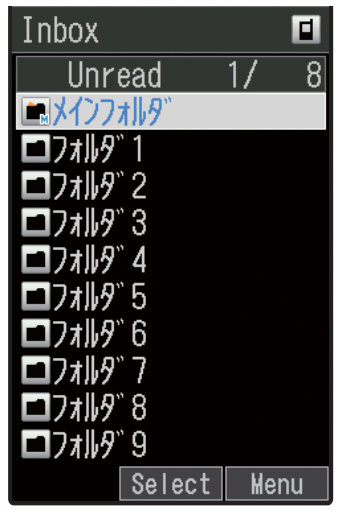

2

Use to select "メインフォルダ (Main folder)" and press [Select].

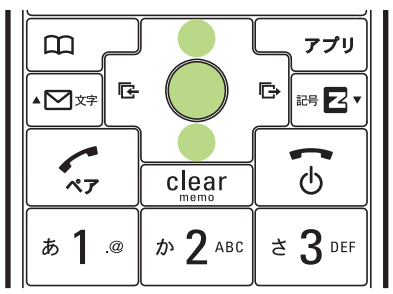




- Icons
  - : Unread mail
  - : Read mail

3

Use to select the unread E-mail and press [Display].

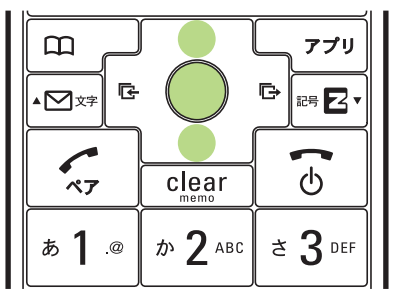



How to view received E-mail:

- Received date and time
- Sender
- Subject
- Body text

Information

- You can read received E-mail by using the following procedure.
  Press while the standby screen is displayed, select "Inbox"→"メインフォルダ(Main folder)", and then press [Display].

Viewing Received Photos

1

Display the received E-mail (page 44) .


Attached data



2

Use to select the attached data and press [Select].


Attachment List screen is displayed.

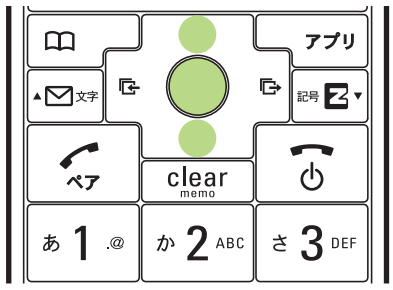



3


Use to select the attached data to receive and press [Receive].

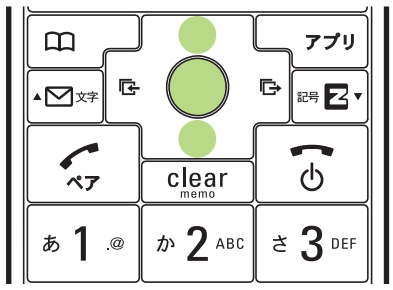




4

Press [Play].

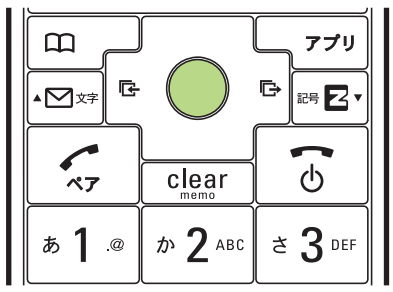

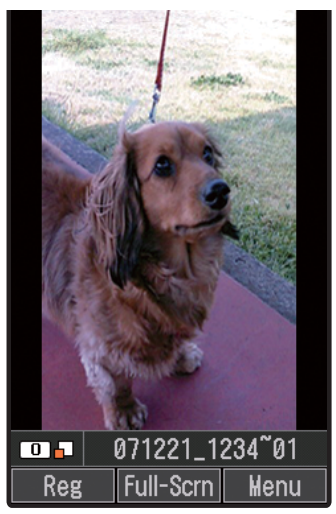

Information

- Depending on the size of the attached data, it can be displayed in the text or played back when you press [Play] in step 3.
- It may take a short while to send/receive mails depending on the data attached to them or the condition of the radio wave in area you are in.

Replying to Received E-mail

1


Display the received E-mail (page 44) .



2

Press [Reply].


"Re:" is attached to the beginning of the subject and the body of the original E-mail is quoted.

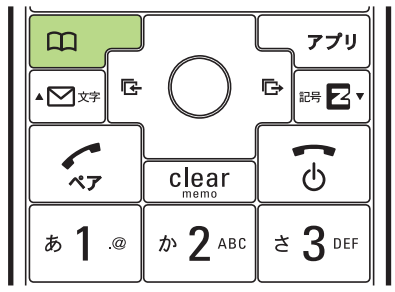



3

Use to select " (Body)" and press [Select].

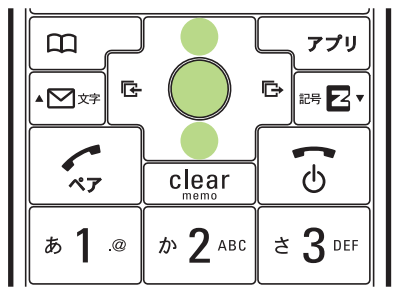

● For the subsequent procedure, see steps 10 and later on page 43.

Blocking Junk Mails

To block junk mails, it is recommended to set メールフィルター (Mail Filter). By selecting "サポート設定 (supportive settings)", you can set メールフィルター (Mail Filter) easily by answering the Inquiry on the screen.

●Setting メールフィルター (Mail Filter)

Example: To access "サポート設定 (supportive settings)"

①Press while the standby screen is displayed.

②Use to select "E-Mail Setup" and press [Select].


③Use to select "Mail Filter" and press [Select].


Use to select "次へ (Next)" and press [Select].

④Enter your Security Code, press [OK] and

Select "送信 (Send)" and press [Select]

⑤Select an item and press [Select]

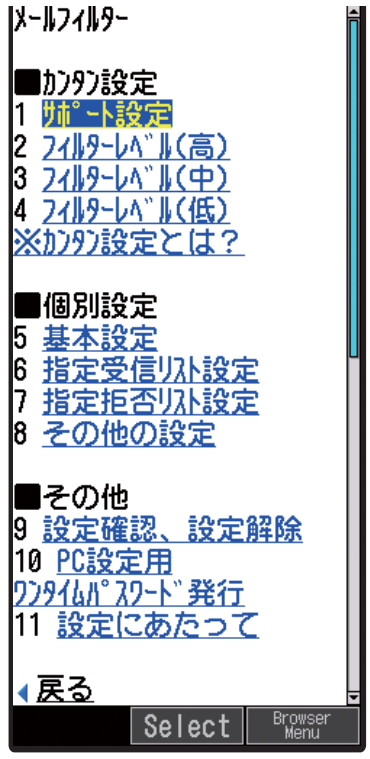

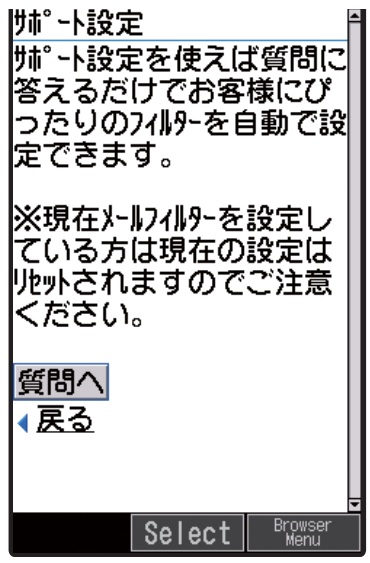

●カンタン設定 (Easy Setup)

ｻﾎﾟｰﾄ設定 (supportive settings)	Sets the filter by answering the inquiry. For the users who would like to check each setting condition.
ﾌｨﾙﾀｰﾚﾍﾞﾙ (高) (Filter level (Strict))	Rejects mails from PC. For the users who send/receive the mails only between cellphones.
ﾌｨﾙﾀｰﾚﾍﾞﾙ (中) (Filter level (Medium))	Selects and blocks the persisting senders. For the users who are annoyed by a stalker or a specific junk mailer.
ﾌｨﾙﾀｰﾚﾍﾞﾙ (低) (Filter level (Normal))	Blocks the Unsolicited Ad Mails or the Spoof E-mails. The filter minimally required.


Information

●You can also block junk mails by changing your E-mail address. Refer to pages18 to 19 to change the E-mail address.

About C-mail

C-mail is a service using phone numbers for sending/receiving mails to/from "C-mail" compatible au cellphones. Each message of C-mail can include up to 50 two-byte (100 one-byte) characters.

* For sending C-mails, a C-mail transmittion fee will be charged.

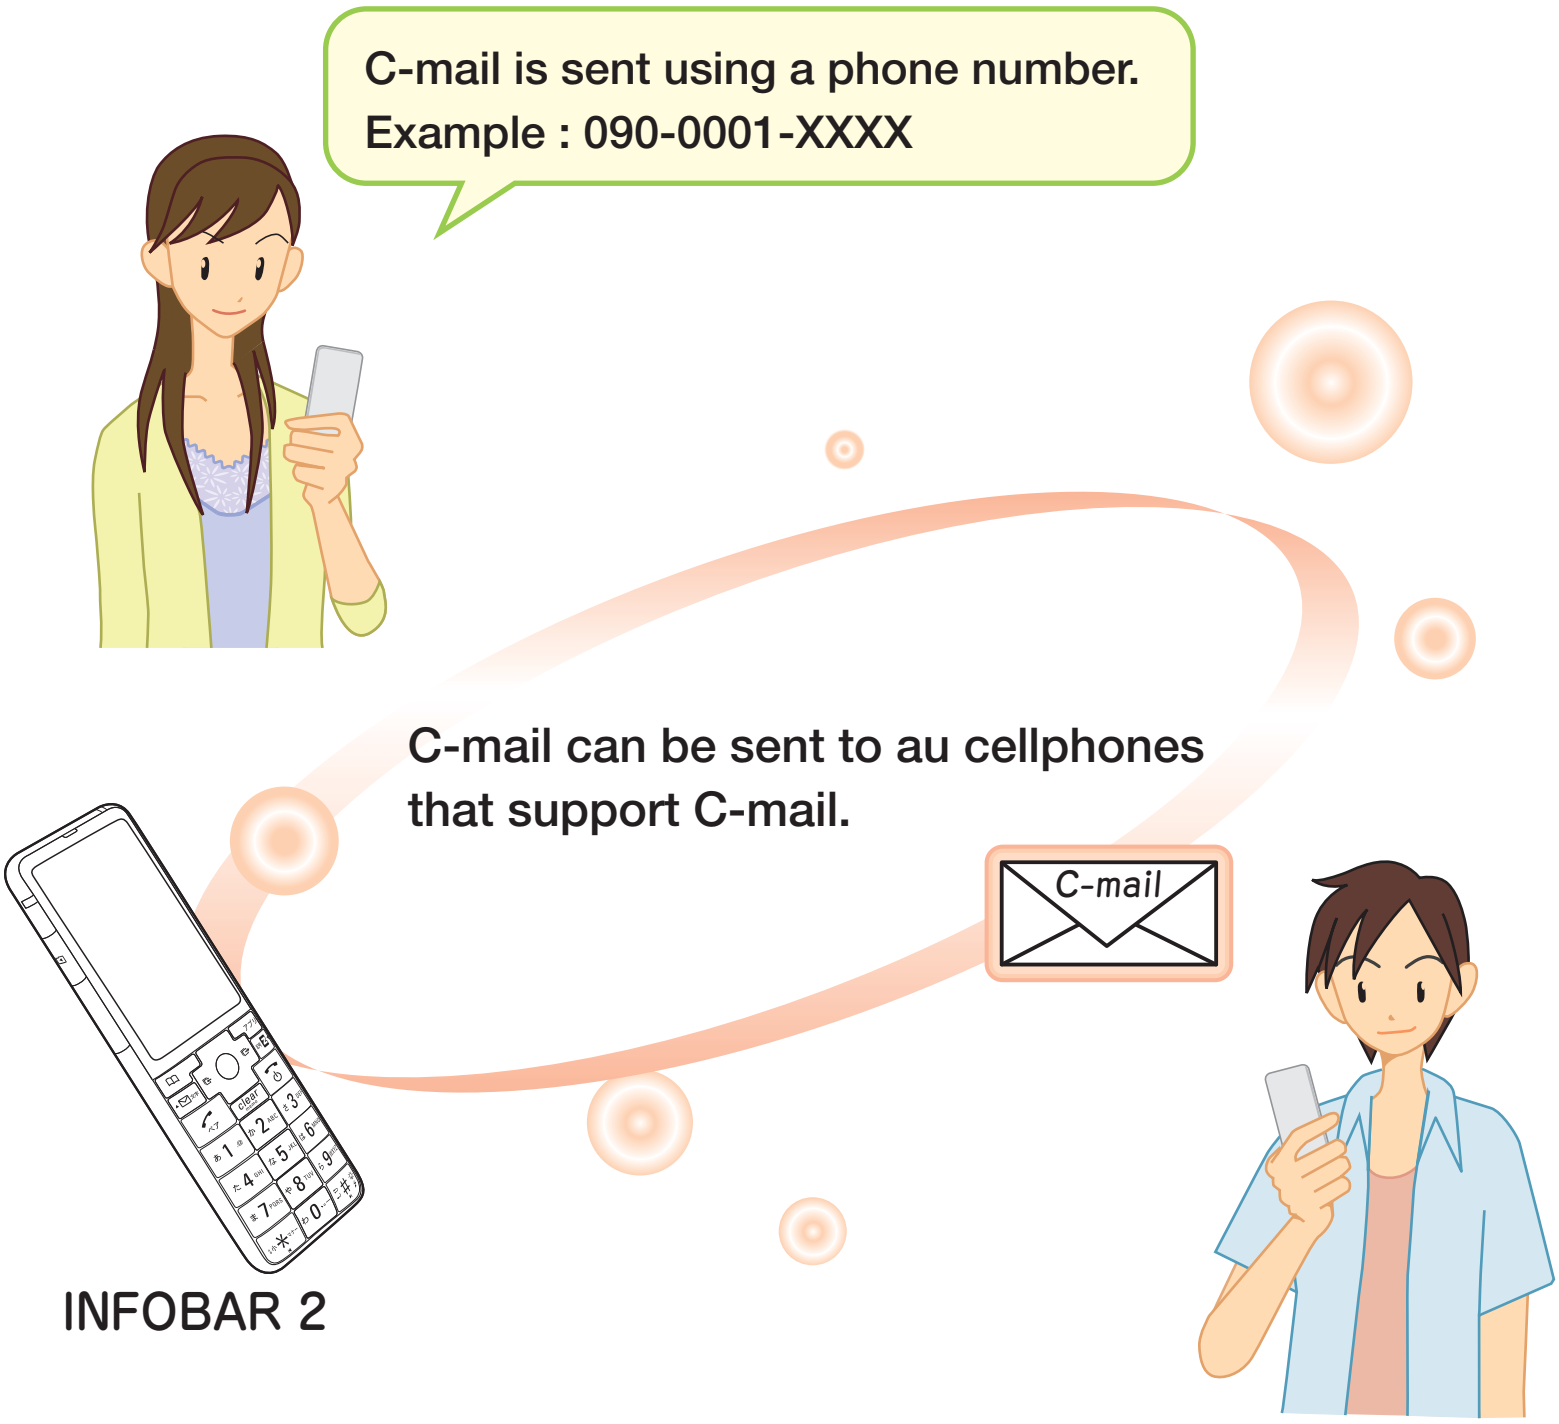


C-mail Safe Block Function


C-mail safe block is a function to reject C-mails that include a URL (http:// □□□, https:// □□□) or a phone number in the C-mail message text.
This function is turned ON at the time of purchase.
However, the C-mail safe block function can be turned OFF in order to receive C-mails that include a URL or phone number.

Creating and Sending C-mail

1


Press [Mail key] for more than one second while the standby screen is displayed.

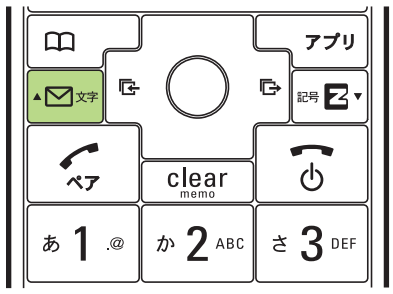


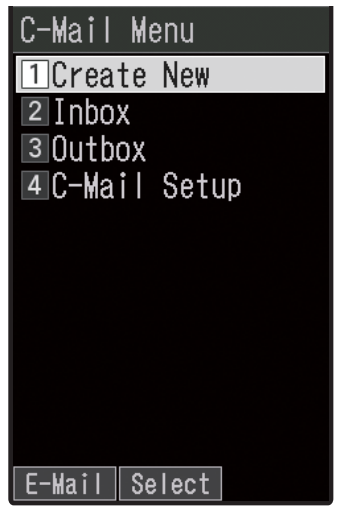

2


Use [navigation key] to select "Create New" and press [center key] [Select].

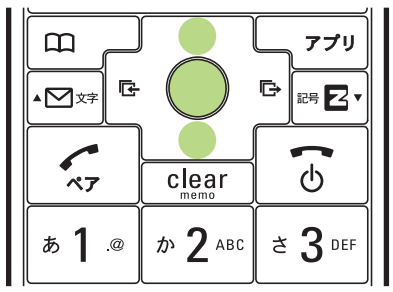

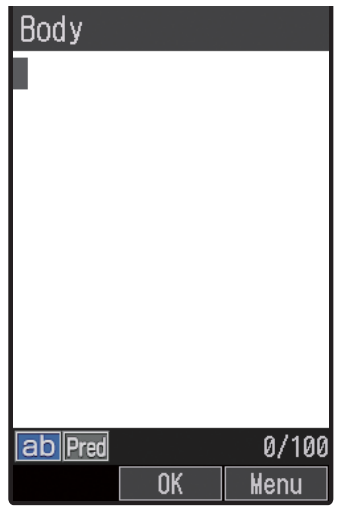

3


Enter the body and press [center key] [OK].

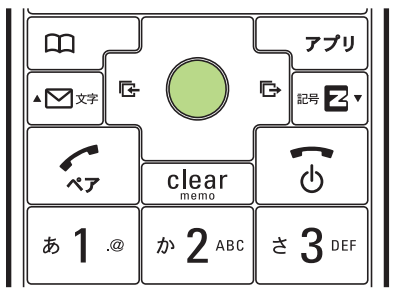



4

Use [navigation key] to select " [Address icon] (Address)" and press [center key] [Edit].

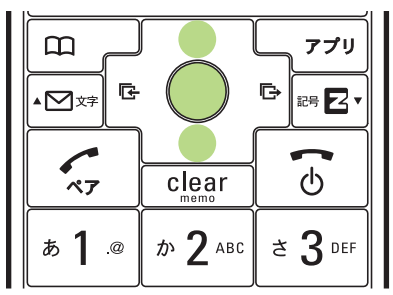





Continued on the next page

5

Use to select "Use Address Book" and press [OK].

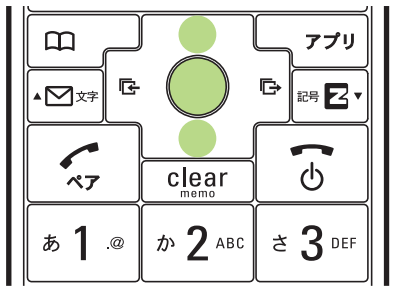


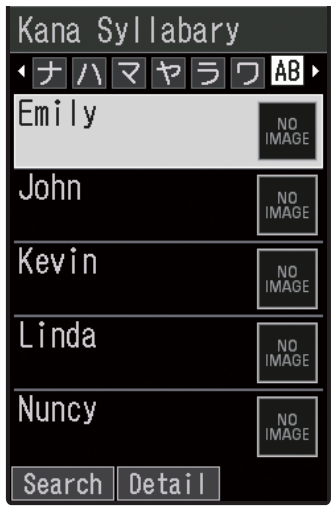


● You can also select the phone number from "Use Records", or enter the phone number directly from "Phone No. Entry".

6


Use to select a recipient and press [Detail].

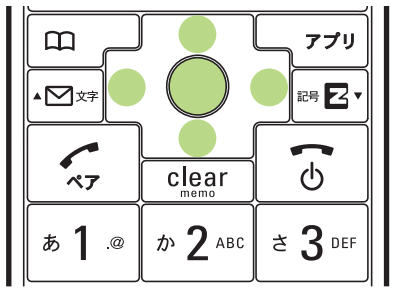

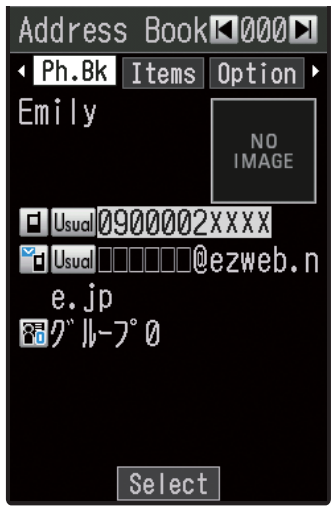

7


Use to select a phone number and press [Select].

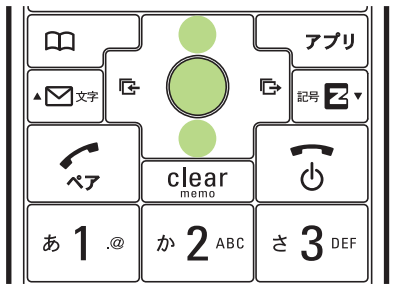



8

Press [Send].

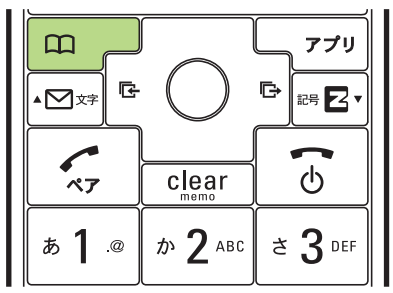


When your C-mail reaches the recipient, the message "Mail Deliverd" appeares on the display.

Reading Received C-mail


When you receive a C-mail:


" New C-Mail" and the number of messages appear on the standby screen.



1

Use [navigation key] to select " New C-Mail" and press [center key] [Check].

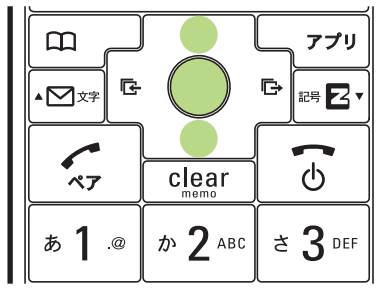


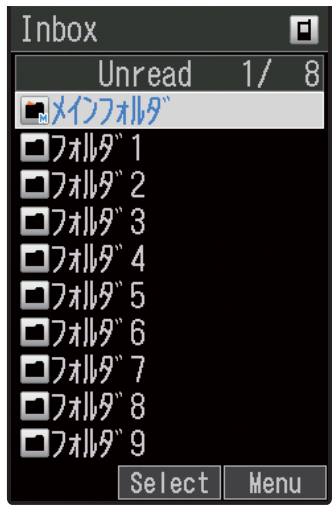

2

Use [navigation key] to select "メインフォルダ (Main folder)" and press [center key] [Select].


●Icons
: Unread mail
: Read mail

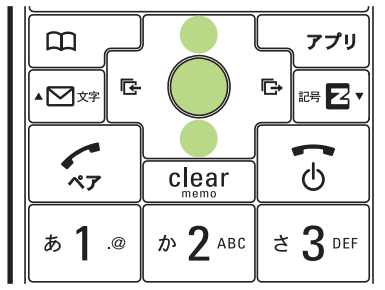



3

Use [navigation key] to select the unread C-mail and press [center key] [Display].

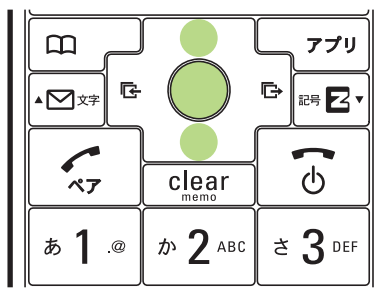



Information

● You can read received C-mail by using the following procedure.
Press [mail key] for more than one second while the standby screen is displayed, select "Inbox" →"メインフォルダ(Main fplder)", and then press [center key] [Display].

What You Can Do with Camera

INFOBAR 2 has 1.97-megapixel camera that allows you to shoot photos or movies. The camera has built-in auto focus function. The auto focus function works when you press the shutter key. Photos and movies which you shot can be sent by E-mail.

Use Shot Photos with INFOBAR 2

You can set the photos which you shot as the standby screen or the screen for incoming calls or register them in the address book.

Send Photos/Movies by E-mail (Page 56)

Photos or movies of maximum size 500KB* can be sent by E-mail.

* Mail transfer may take time depending on the condition of the radio wave in the area you are in.

Use The Character Reader (OCR)

Phone numbers, E-mail addresses, URL and Japanese words can be scanned with the camera. You can register the scanned data to the address book, etc.
INFOBAR 2 has Japanese-English/English-Japanese dictionaries. Translation of the scanned text is available using these dictionaries.

Use Pashamoji® Function

Pashamoji® Memo allows you to transform handwritten messages in a notebook into a photo to attach to an E-mail. Pashamoji® Card is the function that you can create items such as a postcard by combining photos and handwritten messages.


Print Photos You Shot

You can save the photos you shot in microSD™ Memory Card (commercially available) and print them at photo service shops in the same way as the film developing.

How to Hold INFOBAR 2

Do not cover the lens with your fingers. Hold INFOBAR 2 steady with both hands.

■Upright
Photo ：Wallpaper/Wide Wallpaper Size
Movie ：Standard (S/M Size)
High Quality (M/L Size)
Long-Time (M/L Size,QVGA Size(Vert))

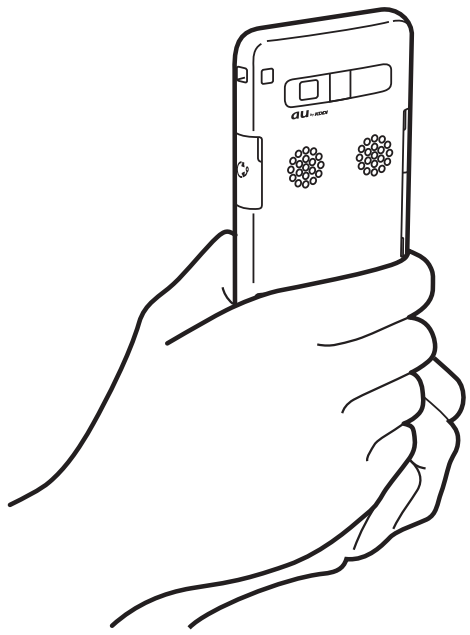

■Landscape-Oriented
Photo ：0.3M/1M/2M Size
Movie ：Long-Time (QVGA Size(Horz),
VGA Size)

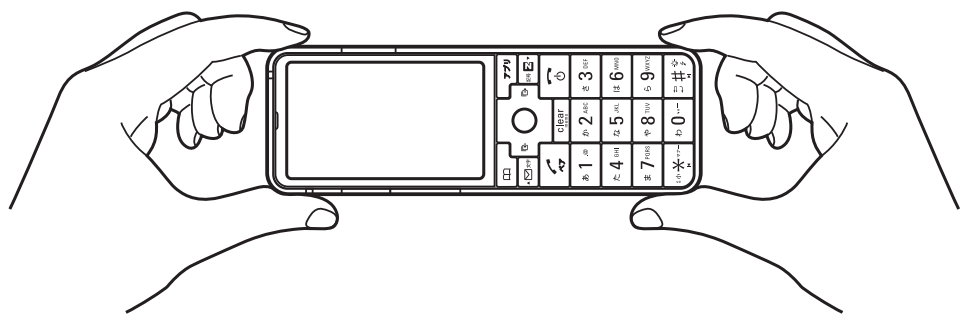


Image-Shooting Posture

Open your feet to the breadth of your shoulders and maintain your back and sides firm to avoid jiggling.


To Prevent Jiggling

- Hold INFOBAR 2 firmly with both hands. Do not move your INFOBAR 2 after pressing the shutter key until you hear the shutter sound and the preview screen appears.
- Using the Self-Timer allows you to shoot photos without pressing the shutter key, Usiwhich prevents jiggling.

Shooting Photo

1

Press while the standby screen is displayed.
Use to select "Camera" and press [Select].
Use to select "Photo(Wallpaper)" and press [Select].

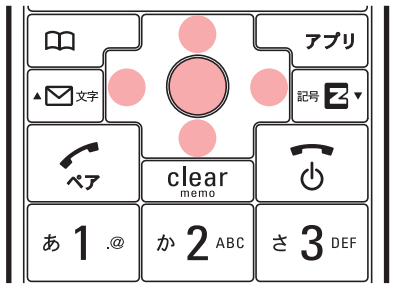




The view seen through the lens appears.

- You can also take photos by selecting "Photo(Digitalcam)".

2

Point the lens at the subject and press [Shoot].

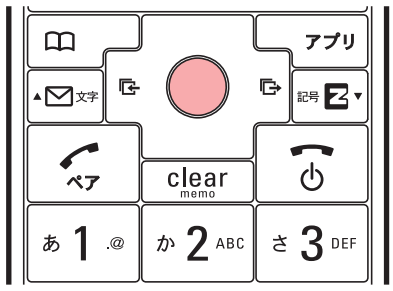




The auto focus works and you will hear the shutter sound, then a photo is shot.

- Press clear to re-shoot the photo.

3

Press [Save].



Title of Photo You Shot

The Photo Size is set to "Wide Wallpaper" at the time of purchase.


Photo Size*1	Title of a photo	Where to save
Wallpaper/Wide Wallpaper Size	year + month + date + time + minute + serial number	"Photo Folder" of INFOBAR 2
0.3M / 1M / 2M Size	ST33 + serial number	"DSC Folder" in microSD™ Memory Card*2


Example: The first photo shot at 12:34 on December 21, 2007
Wallpaper/Wide Wallpaper Size: 071221_1234˜01
0.3M/1M/2M Size: ST330001

*1: Press while the live image is on the Display to change the Photo Size.
*2: Photos are saved in "Photo Folder" when a microSD™ Memory Card(commercially available) is not inserted, or there is not enough space available in the microSD™ Memory Card.


Viewing Photos


1 Press [Center key] while the standby screen is displayed.

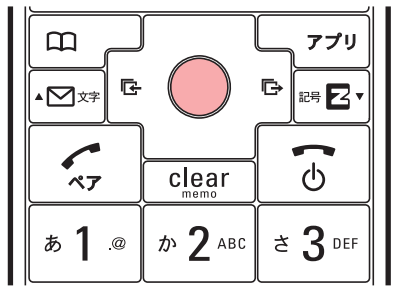

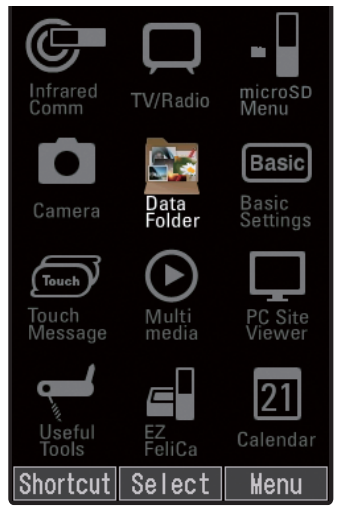



2 Use [Navigation key] to select "Data Folder" and press [Center key] [Select].

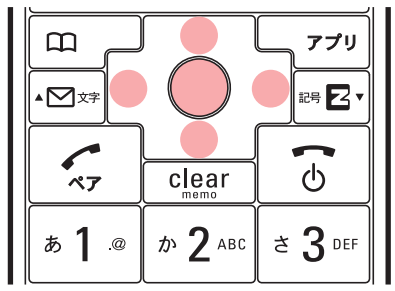

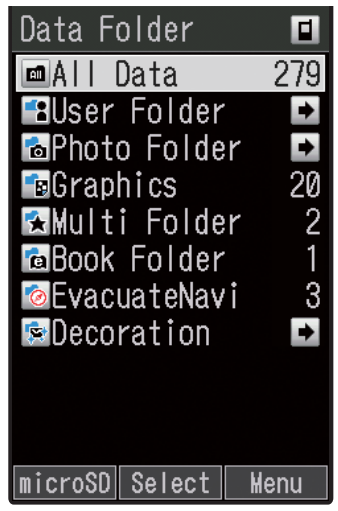



3 Use [Navigation key] to select "Photo Folder" and press [Center key] [Select].
Use [Navigation key] to select a folder containing your desired image and press [Center key] [Select].

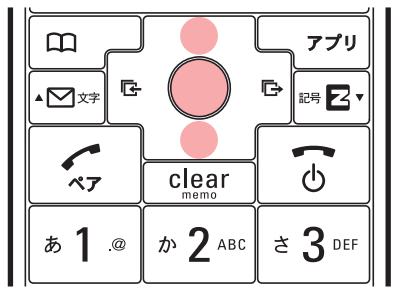

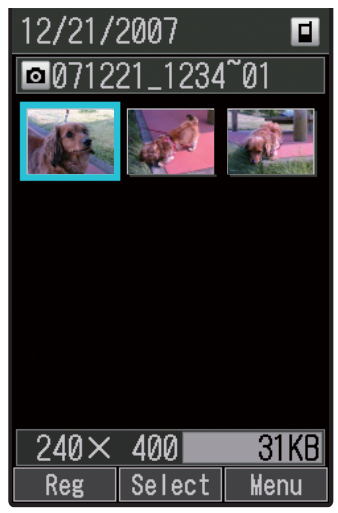


4 Use [Navigation key] to select an image and press [Center key] [Select].

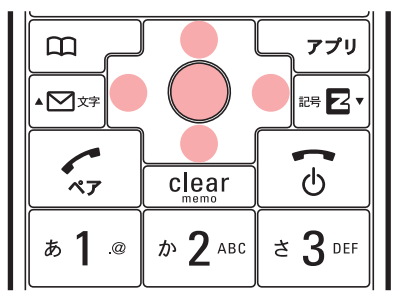

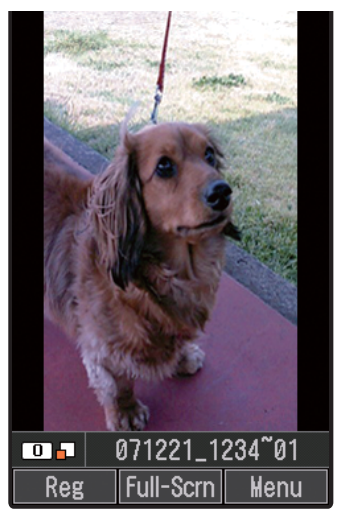

Attaching Photo to E-mail Message


1 **Shoot a photo (page 54) .**

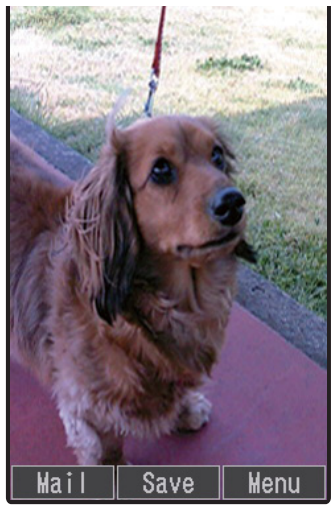

2 **Press [Mail].**
Use to select "Attach to E-Mail" and press [OK].

The Create Mail screen appears with a taken photo attached.

●For the subsequent procedure, see steps 3 to 11 of on pages 41 to 43.

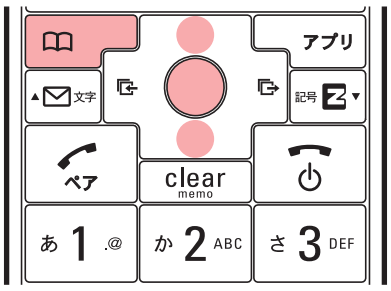




Camera

About EZweb

Application to the EZweb service is required to use the service. Contact au shops or the au Customer Service Center if you did not apply to the service at the time of purchase. Perform the EZweb initialization before using this service. If you have not performed initialization yet, see page 17.


EZweb is a service that provides you with information to enjoy the Internet via cellphones.
You can obtain Chaku-Uta-Full®, the latest news and other contents from information sites.

* When connected to EZweb, a packet communication fee will be charged for data sent or received, corresponding to the amount of data transmitted, regardless of connection time.

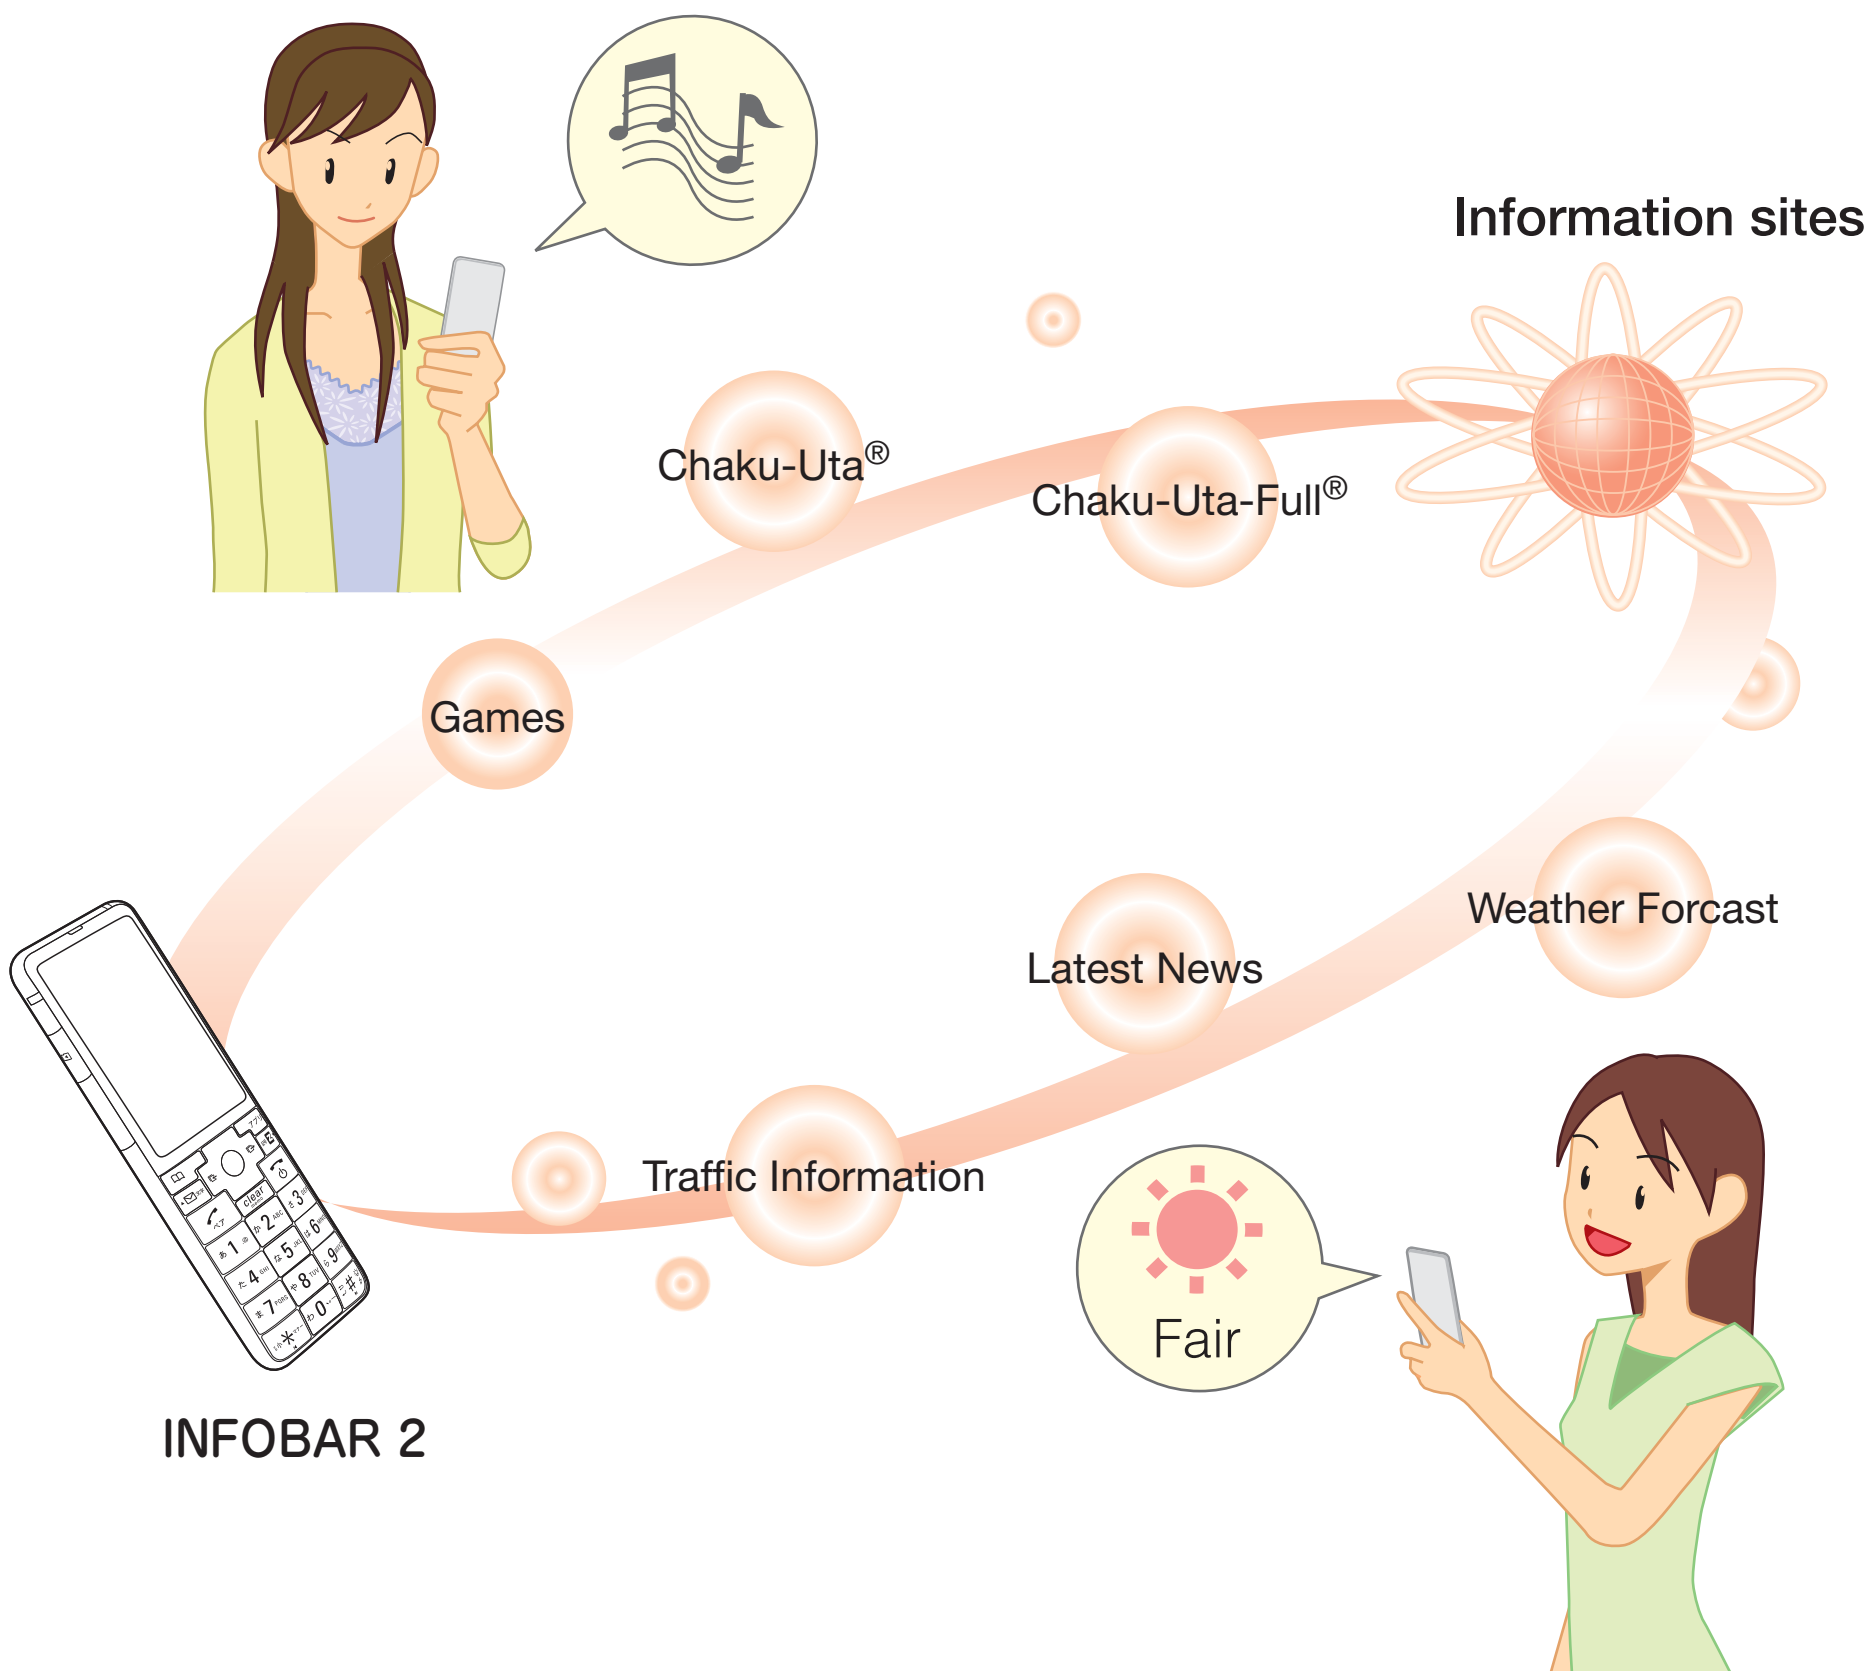


Displaying au one Top

1 Press while the standby screen is displayed. Use to select " (EZweb)" and use to select "au one Top" and press [Select].



au one Top

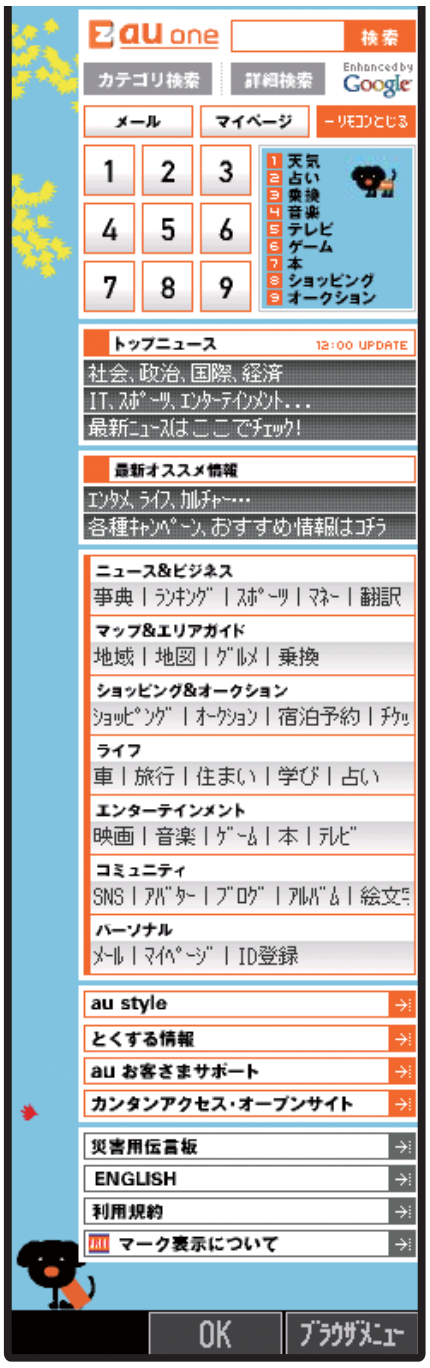

キーワード検索機能 (Keyword search function)
Provides a search engine for information available by the keyword entry.

メール (Mail)
Providing another e-mail address for PC usage.

マイページ (My Page)
Provides the various information, useful tools, or large storage spaces, which are appropriate for your selection of the services.

①天気 (Weather) ②占い (Fortune-telling) ③乗換 (Transfer information) ④音楽 (Music) ⑤テレビ (TV program) ⑥ゲーム (Games) ⑦本・コミック (Book・comic) ⑧ショッピング (Shopping) ⑨オークション (Auction)

トップニュース (Top news)
The latest top news topics are delivered by an automatic update.

最新オススメ情報 (Latest recommended information)
Introduces featured topics or contents information of various categories.

ニュース&ビジネス (News & Business information)
Provides the latest information such as news, weather, or useful information for business.

マップ&エリアガイド (Map & Regional guide)
You can search the connection of train, map or other local information.

ショッピング&オークション (Shopping & Auction information)
Provides information about shops where you can purchase goods with your cellphone, and the information about the auction where you can sell or buy easily.

ライフ (Useful daily life information)
Provides useful information for daily life.

エンターテインメント (Entertainment information)
Provides the latest information about games, music, books, and information on hobby or entertainment trends.

コミュニティ (Community information)
Provides interesting, convenient and fun information on SNS and blogs, etc.

パーソナル (Personal information)
Providing another e-mail address, information and tool suiting for customer usage style and ID registration and so on, for convenient usege of variety au-one services.

au style
Introduces au-recommended information and sites.

とくする情報 (Valuable information)
Offers gifts and free valuable information to EZweb service subscribers.

auお客さまサポート (au Customer Support)
Provides phone bills, application forms, au online manuals, and au announcement.

カンタンアクセス・オープンサイト (Simple Access & Open Site)
Introduces カンタンアクセス・オープンサイト (Simple Access & Open Site).

災害用伝言板 (Disaster Message Board)
Registers/checks the safety information in disasters.

ENGLISH
Introduces English sites.


Information

- It may take some time to display the au one Top.
- The layout and contents of the screens in this manual are examples and are subject to change.

Bookmarking Frequently-Accessed Site

1


Display the site to bookmark and press アプリ [Browser Menu].

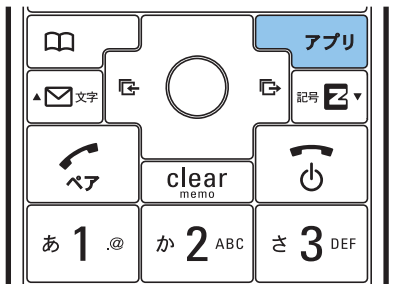



2

Use to select "New bookmark" and press [Select].

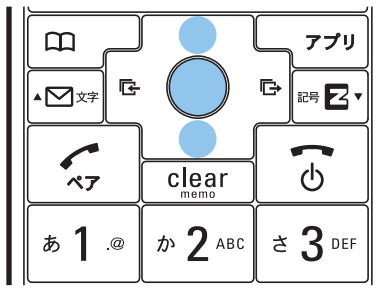




3

Press アプリ [Reg].

●Some sites cannot be bookmarked.

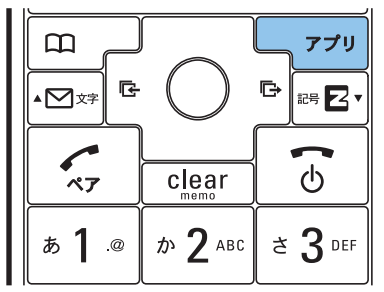



Information

●Up to 100 sites can be bookmarked.


Accessing Bookmarked Site

1 Press while the standby screen is displayed.
Use to select " (EZweb)".

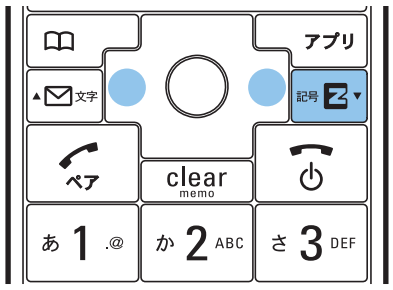

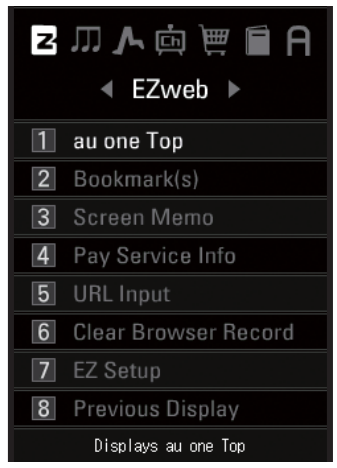


2 Use to select "Bookmark(s)" and press [Select].

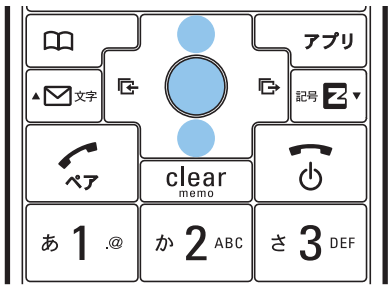




3 Use to select a site and press [Jump].

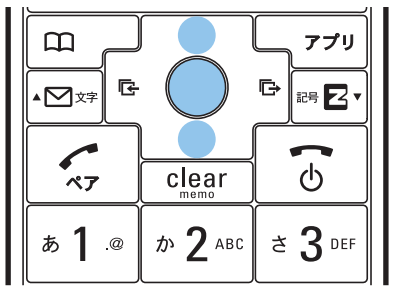


Viewing Charge

Approximate charges for your calls and transmission can be viewed.


1 Press while the standby screen is displayed and press twice.

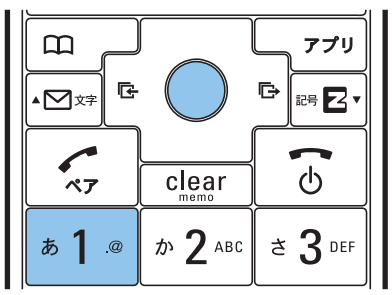


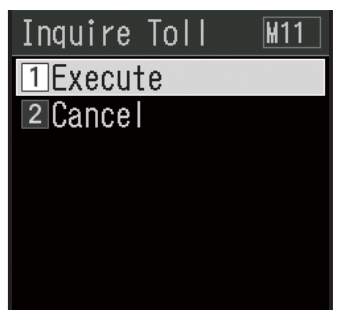

2 Use to select "Execute" and press [Select].

Select the item you want to confirm.

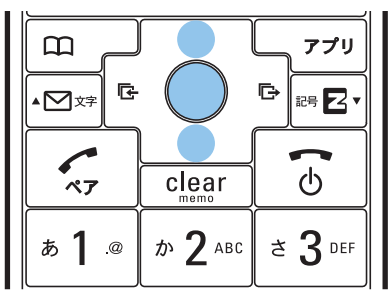

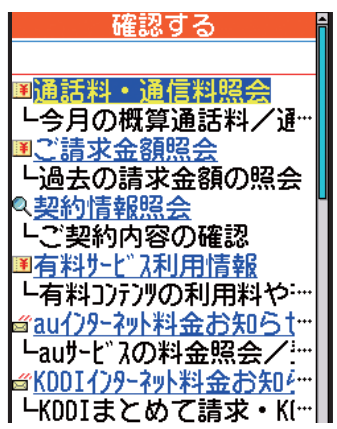



Downloading Chaku-Uta®/Chaku-Uta-Full®

1 Display the au one Top (page 58).





2 Use to select "カテゴリ検索 (Search category)" and press [OK].

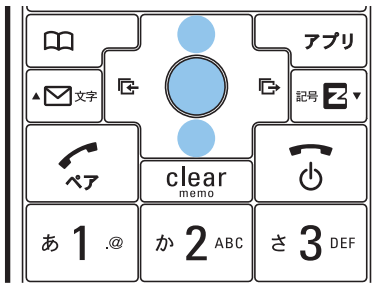

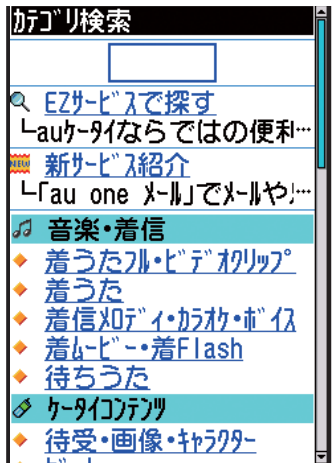

3 Use to select "着うた (Chaku-Uta)" or "着うたフル·ビデオクリップ (Chaku-Uta-Full / Video Crip)" and press [Select].

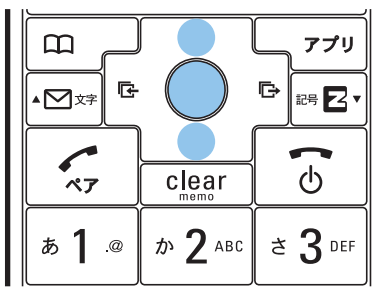

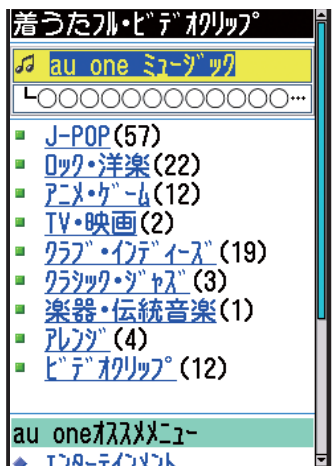

4 Select the content (information site) to use and download data.

●When you access a site requiring additional information fee,input your EZ Password or Premium EZ Password.
EZ Password/Premium EZ Password is the 4-digit number that you have filled in the application form at the time of purchase.

Information


- The communication fee and information fee are charged for downloading Chaku-Uta® or Chaku-Uta-Full® from the paid contents.
- The layout and contents of the screens in this manual are examples and are subject to change.

EZ News Flash (EZweb subscription required)

EZ News Flash offers information distribution service of updated news, weather, fortune-telling to standby screen of your mobile phone at no charge. Updated news is always indicated on the screen of your mobile phone as a ticker, and you can browse detailed information by selecting.
You can use EZ News Flash immediately by easy setting after initialozing of EZweb(page17). All distributed information is free of charge.

* When updating by manual operation or connecting EZweb site, packet communication fees may required.

What You Can Do With EZ News Flash

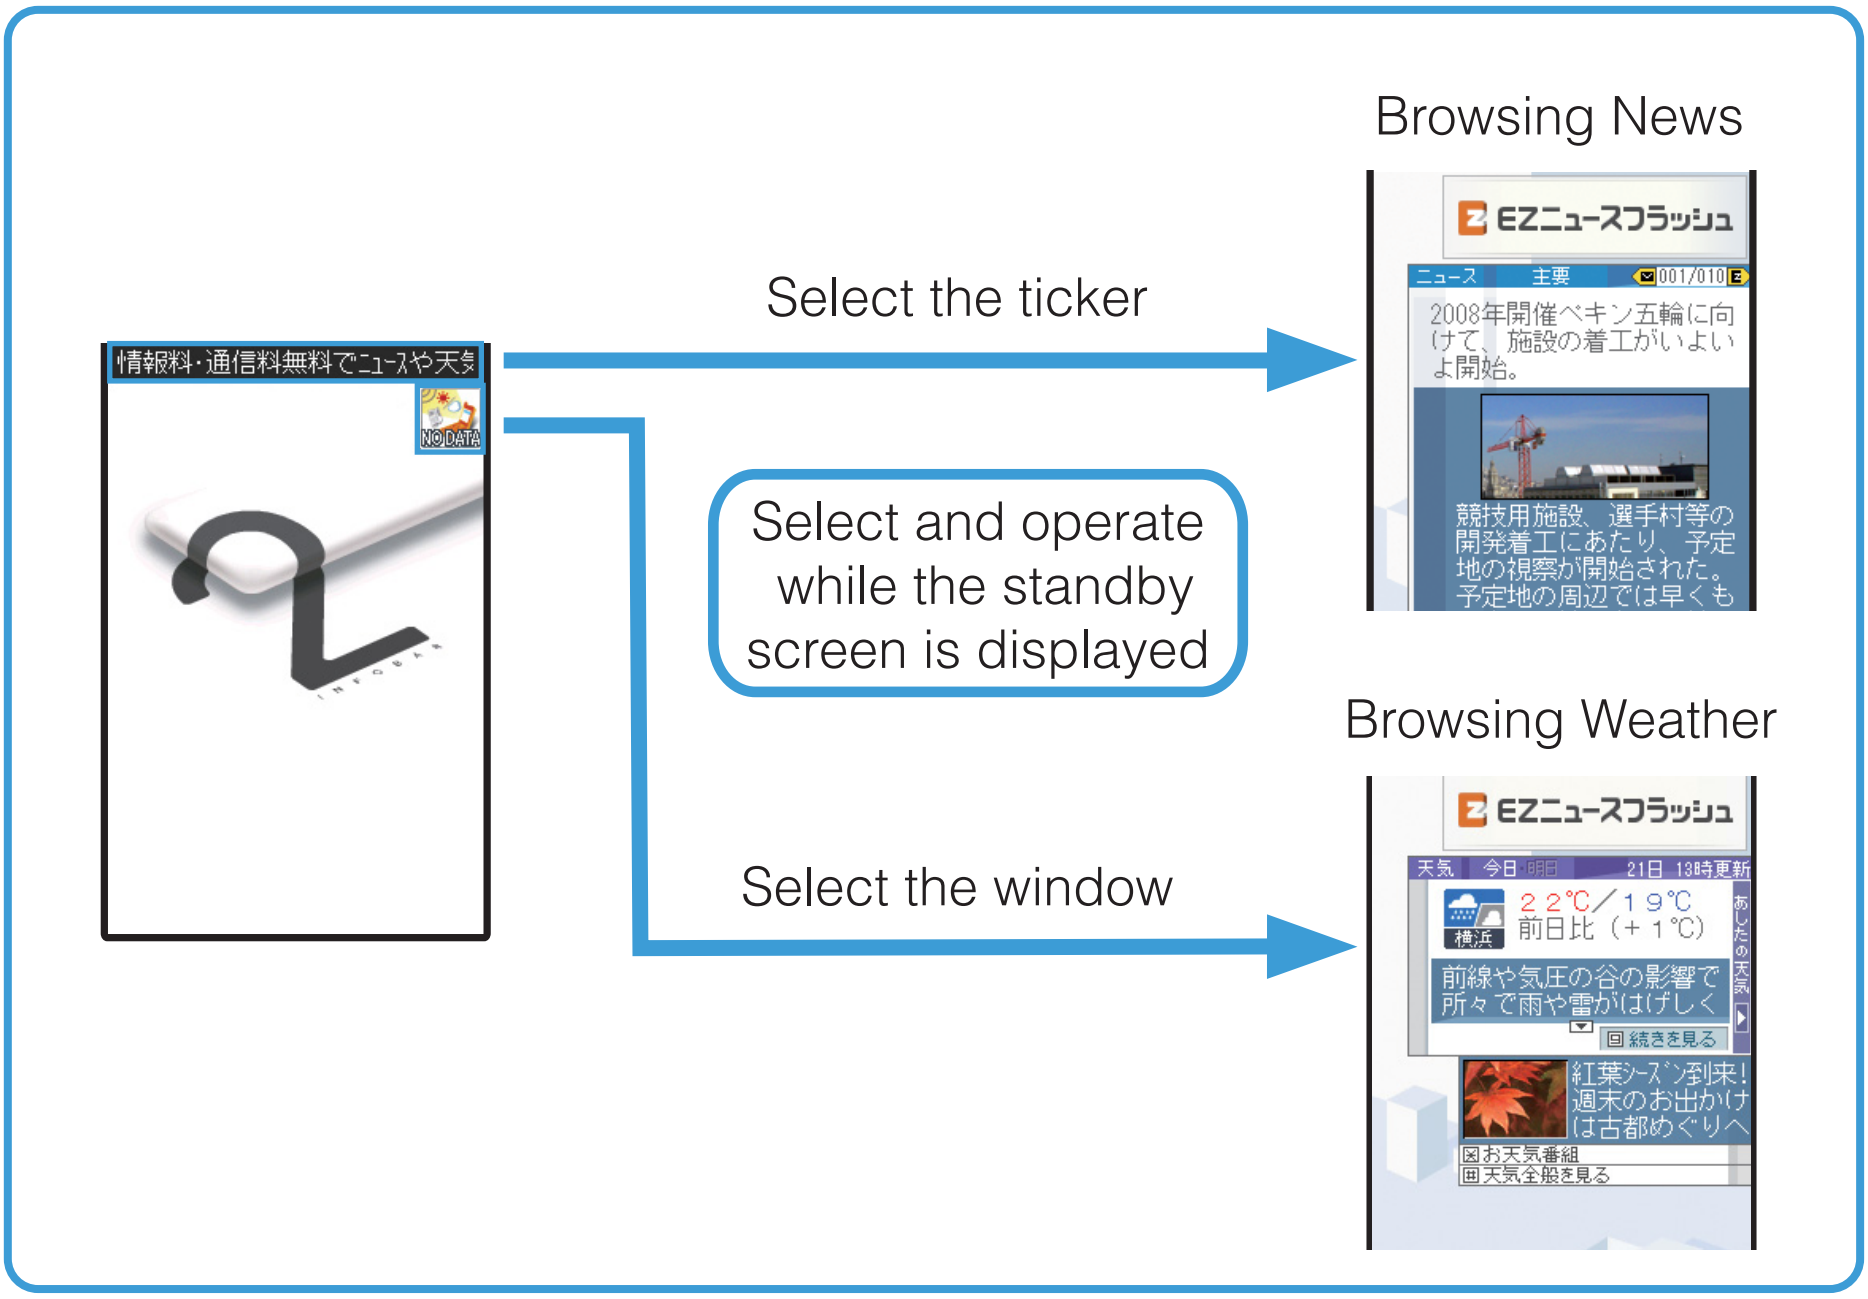

Information


- The information is automatically updated at regular time intervals. [icon] is indicated while information is being received.
- You can confirm the contents of changed items in My Page, when you enable to use the au one My Page and select "My Page" from top page of EZ News Flash.


Enable to use EZ News Flash

You can enable to use EZ News Flash easily(at no charge).
Enable to use EZ News Flash, after operating of "Initializing E-mail and EZweb settings"(page17)

1

Press while the standby screen is displayed. Use to select ticker and press [Select].

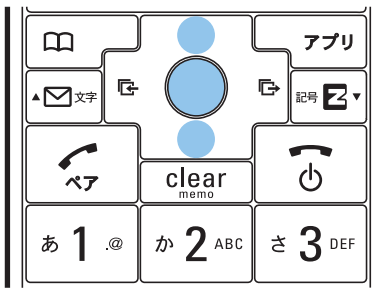


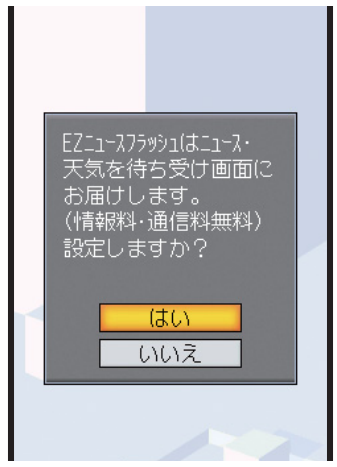


2

Use to select "はい (Yes)" and press [選択 (Select)].

Setup is completed.
After you complete and return to standby screen, the message "次回配信までしばらくお待ちください" is indicated on ticker.

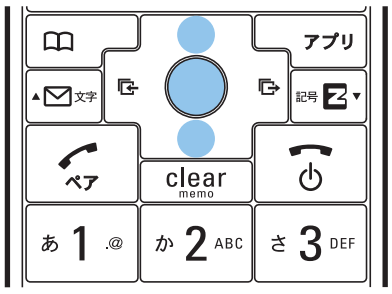

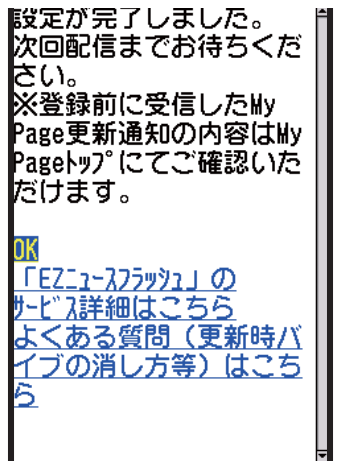

●Disable to use EZ News Flash

Disable to use EZ News Flash ,operate as follows.

①Press while the standby screen is displayed. Use to select ticker and press [Select].
②Press [ﾒﾆｭｰ (Menu)]. Use to select "サービス設定解除 (Service Termination)" and press [選択 (Select)]. Use to select "YES" and press [選択 (Select)].
③Use to select "解除する (Terminate)" and press [Select] and press [Select].
Disabled to use EZ News Flash and news will not be distributed.

●Changing for setting of receiving notification

You can change the setting of notification for News Flash updating, vibrator and receiving indicator.

①Press 2 1 6 while the standby screen is displayed. Use to select "ON" and press [set].
②Select item and set.

* If update notification is not necessary, set "OFF".

EZ Navi (EZweb subscription required)


What You Can Do with EZ Navi

EZ Navi offers convenient location information services (GPS).

* When using EZ Navi service, a packet communication fee will be charged.
Some seivice will require extra charging of communication fee.




Standby Screen

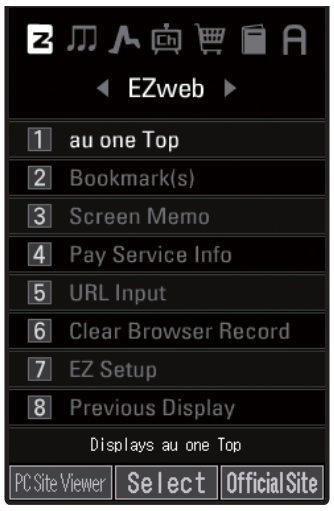

EZ Service Menu

Use to select " (EZnavi)".

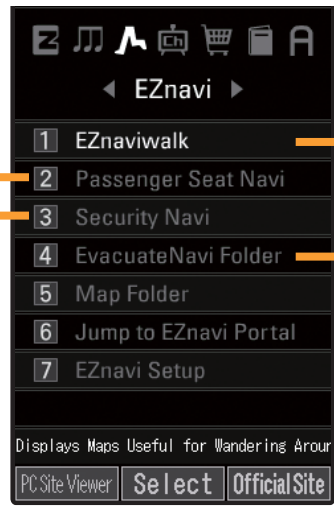


EZnavi Menu

"Passenger Seat Navi" for drive route confirmation by front passenger

"Passenger Seat Navi" provides the person on the passenger seat with the way to the destination by voice directions and maps.



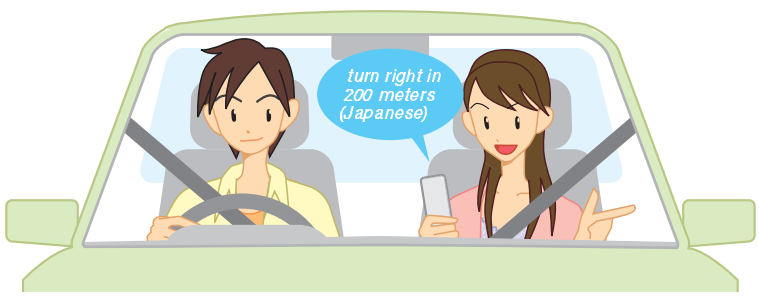

"Security Navi" to check where your child is



The "Security Navi (安心ナビ)" application is composed of 3 functions: "いつでも位置確認 (Auto Position Search)" (monthly charge), "位置確認メール (Position Search Mail)" (free of charge) and "エリア通知 (Area Message)" (free of charge).

With these functions, you can check the location of an au cellphone that supports Position Search and/or have a message automatically sent to a specified au cellphone when you enter (or are in) or leave (or are out of) a pre-determined area during a preregistered time period.



"EZ Navi Walk" for when you go out

Displays various menus that are useful when you are out.



ナビをする*1 (Navigation)	Provides the navigation (voice directions) to the destination, or you can search for shops or facilities around your present location.
地図を見る*1 (無料) (View Map (free))	You can view a map of your present location or any other location.
乗換検索する*1 (無料*2) (Search Connection*1 (free)*2)	You can search the connection of train, timetable and railway information.
道路情報を見る (View Traffic Info)	Check real-time traffic information on the major roads all over Japan.
もっとナビウォーク (EZ Navi Walk)	Provides explanations about each setting or search on PC.
インフォメーション (Information)	You can register for memberships or make inquiries.


*1: You can also select the service using your voice (" 声de入力 (Voice input)").
*2: A portion of these menus are charged services.

Positioning Present Location



The first positioning result is indicated by ★.
After that, your present location will be shown as [icon] in real-time by continuous positioning.

3D Navi

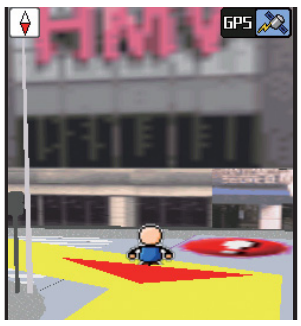

The display is switched to the 3D image at the guidance point or a point near the destination.

Navigation engine by NAVITIME JAPAN
Map：昭文社／住友電工
3D data：ゼンリン／ジオ技術研究所
Z06A-2137

"Evacuate Navi" for information about escape routes and way home



Evacuate Area Map



Route Home Map

When map data prepared beforehand are stored in the INFOBAR 2, it is possible to use those data in order to find an escape route and the way home in the wider surroundings ("Evacuate Area Map"). *1 Furthermore, on the "Evacuate Navi" EZweb Site, you can choose two points, for example "from work to home", in order to create a "Route Home Map", which will advise you on the route to be followed. Various kinds of contents can be downloaded. *2

*1: As for itinerary indications towards your home, you should first store some GPS information about your home Aslocation in the au phone address book; this is required in order to set the target location.
*2: A fee is charged for some contents.

Map: Shobunsha Publications, Inc./Preparation: Asia Air Survey Co.,ltd.

Information

- As notifications appearing on the screen are standard, please do obey any orders given by police, firemen or local community officials.
- When using "Evacuate Navi", it may take some time before your exact location is acknowledged, among other depending on GPS satellite conditions.
- The layout and contents of the screens in this manual are examples and are subject to change.
- When you use each services of EZ Navi, packet communication fees is required. And, some services require additional information fees.

EZ Television (1Seg) (EZweb subscription required)

You can watch the Digital Terrestrial Broadcasting for Mobile Television Service "1Seg" with INFOBAR 2. (Broadcasting within Japan is only available.) In addition to the television programs, you can enjoy data broadcasting programs.

What You Can Do with EZ Television (1Seg)


Watching television programs/data broadcasting programs



Data Broadcast Operation display

[ﾃﾚﾋﾞ操作 (TV Operation)]

[ﾃﾞｰﾀ操作 (Data Broadcast Operation)]

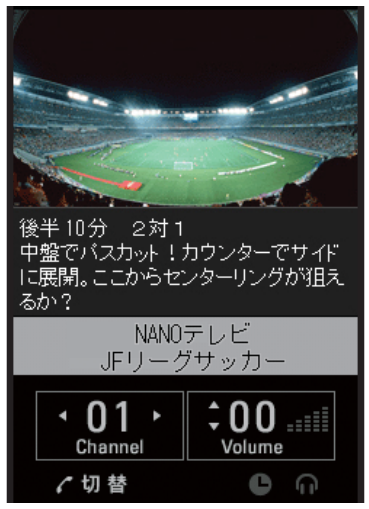


TV Operation display

[戻る(Back)]

[機能(Function)]

Recording programs/capturing programs as still images

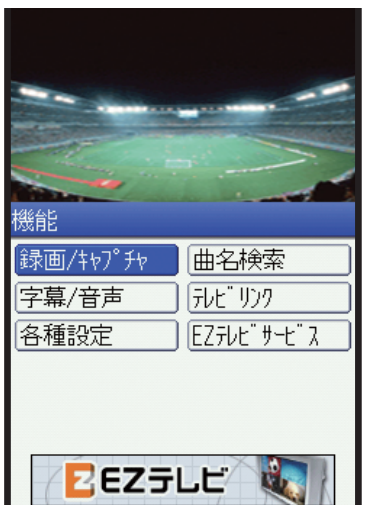

Use [key] to select "録画／キャプチャ (Record/Capture)" and press [key] [選択 (Select)].

Before Using EZ Television (1Seg)

- Perform initialization before using the service. If you have not performed initialization yet, refer to page 17.
- Any fee for packet or other transmission is not charged when watching EZ Television (1Seg). However, you are charged for packet communication if you access the services such as Program Information or Information Window.
- Any fee for packet or other transmission is not charged when watching data broadcasting programs. However, you are charged for packet communication if you use the interactive service provided on data broadcasting programs or access the information sites of EZweb.
- EZ Television (1Seg) is not available after you terminate the use of your INFOBAR 2.
- When the battery level is " ", EZ Television (1Seg) cannot be activated. If the battery level changes to " " during use of EZ Television (1Seg), EZ Television ends automatically.
- Deteriorated image, poor image or sound quality or reception failure may occur in mountainous areas, near buildings, in underpasses, in tunnels, or indoors because of poor TV reception. Try the following to improve the reception of the radio wave:
  - Connect SANYO Round-type Earphone Jack Conversion Adapter 03 into INFOBAR 2, Try to find best TV reception. (The wiring of Conversion Adapter works as antenna)
  - When you are indoors, take your INFOBAR 2 as close to a window as possible.
- For details about 1Seg, see the web sites below.


  The Association for Promotion of Digital Broadcasting
  http://www.dpa.or.jp/ (For PC)
  http://www.dpa.or.jp/1seg/k/ (For Cellphones)
- The layout and contents of the screens in this manual are subject to change. Screen images are examples.

Watching EZ Television (1Seg)

When you use EZ Television (1Seg) for the first time, make the necessary settings as follows.

1

Press while the standby screen is displayed. Use to select "TV/Radio" and press [Select].

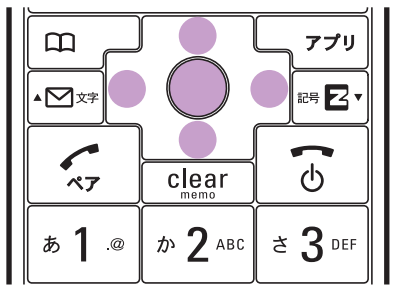





2

Use to select "EZ Television" and press [Select].
Use to select "EZ TV(1Seg)" and press [Select].

Precautions screen appears.

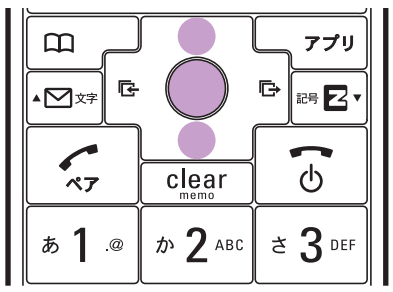


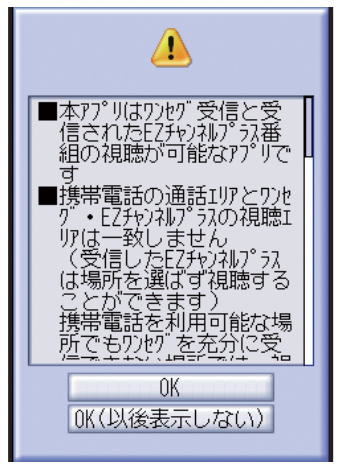


3

Use to confirm precautions.
Use to select "OK" and press [選択 (Select)].

The initial setting screen for EZ Television (1Seg) appears. Follow the on-screen instructions for each setting, and the screen to set channels appears.

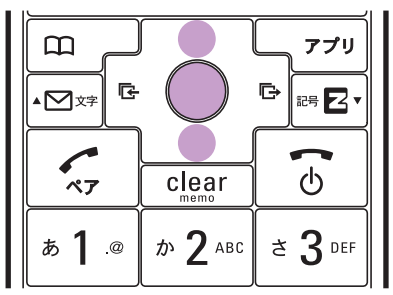

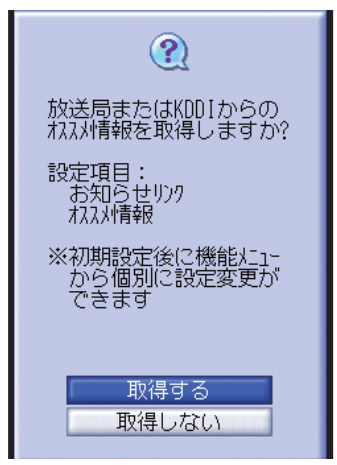



●If you select "OK (以後表示しない(No further indication))", the precaution screen does not appear any more.

4

Use to select "オート設定 (Auto-setting)" and press [選択 (Select)].

●Select " マニュアル設定 (Set manually)" to set the area manually.

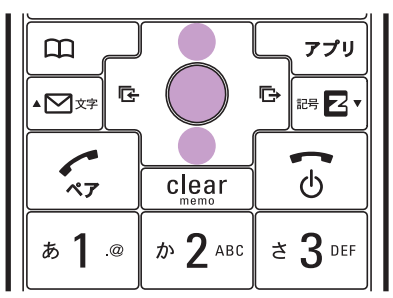


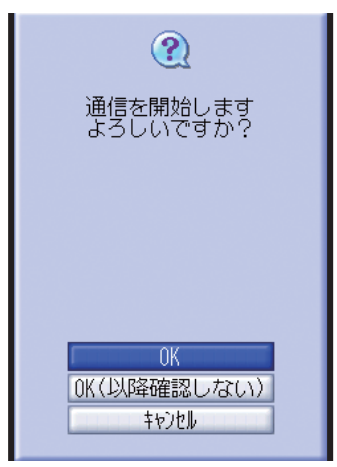

5

Use [ ] to select "OK".
Press [ ] [選択 (Select)] and press [ ] [選択 (Select)].

The data reception area and channels are automatically set and one of the broadcast programs appears on the screen.

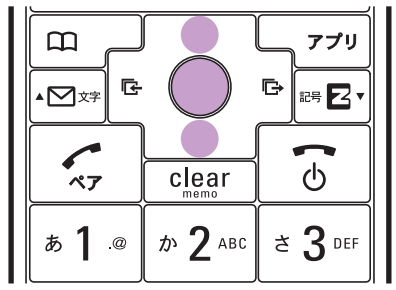



- If you select "OK (以降確認しない (No further confirmation))", a confirmation screen for data communication does not appear any more.
- In regions where the Digital Terrestrial Broadcasting for Mobile Television Service "1Seg" is only recently available for portable devices the channel setup may sometimes show some difficulties.

Information

- When starting up EZ Television (1Seg), a characteristic of Digital Broadcasts in which it can take some time to receive images, and especially Data Broadcast data, may appear.
- After starting up EZ Television (1Seg) the first time, the channel last selected during the previous use will be displayed. If you have moved to a different area or are in an area with poor reception, you will need to reset the channel(s).


●To Switch イヤホン (Earphone) and スピーカー (Speaker)

This setting is set to "オート (Auto)" (switch sound output automatically to either the earphones or speaker depending upon whether earphones are attached or not) at the time of purchase.

Ending EZ Television (1Seg)

1

Press [ ] .
Use [ ] to select "Exit" and press [ ] [OK].

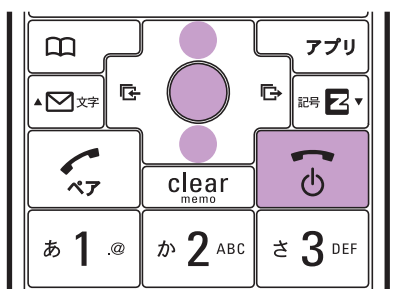


Remote Ctrl Lock

In Case You Lose Your INFOBAR 2

The Remote Ctrl Lock function enables you to turn ON the Auto Lock, FeliCa Lock and Address Book Restriction functions through remote operation so that no one else can use your INFOBAR 2.

●Setting Remote Ctrl Lock Activation Conditions

The Auto Lock, FeliCa Lock and Address Book Restriction functions are activated when your INFOBAR 2 receives the specified number of calls from the registered phone number within the specified period of time.

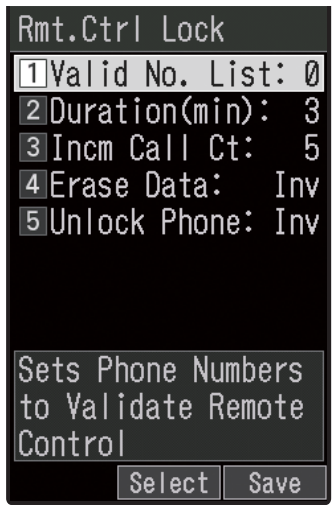

①Press 4 1 3 while the standby screen is displayed.

②Use to select "ON" and press [Set].

Enter your Lock No. and press [OK].

* Lock No. is set to "1234" at the time of purchase.

③Use to select "Valid No. List" and press [Select].

Use to select "Register New" and press [Select].

④Use to select "Direct Entry" and press [OK].

Enter a phone number and press [OK].

* You can also select "Use Address Book" to enter a phone number.Up to 3 phone numbers can be registered.

⑤Press [Comp].

⑥Use to select "Duration(min)" and press [Select].

Enter Duration and press [Set].

* Duration(min) : Sets the time limit to receive the specified number of incoming calls. The time can be set between 1 and 10 minutes.

⑦Use to select "Incm Call Ct" and press [Select].

Enter Incoming Call Count and press [Set].

* Incm Call Ct : Sets the number of incoming calls required for activating Remote Auto Lock. The count can be set between 3 and 10 times.

⑧Press [Save].

Remotely Activating the Auto Lock, FeliCa Lock and Address Book Restriction Functions on the INFOBAR 2

1 **Call your INFOBAR 2 in the conditions set for Remote Ctrl Lock.**

Remote Ctrl Lock is activated and an announcement to that effect will be played once the specified number of calls is received from the registered phone number within the specified period of time.

Activating the Lock through the Security Lock Service

Even if you have not set the Remote Ctrl Lock in advance, the Security Lock Service gives you the ability to turn ON the Auto Lock, FeliCa Lock and Address Book Restriction functions remotely by calling the au Customer Center or performing a specified procedure from a PC. This service is available free of charge.

Turning Remote Ctrl Lock ON/OFF by calling the au Customer Center

From au cellphones: 113 area code not required (Toll-Free)
From cellphones except au, or regular phones: 0077-7-113 (Toll-Free)
(Hours: 24 hours a day)

* Follow the voice guidance instructions.

Turning Remote Ctrl Lock ON/OFF using a PC

Login to MyKDDI (http://my.kddi.com/) and perform the procedure indicated on-screen.

* It is necessary to apply for this service before using it for the first time.
(Application is possible even after you may have lost your phone.)

Information

- Remote Ctrl Lock cannot be activated if your INFOBAR 2 is not powered on or under an area with bad reception, or Emission OFF is set to "Valid".
- "Erase Data" and "Unlock Phone" are both set to "Invalid" at the time of purchase.

Other Features

INFOBAR 2 is provided with other useful features.

Global Expert

The INFOBAR 2 supports Global Expert function using au IC card.
Global Expert is an international roaming service that allows you to connect to the world by simply inserting your au IC card into a GSM mobile phone for overseas use. No special application or daily/monthly charges are needed.
Charges for overseas calls are billed together with monthly domestic calling charges.

au one My Page

This service saves the data that is on your INFOBAR 2, enabling you to backup the contents of your address book, your E-mail, and your Data folder.

EZ FeliCa

Just by passing the INFOBAR 2 over a reader/writer (external devices), you can perform shopping using credit card or electronic money; this way, you can also obtain information about Members' Cards, Point Cards and Coupons.

Decoration Mail

You can create or send e-mails decorated with various font colors, character sizes and flashing characters; you can also insert images and so on.

PC Site Viewer

This feature enables you to view Internet Web Sites created for display on PCs.

au Music Port

Music data downloaded from au Music Port or purchased at LISMO Music Store can be transferred to your INFOBAR 2. You can also edit the address book or schedule in your INFOBAR 2, or keep and manage the photo or movie data in your PC, which were shot with your INFOBAR 2.

EZ・FM

You can listen to FM radio with your INFOBAR 2 by "EZ・FM". Moreover, you can check name of the song, search Chaku-Uta® and download it while listening FM program.

Troubleshooting

Symptom	Item to Check	Solution	Page
Cannot turn the power ON.	Did you press [power key] for more than one second?	Press [power key] for more than one second.	12
	Is the battery pack exhausted?	Charge the battery pack.	11
	Is the battery pack inserted properly?	Insert the battery pack properly.	—
Cannot charge.	Is the cellphone set to the desktop holder properly?	Set the cellphone properly.	11
	Is the connector put in the desktop holder properly?	Put the connector properly.	11
	Is the connector put in the external terminal properly?	Put the connector properly.	11
Keys do not respond.	Is the power turned ON?	Turn the power ON.	12
Calls cannot be made/ received.	Is the power turned ON?	Turn the power ON.	12
	Is "Out" displayed or are you in an area where the reception is bad?	Move to a place where the reception is good.	12
	Did you enter tthe area code? (when you cannot make calls)	First dial the area code.	20
Ringer for incoming calls received.	Is the ringer volume set to "OFF"?	Adjust the ringer volume.	25
	Is the Manner Mode set?	Turn Manner Mode OFF.	27
The caller's voice cannot be heard/is hard to hear.	Is the earpiece volume set to low?	Adjust the earpiece volume.	22
	Is the reception bad?	Move to a place where the reception is good.	12
Calls are interrupted.	Is the reception bad?	Move to a place where the reception is good.	12
The cellphone answers automatically.	Is Answer Phone set?	Turn Answer Phone OFF.	23

For further inquiries, check and confirm the website of au or customer support below.

- From INFOBAR 2 : "au one Top" → "auお客さまサポート（au Customer Support）"→ "調べる（Information）" → "オンラインマニュアル（Online Manual）" → "故障診断Q&A（Malfunction Diagnosis Q&A）".
- From PC : http://www.au.kddi.com/au_design_project/index.html

Index

A

B

C

D

E

I

J

L

M

N

O

P

R

S

T

V

au by KDDI CDMA 1X WIN

For inquiries,call:

au Customer Service Center

From EZweb:

How to access

au one Top

▶ auお客さまサポート(au Customer Support)

▶ お問い合わせ(Inquiry)

*Menu is subject to change without prior notice.

■For general information and charges

From regular phones:

フリーコール 0077-7-111 (Toll free)

From au cellphones:

157 area code not required (Toll free)

■For loss, theft or damage and operation information

From regular phones:

フリーコール 0077-7-113 (Toll free)

From au cellphones:

113 area code not required (Toll free)

Pressing "zero" will connect you to an operator, after calling "157" on your au cellphone.

モバイル・リサイクル・ネットワーク

携帯電話 PHSのリサイクルにご協力を。

Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

Access the au online manual from here.

Sales : KDDI CORPORATION • OKINAWA CELLULAR TELEPHONE COMPANY

Manufactured by : SANYO Electric Co., Ltd.

October 2007 Edition